

# EX-TR70/TR72 BEST SHOT Scene Settings

The list below explains the settings that are applied for the Best Shot sample scene that are built-into the camera.

## < BEST SHOT mode >

Scene No.	TITLE	Commentary	Recording Mode	Exposure Mode	Brightness	White Balance	ISO	Metering	Filter	Sharpness	Saturation	Lighting	Contrast	Focus Mode	AF Area	Face Detection	Make-UP	Landscape	Single SR
1	Motion Shutter	Making a hand motion towards the camera starts the timer for easier self-shooting.	Setting at still snapshots Setting at movie	Program AE	0	Auto	Auto	Multi	Off	0	0	On	0	Auto Focus	Spot	On	*1	-	On
				Cannot be used for movies.															
2	Make-up BKT	Shoots 3 images with different skin tone settings.	Setting at still snapshots Setting at movie	Program AE	0	Auto	Auto	Multi	Off	0	0	On	0	Auto Focus	Spot	On	*1	-	On
				Cannot be used for movies.															
3	HS Night Scene	Beautiful night scenes even when holding the camera by hand.	Setting at CS (still snapshots) Setting at movie	Program AE	0	Auto	Auto	Multi	Off	0	0	-	0	Auto Focus	Spot	Off	-	-	-
				↑	↑	↑	↑	↑	↑	↑	↑	↑	↑	↑*2	-	-	↑	↑	↑
4	HS Night Scene Portrait	Beautiful night scenes and portraits with little blurring, even when the camera is hand-held.	Setting at CS (still snapshots) Setting at movie	Program AE	0	Auto	Auto	Multi	Off	0	0	On	0	Auto Focus	Spot	On	*1	-	-
				↑	↑	↑	↑	↑	↑	↑	↑	↑	↑	↑*2	-	-	↑	↑	↑
5	Food	Macro Mode High saturation	Setting at still snapshots Setting at movie	Program AE	+0.3	Auto	Auto	Multi	Off	0	+1	On	0	Macro	Spot	Off	-	-	On
				↑	↑	↑	↑	↑	↑	↑	↑	↑	↑	↑*2	-	-	↑	↑	↑
6	Nails	Macro Mode High saturation	Setting at still snapshots Setting at movie	Program AE	+0.3	Auto	Auto	Multi	Off	0	0	-	0	Macro	Spot	Off	-	-	On
				↑	↑	↑	↑	↑	↑	↑	↑	↑	↑	↑*2	-	-	↑	↑	↑
7	HDR	Combines multiple images for optimum exposure, even when subjects are of different brightness.	Setting at CS (still snapshots) Setting at movie	Program AE	0	Auto	Auto	Multi	Off	0	0	-	0	Auto Focus	Spot	Off	-	-	-
				Cannot be used for movies.															
8	Triple Shot	Shoots a series of three images from before and after the shutter button press.	Setting at CS (still snapshots) Setting at movie	Program AE	0	Auto	Auto	Multi	Off	0	0	On	0	Auto Focus	Spot	On	*1	-	-
				Cannot be used for movies.															

\*1 Initial factory default settings are +3 brightness for "Skin Tone" and +6 for ""Smooth

\*2 Pan focus is used whenever the focus mode is AF, PF, or infinity

While Macro is selected as the focus mode, half-press the shutter button to focus, and then touch the movie icon.

The focus position will remain fixed where it was set when you half-pressed the shutter button.