

Model **LK-50** **MIDI Implementation Chart** Version: 1.0


Function ...	Transmitted	Recognized	Remarks
Basic Channel Default Changed	1-16*1 1-16	1-16 1-16	*1Hold in memory as long as the power is supplied
Mode Default Messages Altered	Mode 3 X *****	Mode 3 X *****	
Note Number: True voice	36 - 96 *****	0-127 12 - 108*2	*2See Note Table on page A-1.
Velocity Note ON Note OFF	0 9nH v = 1-127 X 9nH v = 0	0 9nH v = 1-127 X 9nH v = 0, 8nH v = XX	XX = no relation
After Touch Key's Ch's	X X	X O*3	
Pitch Bender	X	O	
Control Change 1 6,38 7 10 11 64 66 67	X O*4 X X X O*5 O*5 O*5	O*3 O*4 O O O O O O	Modulation Data entry Volume Pan Expression Hold1 Sostenuto Soft pedal
100, 101 120 121	O*4 X X	O*4 O O	RPN LSB, MSB All sound off Reset all controller

<p>67</p> <p><input type="radio"/> *5</p>	<p><input type="radio"/> *5</p>	<p><input type="radio"/> *4</p> <p>X</p> <p>X</p>	<p>RPN LSB, MSB All sound off Reset all controller</p>	<p>Soft pedal</p>
<p>100, 101 120 121</p>	<p><input type="radio"/> *4</p> <p>X</p> <p>X</p>	<p><input type="radio"/> *4</p> <p>X</p> <p>X</p> <p>X</p>	<p><input type="radio"/> *4</p> <p>X</p> <p>X</p> <p>X</p>	<p><input type="radio"/> *4</p> <p>X</p> <p>X</p> <p>X</p>
<p>Program Change:</p> <p>True #</p>	<p><input type="radio"/> 0-127</p> <p>*****</p>	<p><input type="radio"/> 0-127</p> <p>*****</p>	<p><input type="radio"/> 0-127</p> <p>*****</p>	<p><input type="radio"/> 0-127</p> <p>*****</p>
<p>System Exclusive</p>	<p><input type="radio"/> *6</p>	<p><input type="radio"/> *6</p>	<p><input type="radio"/> *6</p>	<p><input type="radio"/> *6</p>
<p>System Common</p> <p>: Song Pos</p> <p>: Song Sel</p> <p>: Tune</p>	<p>X</p> <p>X</p> <p>X</p>	<p>X</p> <p>X</p> <p>X</p>	<p>X</p> <p>X</p> <p>X</p>	<p>X</p> <p>X</p> <p>X</p>
<p>System Real Time</p> <p>: Clock</p> <p>: Commands</p>	<p><input type="radio"/></p> <p><input type="radio"/></p>	<p><input type="radio"/></p> <p><input type="radio"/></p>	<p><input type="radio"/></p> <p><input type="radio"/></p>	<p><input type="radio"/></p> <p><input type="radio"/></p>
<p>Aux Messages</p> <p>: Local ON/OFF</p> <p>: All notes OFF</p> <p>: Active Sense</p> <p>: Reset</p>	<p>X</p> <p>X</p> <p>X</p> <p>X</p>	<p>X</p> <p><input type="radio"/></p> <p><input type="radio"/></p> <p><input type="radio"/></p> <p>X</p>	<p>X</p> <p><input type="radio"/></p> <p><input type="radio"/></p> <p><input type="radio"/></p> <p>X</p>	<p>X</p> <p><input type="radio"/></p> <p><input type="radio"/></p> <p><input type="radio"/></p> <p>X</p>
<p>Remarks</p>	<p>*3 Modulation and after touch for each channel are the same effect. *4 FINE TUNE, COARSE TUNE send/receive, and PITCH BEND SENSE, RPN Null receive *5 In accordance with assignable jack setting *6 GM on/off GM ON : [F0] [7E] [7F] [09] [01] [F7] GM OFF : [F0] [7E] [7F] [09] [02] [F7]</p>			

Mode 1 : OMNI ON, POLY
 Mode 3 : OMNI OFF, POLY

Mode 2 : OMNI ON, MONO
 Mode 4 : OMNI OFF, MONO

 O : Yes
 X : No





Die Recycling-Marke zeigt an, dass die Verpackung den
Umweltschutzbestimmungen in Deutschland entspricht.

CASIO®

CASIO COMPUTER CO.,LTD.
6-2, Hon-machi 1-chome
Shibuya-ku, Tokyo 151-8543, Japan

MA0004-B  Printed in Malaysia
LK50-G-1

P