

Functions Added by Firmware Update

Updating the EX-S1/EX-M1 firmware to Version 1.10 or greater adds certain functions to your camera. Note that the User's Guide that comes with the camera does not cover these functions.

Turning Image Review On and Off

Image review displays an image on the monitor screen as soon as you record it. Use the following procedure to turn image review on and off.

1. In the REC mode, press MENU.
2. Select the "REC" tab, select "Review", and then rock the controller to the right.
3. Rock the controller up or down to select the setting you want, and then click.

To do this:

Select this setting:

Display images on the monitor screen immediately after they are recorded

On

Do not display images immediately after they are recorded

Off

NOTE

The initial default setting is "Off".

Ability to turn off Controller Function Assignment

Under its current configuration, you can assign one of four functions (REC Mode, EV shift, Flash Mode, White Balance Mode) to the controller rock left or rock right operations. After installing this update, you have the option of turning off the controller function assignment.

1. In the REC mode, press MENU.
2. Select the "REC" tab, select "L/R Key", and then rock the controller to the right.
3. Rock the controller up or down to select "Off", and then click.
When "Off" is selected, the controller does not perform any of the four assignable functions.

Monitor Screen On/Off Setting Memory

When you turn off the camera, it remembers whether you have the monitor screen turned on or off. The monitor screen on/off setting is restored the next time you turn on power.