

EX-S20U/EX-M20U User Documentation Files

- The EX-S20U/EX-M20U user documentation available here has been divided among a number of files in order to facilitate downloading. You can download the entire manual, or you can save time by using the table of contents below to find specific information and then download only the files you need.

File 1 (File name : exs20u_m20u_e_1.pdf)

2 INTRODUCTION

Unpacking	2
Features	9
Precautions	11
General Precautions	11
Data Error Precautions	13
Operating conditions	13
Condensation	14
Lens	14
Other	15

16 QUICK START GUIDE

First, charge the battery!	16
To configure display language and clock settings	17
To record an image	18
To view a recorded image	18
To delete an image	19

20 GETTING READY

About This Manual	20
General Guide	21
Camera	21
USB Cradle	22
Monitor Screen Contents	23
REC mode	23
PLAY mode	24
Changing the Contents of the Monitor Screen	25
Indicator Lamps	25
Attaching the Strap	26
Power Requirements	26
To load the battery	26
To charge the battery	28
Power Supply Precautions	32
Turning the Camera On and Off	35
Auto Power Off (APO)	36
Using the On-screen Menus	37
Configuring Display Language and Clock Settings	39
To configure display language and clock settings	40

43 BASIC IMAGE RECORDING

Recording an Image	43
Aiming the Camera	43
Recording an Image	44
About the REC Mode Monitor Screen	45
Recording Precautions	45
Using Zoom	46
Using the Flash	47
Flash Precautions	49
Recording Macro Images	50
Using the Self-timer	51
Specifying Image Size and Quality	52
To specify the image size	52
To specify image quality	53

File 2 (File name : exs20u_m20u_e_2.pdf)

55 OTHER RECORDING FUNCTIONS

Exposure Compensation (EV Shift)	55
Adjusting White Balance	56
Adjusting White Balance Manually	57
Using the BESTSHOT Mode	58
Creating Your Own BESTSHOT Setup	60
Combining Shots of Two People into a Single Image (Coupling Shot)	62
Recording a Subject onto an Existing Background Image (Pre-shot)	64
Recording Audio (EX-M20U Only)	66
Adding Audio to a Snapshot	66
Recording Your Voice	67
Using the Histogram	69
REC Mode Camera Settings	70
Specifying ISO Sensitivity	70
Turning the On-screen Grid On and Off	71
Turning Image Review On and Off	72
Assigning Functions to the [◀] and [▶] Keys	72
Assigning Functions to the [▲] and [▼] Keys	73
Specifying Power On Default Settings	74
Resetting the Camera	75

File 3 (File name : exs20u_m20u_e_3.pdf)

76 PLAYBACK

Basic Playback Operation	76
Playing an Audio Snapshot (EX-M20U Only)	77
Flipping the Display	78
Zooming the Display Image	79
Resizing an Image	80
Cropping an Image	81
Displaying the Calendar Screen	82
Playing a Slide Show	83
To specify the slideshow images	85
To specify the slideshow time	86
To set the slideshow interval	86
Using the Photo Stand Feature	87
Rotating the Display Image	88
Using Image Roulette	89
Adding Audio to a Snapshot (EX-M20U Only)	90
To re-record audio	91
Playing Back a Voice Recording File (EX-M20U Only)	92

93 DELETING FILES

Deleting a Single File	93
Deleting All Files	94

File 4 (File name : exs20u_m20u_e_4.pdf)

95 FILE MANAGEMENT

- Folders 95
 - Memory Folders and Files 95
- Protecting Files 96
 - To protect a single file 96
 - To protect all files in memory 97
- DPOF 97
 - To configure print settings for a single image 98
 - To configure print settings for all images 99
- PRINT Image Matching II 100
- Exif Print 100
- Using USB DIRECT-PRINT 101
- Using the FAVORITE Folder 103
 - To copy a file to the FAVORITE folder 103
 - To display a file in the FAVORITE folder 104
 - To delete a file from the FAVORITE folder 105
 - To delete all files from the FAVORITE folder 106

107 OTHER SETTINGS

- Turning the Key Tone On and Off (EX-S20U) 107
- Configuring Sound Settings (EX-M20U) 107
 - To configure sound settings 107
 - To set the volume level 108
- Specifying an Image for the Startup Screen 109
- Configuring Power Down Image Settings 110
- Specifying the File Name Serial Number Generation Method 112
- Using the Alarm 113
 - To set an alarm 113
 - Stopping the Alarm 114
- Setting the Clock 114
 - To select your Home Time zone 114
 - To set the current time and date 115
 - Changing the Date Format 116
- Using World Time 116
 - To display the World Time screen 116
 - To configure World Time settings 117
 - To configure summer time (DST) settings 118
- Changing the Display Language 119
- Formatting Built-in Memory 119

121 USING A MEMORY CARD

- Using a Memory Card 122
 - To insert a memory card into the camera 122
 - To remove a memory card from the camera 122
 - Formatting a Memory Card 123
 - Memory Card Precautions 124
- Copying Files 125
 - To copy all the files in built-in memory to a memory card 125
 - To copy a file from a memory card to built-in memory 126

File 5 (File name : exs20u_m20u_e_5.pdf)

127 VIEWING IMAGES ON A COMPUTER

- Using the Camera with a Windows Computer 127
 - USB Connection Precautions 131
- Using the Camera with a Macintosh Computer 132
 - USB Connection Precautions 135
- Operations You Can Perform from Your Computer . 135

- Using a Memory Card to Transfer Images to a Computer 136
- Memory Data 137
 - DCF Protocol 137
 - Memory Directory Structure 137
 - Image Files Supported by the Camera 139
 - Built-in Memory and Memory Card Precautions 139

140 USING THE CAMERA WITH A COMPUTER

- Using the Album Feature 140
 - Creating an album 140
 - Selecting an Album Layout 141
 - Configuring Detailed Album Settings 142
 - Viewing Album Files 144
 - Saving an Album 147
- Installing the Software from the CD-ROM 147
 - About the bundled CD-ROM 147
 - Computer System Requirements 148
- Installing Software from the CD-ROM in Windows ... 149
 - Getting Started 149
 - Viewing the Contents of the "Read me" File 150
 - Installing an Application 150
 - Viewing User Documentation (PDF Files) 151
 - User Registration 151
 - Exiting the Menu Application 151
- Installing Software from the CD-ROM on a Macintosh 152
 - Installing Software 152
 - Viewing User Documentation (PDF Files) 153

154 PLAYING AN AUDIO FILE (EX-M20U Only)

- Transferring Audio Files to the Camera 154
- Preparing the Camera for Audio Player Operation.. 155
- Using the Camera as an Audio Player 156
 - General Guide 156
 - Basic Remote Controller Operations 158
- Playing Back Audio Files 159
 - Specifying the Audio Playback Mode 159
 - Playing Back Tracks Randomly 159
 - Selecting a Specific Track for Playback 160
 - Specifying the Track Playback Sequence 161
 - Using BASS BOOST 163
- Deleting MP3 Files from File Memory 164
 - Deleting a Single MP3 File 165
 - Deleting All MP3 Files 166
- Disabling Remote Controller Button Operations 166
- LCD Remote Control Error Messages 167
- Audio Playback Precautions 167

168 APPENDIX

- Menu Reference 168
- Indicator Lamp Reference 170
 - Camera Indicator Lamps 170
 - USB Cradle Indicator Lamps 172
- Troubleshooting Guide 173
 - Display Messages 176
- Specifications 177
 - Main Specifications 177