

EX-Z3 User Documentation Files

- The EX-Z3 user documentation available here has been divided among a number of files in order to facilitate downloading. You can download the entire manual, or you can save time by using the table of contents below to find specific information and then download only the files you need.

File 1 (File name : exz3_e_1.pdf)

2 INTRODUCTION

Unpacking	2
Features	9
Precautions	11
General Precautions	11
Data Error Precautions	12
Operating conditions	13
Condensation	13
LED Backlight	14
Lens	14
Other	14

15 QUICK START GUIDE

First, charge the battery!	15
To configure display language and clock settings	16
To record an image	17
To view a recorded image	17
To delete an image	18

19 GETTING READY

About This Manual	19
General Guide	20
Camera	20
USB Cradle	21
Monitor Screen Contents	22
REC mode	22
PLAY mode	23
Changing the Contents of the Monitor Screen	24
Indicator Lamps	24
Attaching the Strap	25
Power Requirements	25
To load the battery	25
To remove the battery	27
To charge the battery	27
Power Supply Precautions	32
Turning the Camera On and Off	35
Configuring Power Saving Settings	36
Using the On-screen Menus	37
Configuring Display Language and Clock Settings ...	39
To configure display language and clock settings	40

43 BASIC IMAGE RECORDING

Recording an Image	43
Recording Precautions	45
About Auto Focus	46
About the REC Mode Monitor Screen	46
Using the Optical Viewfinder	47
Using Zoom	48
Optical Zoom	48
Digital Zoom	49
Using the Flash	50
Flash Unit Status	52
Flash Precautions	52

Using the Self-timer	53
Specifying Image Size and Quality	55
To specify the image size	55
To specify image quality	56

File 2 (File name : exz3_e_2.pdf)

57 OTHER RECORDING FUNCTIONS

Selecting the Focus Mode	57
Using Auto Focus	57
Using the Macro Mode	58
Using the Infinity Mode	59
Using Manual Focus	59
Using Focus Lock	60
Exposure Compensation (EV Shift)	61
Adjusting White Balance	63
Adjusting White Balance Manually	64
Using the Best Shot Mode	65
Creating Your Own Best Shot Setup	66
Combining Shots of Two People into a Single Image (Coupling Shot)	69
Recording a Subject onto an Existing Background Image (Pre-shot)	71
Using the Movie Mode	73
Using the Histogram	75
REC Mode Camera Settings	76
Specifying ISO Sensitivity	76
Turning Image Review On and Off	77
Assigning Functions to the [◀] and [▶] Keys	77
Specifying Power On Default Settings	78
Resetting the Camera	79

File 3 (File name : exz3_e_3.pdf)

80 PLAYBACK

Basic Playback Operation	80
Flipping the Display	81
Zooming the Display Image	82
Resizing an Image	83
Cropping an Image	84
Playing a Movie	85
Displaying the 9-image View	86
Selecting a Specific Image in the 9-image View	87
Displaying the Calendar Screen	87
Playing a Slide Show	88
To specify the slideshow images	90
To specify the slideshow time	91
To set the slideshow interval	91
Using the Photo Stand Feature	92
Rotating the Display Image	93

File 4 (File name : exz3_e_4.pdf)

94 DELETING FILES

Deleting a Single File 94
 Deleting All Files 95

96 FILE MANAGEMENT

Folders 96
 Memory Folders and Files 96
 Protecting Files 97
 To protect a single file 97
 To protect all files in memory 98
 DPOF 98
 To configure print settings for a single image 99
 To configure print settings for all images 100
 PRINT Image Matching II 101
 Exif Print 101
 Using USB DIRECT-PRINT 102
 Using the FAVORITE Folder 104
 To copy a file to the FAVORITE folder 104
 To display a file in the FAVORITE folder 105
 To delete a file from the FAVORITE folder 106

108 OTHER SETTINGS

Specifying the File Name Serial Number
 Generation Method 108
 Turning the Key Tone On and Off 109
 Specifying an Image for the Startup Screen 109
 Using the Alarm 110
 To set an alarm 110
 Stopping the Alarm 111
 Setting the Clock 112
 To select your Home Time zone 112
 To set the current time and date 113
 Changing the Date Format 113
 Using World Time 114
 To display the World Time screen 114
 To configure World Time settings 114
 To configure summer time (DST) settings 115
 Changing the Display Language 116
 Formatting Built-in Memory 117

File 5 (File name : exz3_e_5.pdf)

118 USING A MEMORY CARD

Using a Memory Card 119
 To insert a memory card into the camera 119
 To remove a memory card from the camera 119
 Formatting a Memory Card 120
 Memory Card Precautions 121
 Copying Files 122
 To copy all the files in built-in memory
 to a memory card 122
 To copy a file from a memory card to built-in memory 123

124 VIEWING IMAGES ON A COMPUTER

Using the Camera with a Windows Computer 124
 USB Connection Precautions 129
 Using the Camera with a Macintosh Computer 129
 USB Connection Precautions 134
 Operations You Can Perform from Your Computer .. 134
 Using a Memory Card to Transfer Images
 to a Computer 135
 Memory Data 136
 DCF Protocol 136
 Memory Directory Structure 136
 Image Files Supported by the Camera 137
 Built-in Memory and Memory Card Precautions 138

139 USING THE CAMERA WITH A COMPUTER

Using the Album Feature 139
 Creating an album 139
 Selecting an Album Layout 140
 Configuring Detailed Album Settings 141
 Viewing Album Files 143
 Saving an Album 146
 Installing the Software from the CD-ROM 146
 About the bundled CD-ROM 146
 Computer System Requirements 147
 Installing Software from the CD-ROM in Windows ... 148
 Getting Started 148
 Selecting a Language 148
 Viewing the Contents of the "Read me" File 149
 Installing an Application 149
 Viewing User Documentation (PDF Files) 150
 User Registration 150
 Exiting the Menu Application 150
 Installing Software from the CD-ROM
 on a Macintosh 151
 Installing Software 151
 Viewing User Documentation (PDF Files) 152

154 APPENDIX

Menu Reference 154
 Indicator Lamp Reference 156
 REC mode 157
 PLAY mode 158
 USB Cradle Indicator Lamps 158
 Troubleshooting Guide 159
 Display Messages 162
 Specifications 163
 Main Specifications 163