

GV-20 User Documentation Files

- The GV-20 user documentation available here has been divided among a number of files in order to facilitate downloading. You can download the entire manual, or you can save time by using the table of contents below to find specific information and then download only the files you need.

File 1 (File name : gv20_e_1.pdf)

2 INTRODUCTION

Unpacking	2
Quick Reference	6
Getting Ready	6
Recording an Image	7
Playback	8
Deleting Images	9
Features	11
Water Resistance and Dust Resistance	12
Operating Environment	13
Operating Precautions	13
Wipe the camera dry after it becomes wet.	14
Location Precautions	14
General Precautions	15
Inspecting the Cover O-rings	16
If you find dirt on an O-ring... ..	16
Before putting your camera away after using it...	17
Precautions	18
General Precautions	18
Data Error Precautions	19
Operating conditions	19
Condensation	20
About the camera's backlight... ..	20
Lens Precautions	20

22 GETTING ACQUAINTED

General Guide	22
Front	22
Back	23
Terminals and Ports	24
Bottom	24
Monitor Screen Indicators	25
Changing the Contents of the Monitor Screen ..	27
Indicator Lamps	27
Using the Bundled Accessories	28
Attaching the Strap	28
Attaching the Lens Cap	29
Power Requirements	30
Loading Batteries	30
Battery Handling Precautions	34
Low Battery Indicator	34
Using AC Power	35
Turning the Camera On and Off	37
Power Save Settings	37
Memory Cards	38
Inserting a Memory Card into the Camera ..	38
Removing a Memory Card from the Camera ..	39
Formatting a Memory Card	41
Memory Card Precautions	42
Setting the Current Date and Time	42
Setting the Date and Time	43
Selecting the Date Format	44

File 2 (File name : gv20_e_2.pdf)

45 RECORDING IMAGES

Recording a Simple Snapshot	45
About the REC Mode Monitor Screen	46
Recording Precautions	46
Image Recording when Batteries are Low	47
Using Zoom	47
Using the Flash	48
Flash Status Indicators	49
Precautions when Using Flash	49
Recording Macro Images	50
Using the Optical Viewfinder	51
Recording Consecutive Images (Continuous Shutter Mode)	52
Recording with the self-timer	53
Recording an Image Using a Best Shot Mode Scene	53
Recording a Movie (Movie Mode)	55
Specifying Image Size and Quality	56
Exposure Compensation	57
Selecting White Balance	58

61 PLAYBACK

Basic Playback Operation	60
Playing a Movie	61
Enlarging the Playback Image	61
Displaying the 9-image View	62
Selecting a Specific Image in the 9-image View ..	63

65 DELETING IMAGES

Deleting the Displayed Image	64
Deleting All Images	65

67 MANAGING IMAGES

Folders and Files	66
Folders	66
Files	66
DPOF	67
To configure printing for a particular image ..	67
To print all images	68
PRINT Image Matching	69

71 OTHER SETTINGS

Changing the Display Language	70
Turning the Confirmation Beep On and Off	70
Specifying the Opening Screen	71
Selecting the USB Mode	71

73 CONNECTING TO EXTERNAL EQUIPMENT

Transferring Images to a Computer 73
 USB Connection 73
 To connect to a computer 73
 Disconnecting the USB Cable 75
Using a Memory Card to Transfer Image Data 75
 Memory Card Data 76
 DCF Protocol 76
 Memory Card File Structure 77
 Image Files Supported by the Camera 77
 Precautions when Using a Memory Card on a
 Computer 77
Using the Camera as a PC Camera 78
 To connect to a computer 78
 Other Requirements 79
 PC Camera Mode Precautions 80

82 REFERENCE

SET UP Menu 81
Troubleshooting 82
 Messages 85
Specifications 87