

QV-3500EX User Documentation Files

- The QV-3500EX user documentation available here has been divided among a number of files in order to facilitate downloading. You can download the entire manual, or you can save time by using the table of contents below to find specific information and then download only the files you need.

File 1 (File name : qv3500EX_e_1.pdf)

E-2 INTRODUCTION

Unpacking	E-2
Contents	E-3
Quick Reference	E-7
Getting Ready	E-7
Recording an Image	E-8
Playback	E-9
Deleting Images	E-10
Features	E-12
Recording Features	E-13
Precautions	E-15
General Precautions	E-15
Operating conditions	E-16
Condensation	E-16
About the camera's backlight...	E-17

E-18 GETTING ACQUAINTED

General Guide	E-18
Front	E-18
Back	E-19
Side	E-20
Bottom	E-20
Lens	E-21
Installing a Conversion Lens or Close-up Lens	E-21
Using a Filter	E-23
Lens Precautions	E-24
Monitor Screen Indicators	E-25
REC mode	E-25
PLAY mode	E-26
Changing the Contents of the Monitor Screen	E-27
Indicator display	E-28
Operation Indicator Lamp	E-28
Operation lamp	E-28
Flash lamp	E-29
Self-timer lamp	E-29
Using the Bundled Accessories	E-30
Using the Lens Cap	E-30
Attaching the Neck Strap	E-30
Adjusting the Length of the Neck Strap	E-31
Using the Soft Case	E-31
Power Requirements	E-32
Loading Batteries	E-32
Battery Handling Precautions	E-35
Low Battery Indicator	E-35
Using AC Power	E-36
Turning the Camera On and Off	E-37
Power Save Settings	E-37

Memory Cards	E-39
Inserting a Memory Card into the Camera	E-39
Removing a Memory Card from the Camera	E-40
Formatting a Memory Card	E-41
Memory Card Precautions	E-42
IBM Microdrive Precautions	E-42
Menu Screens	E-44
Setting the Current Date and Time	E-45
Setting the Date and Time	E-45
Selecting the Date Format	E-46
Time Stamp	E-47

File 2 (File name : qv3500EX_e_2.pdf)

E-48 BASIC IMAGE RECORDING

Recording a Simple Snapshot	E-48
About the REC Mode Monitor Screen	E-50
About Auto Focus	E-50
Recording Precautions	E-50
Image Recording when the Battery is Low	E-51
Camera Orientation Detection	E-51
Previewing the Last Image Recorded	E-52
Deleting the an Image in the REC Mode	E-53
Using the Viewfinder for Recording	E-53
Using Zoom	E-54
Using Optical Zoom	E-54
Using Digital Zoom	E-55
Using the Flash	E-56
Flash Status Indicators	E-57
Adjusting the Flash Intensity	E-57
Precautions when Using Flash	E-58
Selecting the Focus Mode	E-59
Using the Auto Focus Mode	E-59
Using the Macro Mode	E-60
Using the Infinity Mode	E-61
Using the Manual Focus Mode	E-61
Using Focus Lock	E-62
Specifying the Focus Frame Location	E-63
Specifying Image Size and Quality	E-64
Using the Self-timer	E-65
Exposure Compensation	E-66

E-68 OTHER RECORDING FUNCTIONS

Using the Continuous Shutter Mode	E-68
Shooting Portraits	E-69
Shooting Landscapes	E-69
Shooting Night Scenes	E-70
Instant Setup Using the Best Shot Mode	E-71

Specifying the Location of Best Shot Mode Scene Images	E-73
Registering Your Own Scene Setups	E-73
Importing a Scene from the Best Shot Library on the CD-ROM	E-74
Recording a Movie	E-76
To record a movie using the normal mode	E-77
To record a movie using the past mode	E-77
Shooting Panoramas	E-78
Specifying the Exposure Mode	E-79
Program AE	E-79
Aperture Priority AE	E-80
Shutter Speed Priority AE	E-81
Manual Exposure	E-83
Quick Exposure Mode Selection	E-84
Selecting the Metering Mode	E-85
Quick Metering Mode Selection	E-86
Setting the Sensitivity Level	E-86
Using the Filter Function	E-87
Selecting White Balance	E-88
Adjusting White Balance Manually	E-88
Quick White Balance Selection	E-89
Enhancing Certain Colors	E-90
Turning the On-screen Grid On and Off	E-91
Specifying Outline Sharpness	E-92
Specifying Color Saturation	E-92
Specifying Contrast	E-93
Saving Uncompressed Images (TIFF Mode)	E-93
Specifying Power On Default Settings	E-94
Resetting the Camera	E-95
Using the Camera's Shortcut Features	E-96
Changing REC mode FUNCTION Menu Settings	
Using the Shortcut Buttons	E-96
To assign REC mode FUNCTION menu items to shortcut buttons	E-97
Directly Accessing the REC mode FUNCTION Menu	E-99

File 3 (File name : qv3500EX_e_3.pdf)

E-100 PLAYBACK

Basic Playback Operation	E-100
Playing a Movie	E-101
Playing a Panorama	E-102
Enlarging the Playback Image	E-103
Displaying the 9-image View	E-104
Selecting a Specific Image in the 9-image View	E-105
Displaying the Histogram	E-106
Using the Slide Show Feature	E-107
Resizing an Image	E-108
Cropping an Image	E-109

E-110 DELETING IMAGES

Deleting the Displayed Image	E-110
Deleting Selected Images	E-111

Deleting All Images in Selected Folders	E-112
Deleting All Unprotected Images	E-113

E-114 MANAGING IMAGES

Folders and Files	E-114
Folders	E-114
Files	E-115
Selecting a Folder for Playback	E-116
Protecting Images Against Deletion	E-116
Protecting Selected Images	E-116
Protecting and Unprotecting All Images in Selected Folders	E-117
Protecting and Unprotecting All Images	E-118
DPOF	E-119
Making DPOF Settings for Particular Images	E-119
Making DPOF Settings for Particular Folders	E-120
Making DPOF Settings of All Images on the Memory Card	E-121

E-122 OTHER SETTINGS

Changing the Display Language	E-122
Turning the Confirmation Beep On and Off	E-122

E-123 CONNECTING TO EXTERNAL EQUIPMENT

Connecting to a Television	E-124
Selecting the Video Output Signal Mode	E-125
Connecting the Wired Remote Controller to the Camera	E-126
Connecting to a Computer	E-126
USB Port Connection (Windows, Macintosh)	E-127
Using a Serial Port Connection	E-128
Using a Memory Card to Transfer Image Data	E-129
Memory Card Data	E-130
DCF Protocol	E-130
Memory Card File Structure	E-131
Image Files Supported by the Camera	E-132
Precautions when Using a Memory Card on a Computer	E-133
Using the HTML Card Browser	E-134
Specifying the Card Browser Type	E-134
Viewing Card Browser File Contents	E-136
Saving Card Browser Files	E-139

E-140 REFERENCE

Camera Menus	E-140
REC mode	E-140
PLAY mode	E-141
Mode Settings	E-142
Settings in Each Mode	E-142
Recording Mode + Exposure Mode Combinations	E-143
Troubleshooting	E-144
Messages	E-147
Specifications	E-149