

QV-5700 User Documentation Files

- The QV-5700 user documentation available here has been divided among a number of files in order to facilitate downloading. You can download the entire manual, or you can save time by using the table of contents below to find specific information and then download only the files you need.

File 1 (File name : qv5700_e_1.pdf)

2 INTRODUCTION

Quick Reference	6
Getting Ready	6
Recording an Image	7
Viewing (Playing Back) an Image	8
Deleting an Image	9
Features	11
Recording Features	13
Precautions	14
General Precautions	14
Operating conditions	15
Condensation	15
Lens Precautions	16
About the camera's backlight...	16

17 GETTING ACQUAINTED

General Guide	17
Front	17
Back	18
Side	19
Bottom	19
Open Terminal Panel Cover	19
Mode Dials	20
Using the Control Button	21
Monitor Screen Indicators	22
REC mode	22
PLAY mode	23
Changing the Contents of the Monitor Screen	24
Indicator display	24
Operation Indicator Lamp	25
Operation/card access lamp	25
Flash Charge lamp	26
AF Assist Light/Self-timer Lamp	26
Using the Bundled Accessories	27
Attaching the Neck Strap	27
Adjusting the Length of the Neck Strap	27
Using the Lens Cap	28
Power Requirements	29
Loading Batteries	29
Battery Handling Precautions	32
Low Battery Indicator	33
Using AC Power	33
Turning the Camera On and Off	35
Power Save Settings	35
Memory Cards	37
Inserting a Memory Card into the Camera	37
Removing a Memory Card from the Camera	38
Formatting a Memory Card	39
Memory Card Precautions	40
IBM Microdrive Precautions	41
Menu Screens	42
Setting the Current Date and Time	43
Setting the Date and Time	43
Selecting the Date Format	44

45 BASIC IMAGE RECORDING

Using the Full Auto Mode	45
Recording Precautions	47
Focusing	47
About Auto Focus	48
Image Recording when the Batteries are Low	48
About the REC Mode Monitor Screen	49
Using Optical Zoom	49
Using the Viewfinder for Recording	51
Using the Self-timer	52
Camera Orientation Detection	53

File 2 (File name : qv5700_e_2.pdf)

54 OTHER RECORDING FUNCTIONS

Recording a Single Image (1-Image)	54
Previewing the Last Image Recorded	54
Deleting the Last Image Recorded in the REC Mode	55
Using the Flash	55
Selecting the Flash Mode	55
Flash Status Indicators	56
Adjusting the Flash Intensity	57
Changing the Sync Speed	57
Selecting a Flash Sync Setting	58
Precautions when Using Flash	60
Selecting the Focus Mode	61
Using Auto Focus (Multi-area Auto Focus)	62
Using the Spot Auto Focus Mode	63
Using the Manual Focus Mode	64
Using the Infinity Mode	65
Using the Macro Mode	65
Using Focus Lock	66
Expanding the Focus Area	67
Camera Shake Indicator	67
Selecting the Metering Mode	68
Selecting White Balance	69
Adjusting White Balance Manually	70
Using AE Lock	71
Exposure Compensation	72
Using the Histogram	74
Using Digital Zoom	75
Instant Setup Using the Best Shot Mode	76
Copying a Scene from the CD-ROM Best Shot Library	77
Registering Your Own Best Shot Scenes	80
Specifying the Location of Best Shot Mode Scenes	81
Specifying the Exposure Mode	82
Full Auto	82
Program AE	83
Aperture Priority AE	84
Shutter Speed Priority AE	85
Manual Exposure	87
Using the Continuous Shutter Mode	88
Using the AEB (Automatic Exposure Bracketing) Mode ...	89
To configure AEB Mode settings	89
To record an image using AEB	90

Creating a Panorama	91
Recording a Movie	93
REC Mode Camera Settings	94
Specifying Image Size and Quality	94
Specifying Sensitivity	96
Enhancing Certain Colors	96
Using the Filter Function	97
Specifying Color Saturation	98
Specifying Contrast	98
Specifying Outline Sharpness	99
Turning the On-screen Grid On and Off	99
Inserting a Time Stamp into an Image	100
Specifying Power On Default Settings	101
Resetting the Camera	102
Using the Remote Shutter Release	103
Using an External Flash	104
External Flash Unit Requirements	104
Attaching an External Flash Unit	104
Attaching a Conversion Lens, Close-up Lens, or Filter	106
Installing a Conversion Lens or Close-up Lens	106
Using a Filter	108

109 PLAYBACK

Basic Playback Operation	109
Playing a Movie	110
Playing a Panorama	111
Enlarging the Playback Image	112
Displaying the 9-image View	113
Selecting a Specific Image in the 9-image View	114
Displaying the Histogram and Other Image Information	115
Using the Slide Show Feature	117
Resizing an Image	118

File 3 (File name : qv5700_e_3.pdf)

119 DELETING IMAGES

Deleting the Displayed Image	119
Deleting Selected Images	120
Deleting All Images in Selected Folders	121
Deleting All Unprotected Images	122

123 MANAGING IMAGES

Folders and Files	123
Folders	123
Files	124
Protecting Images Against Deletion	125
Protecting Selected Images	125
Protecting and Unprotecting All Images in Selected Folders	126
Protecting and Unprotecting All Images	127
DPOF	127
Making DPOF Settings for Particular Images	128
Making DPOF Settings for Particular Folders	129
Making DPOF Settings of All Images on the Memory Card	129

PRINT Image Matching II	130
Exif Print	131

132 OTHER SETTINGS

Changing the Menu Language	132
Installing a Different Language Set	132
Turning the Confirmation Beep On and Off	136

137 CONNECTING TO EXTERNAL EQUIPMENT

Connecting to a Television	137
Selecting the Video Output Signal Mode	138
Connecting to a Computer	139
Installing the Software from the CD-ROM	139
About the bundled CD-ROM	139
Computer System Requirements	140
Installing Software from the CD-ROM in Windows	141
Installing Software from the CD-ROM on a Macintosh	143
Installing Software	143
Transferring Files to a Computer	147
Using a Memory Card to Transfer Image Data	149
Memory Card Data	150
DCF Protocol	150
Memory Card File Structure	151
Image Files Supported by the Camera	152
Precautions when Using a Memory Card on a Computer	153
Using the HTML Card Browser	154
Specifying the Card Browser Type	154
Viewing Card Browser File Contents	156
Saving Card Browser Files	158

159 REFERENCE

Camera Menus	159
REC mode	159
PLAY mode	160
Mode Settings	161
Settings in Each Mode	161
Drive Mode + Exposure Mode Combinations	162
Full Auto Mode Settings	163
Menu Settings	163
Non-Menu Settings	163
Troubleshooting	164
Messages	167
Specifications	169