
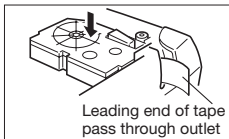


Loading a Magnetic Tape Cartridge

1. Check to make sure the leading edge of the tape is not bent and that the tape is correctly passing through the tape guide.
2. Pull out about 3cm of tape from the cartridge.
3. Check to make sure the ink ribbon is not damaged.
4. Load the cartridge into the printer making sure the tape and ink ribbon pass between the printer head and the rubber roller. The leading end of the tape should pass through the tape outlet.

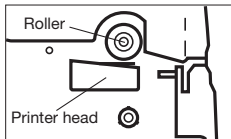

Storage Precautions

- Do not store the tape cartridge, where it will be exposed to high temperature, high humidity, or direct sunlight.
- When storing the tape cartridge, attach its stopper and then return it to its original box.

Precautions for Use

- Magnetic tape can be used with printer models that support 24mm wide tape only (except KL-820, which does not support the use of magnetic tape).
- Make sure that print density is set to 4 or greater for magnetic tape.
- If printed tape curls, flatten it out before using it.
- Keep magnetic tape away from magnetic storage media, magnetic cards, checks, and other items that can be damaged by magnetism.
- Do not use the tape where it can be exposed to gasoline or other similar agents.
- Check remaining tape before printing to ensure that you do not run out while printing is in progress.
- Using the printer's built-in cutter to cut magnetic tape will shorten the service life of the cutter blade and can damage the cutter mechanism. Whenever printing on magnetic tape, always select **NONE** for the **MARGINS** setting, or **UNCUT** for the tape cut mode. If you are using Label Printing Software to control the printer from your computer, select **No Cut** for the **Cut Style** setting of the Label Software Properties.
- After printing on magnetic tape, feed the tape and cut it with scissors.