 


Song Bank

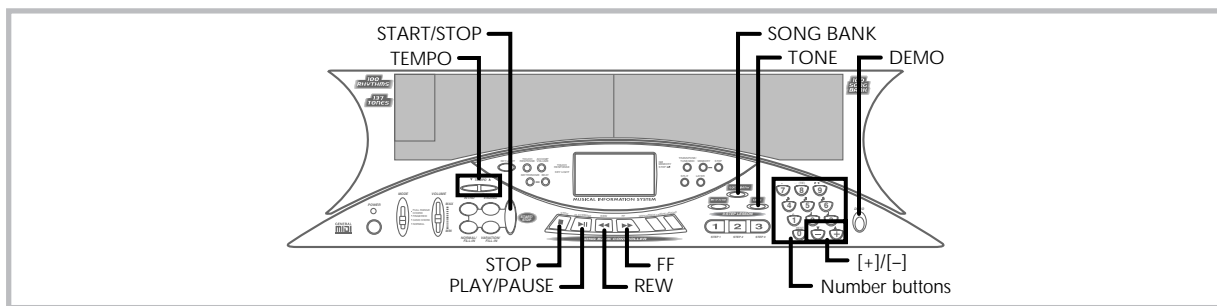

This keyboard features a built-in Song Bank of 100 tunes that can be used for Auto Accompaniment playback. You can select a song simply to enjoy listening to it, or you can cut out its melody part and play along on the keyboard using the 3-step lesson. Melody and accompaniment fingerings and notes appear on the keyboard's display, and the keys you should press light up on the keyboard to help you on your way to keyboard mastery.

To select a tune

1. Find the tune you want to play in the **Song Bank List**, and note its number.
2. Press the **SONG BANK** button.
 - This causes the number and name of the currently selected Song Bank tune to appear on the display.
3. Use the **number buttons** to input the two-digit tune number.

Example: To select "21 TWINKLE TWINKLE LITTLE STAR", input 2 and then 1.



NOTE

You can also change the displayed song number using **[+]** (increase) and **[-]** (decrease).

To play a tune

1. Select the tune you want to play.
2. Press the **PLAY/PAUSE** button to start play of the tune.
 - The current measure and beat numbers are shown on the display.



 
3. To stop play, press the **STOP** button.
 - The tune you select continues to play until you stop it.

NOTE

While a tune is playing, you can use the number buttons or **[+]** and **[-]** to change to another tune. The change is made as soon as you input a different number, even if the current tune is not finished playing.

Key Lighting System Operation and Display Contents During Song Bank Play

Keyboard keys light to show the keys that should be pressed to play along with Song Bank tunes as they play back. At the same time, the display shows fingerings, chord forms, notes, tempo and other information.

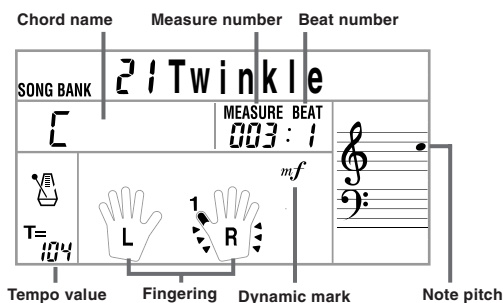


Adjusting the Tempo

Each tune has a preset default tempo (beats per minute) that is set automatically whenever you select a tune. While the tune is playing, you can change the tempo setting to a value in the range of 40 to 255.

To set the tempo

 1. Use the **TEMPO** buttons to set the tempo.
 - ▲ : Increases the tempo value.
 - ▼ : Decreases the tempo value.

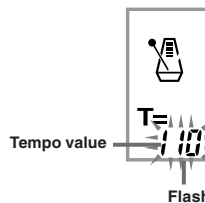

NOTES

- While the tempo value is flashing, you can also use the number buttons or **[+]** and **[-]** to input a three-digit value. Note that you must input leading zeros, so 90 is input as 090.
- Pressing both the ▲ and ▼ **TEMPO** buttons at the same time automatically returns the currently selected rhythm to its default tempo.
- Tunes 70 to 99 have tempo changes part way through in order to produce specific musical effects. Note that the tempo setting automatically returns to the default whenever a tempo change occurs within one of these tunes.

To pause playback

1. Press the **PLAY/PAUSE** button while a tune is playing to pause it.
2. Pressing the **PLAY/PAUSE** button again resumes play from the point where it was paused.

NOTE

After you press **STOP** to stop playback, pressing **PLAY/PAUSE** restarts play from the beginning of the tune.

To fast reverse

1. While a tune is playing or paused, hold down the **REW** button to skip in a reverse direction at high speed.
 - The fast reverse operation skips back one measure at a time.
 - The measure and beat numbers on the display change while the fast reverse operation is being performed.



2. Releasing the **REW** button starts song playback from the measure whose number is shown on the display.

NOTE

Fast reverse does not work while Song Bank play is stopped.

To fast forward

1. While a tune is playing or paused, hold down the **FF** button to skip forward at high speed.
 - The fast forward operation skips forward one measure at a time.
 - The measure and beat numbers on the display change while the fast forward operation is being performed.



2. Releasing the **FF** button starts song playback from the measure whose number is shown on the display.

NOTE

Fast forward does not work while Song Bank play is stopped.

To change the melody tone

1. While a tune is playing or paused, press the **TONE** button.



Indicates **TONE** was pressed.

2. Find the tone you want in the **Tone List**, and then use the **number buttons** to input its three-digit number.
Example: To select "040 VIOLIN", input 0, then 4, then 0.
 - You can select any one of the keyboard's 137 built-in tones.



NOTES

- You can also use the **[+]** and **[-]** buttons to change the melody tones.
- For two-hand tunes (Song Bank tunes 70 through 99), the same tone is applied for both the left and right hand parts.
- Specifying the tune number for the same tune that is currently selected returns the melody tone to the default setting for that tune.

To play all Song Bank tunes in succession

1. Press the **DEMO** button.
 - Song Bank tune starts from tune number 00, and continues with each tune in numeric sequence.
2. To stop Song Bank tune play, press the **DEMO**, **STOP**, or **START/STOP** button.

NOTES

- While a tune is playing, you can use the number buttons or **[+]** and **[-]** to change to another tune.
- You can play along with the tunes on the keyboard.