

# Operation Guide 5153

## About This Manual

- Note that the product illustrations in this manual are intended for reference only, and so the actual product may appear somewhat different than depicted by an illustration.


## Contents

Reading The Display ..... E-2  
 Setting Digital Time ..... E-4  
 Setting Analog Time ..... E-6  
 Setting Calendar ..... E-7  
 Setting Daily Alarm ..... E-8  
 Setting Dual Time ..... E-10  
 Stopwatch Operation ..... E-12  
 Specifications ..... E-13

E

E-1

## Reading The Display

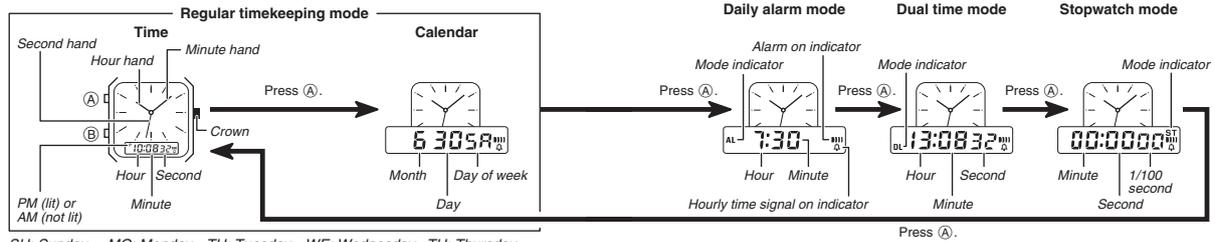


SU: Sunday MO: Monday TU: Tuesday WE: Wednesday TH: Thursday  
 FR: Friday SA: Saturday

(Sound demonstration) Press and hold (A) to sound the beeper.

E-2

E-3

## Setting Digital Time

 

- Press and hold (B) in the Time display to set time.
  - Press (A) on an hourly time signal to correct seconds.
  - Press (B) to shift flashing digit(s). The digit(s) to be changed will flash.
  - Each press of (A) increments the digit by one. Keep pressed to move at a high speed.
- \* Resetting the seconds to 00 while the current count is in the range of 30 to 59 causes the minutes to be increased by 1. In the range of 00 to 29, the seconds are reset to 00 without changing the minutes.

- \* In the case of 12/24-hour selection, each press of (A) switches the display between 12-hour and 24-hour format alternately. (Auto return function)  
 If no button is pressed for a few minutes, the display automatically returns to the regular timekeeping mode.  
 5. Press (B) to complete.

E-4


E-5

## Setting Analog Time

 - When the second hand is at 12 o'clock position, stop the second hand by pulling the crown out.
- Set the hands by turning the crown.
- Press the crown in on a time signal.

A gain or loss of one second or less may result from properties of mechanical parts.

## Setting Calendar




- Press and hold (B) in the calendar display to set calendar.
- Each press of (A) increments the digit by one. Keep pressed to move at a high speed.
- Press (B) to shift flashing digit(s). The digit(s) to be changed will flash.
- Press (B) to complete.

E-6

E-7

## Setting Daily Alarm

 
If the daily alarm is set the beeper sounds for 20 seconds at the preset time every day until cleared. To stop the beeper while sounding, press any button. If the hourly time signal is set, the alarm sounds every hour on the hour.



- Press and hold (B) in the daily alarm mode to set time.
- Each press of (A) increments the digit by one. Keep pressed to move at a high speed.
- Press (B) to shift flashing digit(s). The digit(s) to be changed will flash.
  - At this time daily alarm and hourly time signal automatically turn on.

- \* In the case of daily alarm and hourly time signal on or off setting, the display changes as shown nearby with every press of (A).

[ON or OFF setting of daily alarm and hourly time signal]

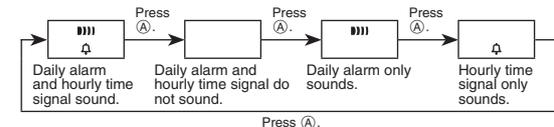

- (Auto return function)  
 If no button is pressed for 2 to 3 minutes in the daily alarm setting mode, the display automatically returns to the initial daily alarm mode display.  
 4. Press (B) to complete.  
 \* When the watch is in the 24-hour format, the alarm time is also displayed in the 24-hour format.

E-8

E-9

