

# CH-C59200UA

## User's Guide

Keep this manual in a safe place for future reference.

E

# CASIO.


PN411515-001 MO0011-006401B Printed in Japan


## Safety Precautions



Be sure to read the following Safety Precautions before trying to use it for the first time.

## Markings and Symbols

The following are the meanings of the markings and symbols used in these Safety Precautions.


 **Warning** This symbol indicates information that, if ignored or applied incorrectly, creates the possibility of death or serious personal injury.

 **Caution** This symbol indicates information that, if ignored or applied incorrectly, creates the possibility of personal injury or property damage.


-  A diagonal line indicates something you should not do. The symbol shown here indicates you should not try to take the unit apart.
-  A black circle indicates something you should do. The symbol shown here indicates you should unplug the unit from the wall outlet.

### Warning





#### Abnormal Conditions

-  Continued use of the unit while it is emitting smoke or strange odor creates the danger of fire and electrical shock. Immediately unplug the power cord from the wall outlet, remove batteries and contact your original dealer or an authorized CASIO service provider to request servicing.


#### Power Supply and Voltage

-  Never use a voltage that is different from that for which the unit is rated. Also, do not plug the unit into a power outlet that is shared by other devices. Doing so creates the danger of fire and electrical shock.


#### Power Cords

-  Never modify the power cord or excessively bend, twist, or pull it. Doing so creates the danger of fire and electrical shock.
-  Do not allow the power cord to become damaged. Do not place heavy objects on the power cord or expose it to heat. A damaged power cord creates the danger of fire and electrical shock.
-  Never touch the power cord while your hands are wet. Doing so creates the danger of electrical shock.
-  Should the power cord ever become seriously damaged (internal wiring exposed or shorted), contact your original dealer or an authorized CASIO service provider to request servicing. Continued use of a seriously damaged power cord creates the danger of fire and electrical shock.


#### Water and Foreign Matter

-  Should any foreign matter (metal, water or other liquid) ever get into the unit, immediately unplug the power cord from the wall outlet, remove batteries and contact your original dealer or an authorized CASIO service provider to request servicing.

#### Dropping and Damage



-  Should the unit ever fall or otherwise become damaged, unplug the power cord from the wall outlet, remove batteries and contact your original dealer or an authorized CASIO service provider. Continued use creates the danger of fire and electrical shock.

#### Disassembly


-  Never try to take the unit apart or modify it in any way. Doing so creates the danger of fire and electrical shock.

### Caution






#### Location

-  Do not locate the unit in an area subjected to large amounts of humidity or dust. Doing so can create the danger of fire and electrical shock.
-  Keep the unit away from food preparation area, stoves, and anywhere else it might be exposed to oil smoke or steam. Such conditions can create the danger of fire and electrical shock.

#### Avoid unstable surfaces.

-  Never place the unit on an unstable surface, on a high shelf, or in any other unstable location. Doing so can create the danger of the unit falling and causing personal injury.

#### Power Cords

-  Unplug the power plug from the wall outlet whenever leaving the unit unattended for long periods.
-  At least once a year, unplug the power plug from the power outlet and clean the area around the prongs of the plug. Dust build up around the prongs can create the danger of fire.
-  Be sure to unplug the power plug from the wall outlet before attempting to move the unit to another location.
-  Be sure to grasp the power plug when unplugging it from a wall outlet. Pulling on the power cord can damage it, and create the danger of fire and electrical shock.
-  Keep the power cord away from stoves and other sources of heat. Heat can melt the insulation of the power cord and create the danger of fire and electrical shock.

## Other Precautions

- Avoid using and storing components in areas subjected to temperature extremes. Avoid direct sunlight, areas near windows, near heaters, or any other source of strong heat. Heat can cause discoloration or deformation of cases, or even damage internal circuitry.
- Avoid dropping unit or otherwise subjecting them to strong impact.
- Avoid bending or twisting unit.
- Wipe off unit with a soft, dry cloth to clean them. When they are very dirty, use a soft cloth dampened with a weak solution of water and a mild neutral detergent. Wring out all excess liquid from the cloth before wiping the unit. Never use thinner, benzene, or other volatile agents. Doing so can remove case markings or cause physical damage to the case.

- CASIO COMPUTER CO., LTD. assumes no responsibility for any damage or loss resulting from the use of this manual.
- CASIO COMPUTER CO., LTD. assumes no responsibility for any loss or claims by third parties which may arise through the use of this product.
- The contents of this manual are subject to change without notice.
- No part of this manual may be reproduced in any form without the express written consent of the manufacturer.

## Unpacking

Check that all of the following items are present as you unpack the AC Adapter/Charger.

 
- CH-C59200UA AC Adapter/Charger
- AC power cord
- DC power cord
- User's Guide (this manual)
- All example operations in these instructions use the CASSIOPEIA EG-800.

## Using the AC Adapter/Charger


As its name suggests, the AC Adapter/Charger functions as both a charger for the battery pack and as an AC adapter.

### ■ To charge a battery pack mounted on the AC adapter/charger


1. Plug the AC adapter/charger into a wall outlet as shown in the illustration.

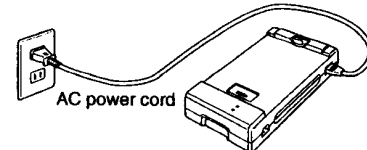

 2. Mount the battery pack onto the AC adapter/charger.

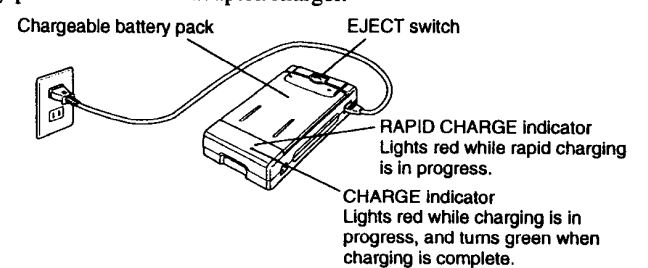

- Charging starts automatically when you mount the battery pack onto the AC adapter/charger.
  - The amount of time it takes to achieve a full charge depends on whether the AC adapter/charger also being used to power the CASSIOPEIA by attachment with the DC power cord. An M Type battery pack (JK-210RBM) takes about five hours to reach a full charge with normal (non-rapid) charging when the CASSIOPEIA is being used to perform an operation that consumes a large amount of power.
  - Avoid using the AC adapter/charger to power the CASSIOPEIA while rapid charge is in progress. Connecting the AC adapter/charger to the CASSIOPEIA can cause rapid charging to switch automatically to normal charging.
3. After charging is complete, slide the EJECT switch in the direction indicated by the arrow and remove the battery pack from the AC adapter/charger.

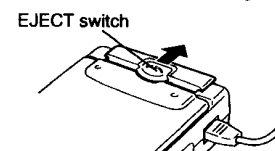 


### Important


- Unplug the AC power cord from the wall outlet when you are not using the AC adapter/charger.
- If the indicator goes out during charging (indicating a charge error) or if a full charge is not achieved within a preset amount of time, unplug the AC adapter/charger from the wall outlet and stop charging.

### ■ To use the AC Adapter/Charger to power the CASSIOPEIA
 
#### Direct Connection to CASSIOPEIA

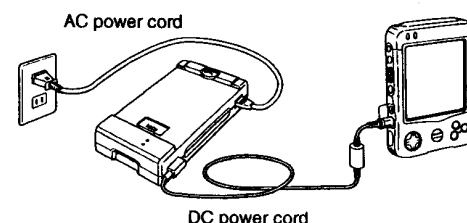


#### Cradle Connection

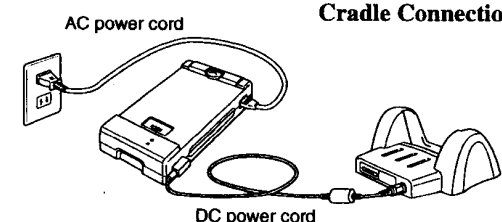 

## Specifications

Power Requirements: 100V to 240V AC  
Chargeable Battery Pack: JK-210RB/RBM/RBL  
Operating Temperature: 10°C to 35°C (50°F to 95°F)

 CASIO ELECTRONICS CO., LTD.  
Unit 6, 1000 North Circular Road  
London NW2 7JD, U.K.

**CASIO COMPUTER CO., LTD.**  
6-2, Hon-machi 1-chome  
Shibuya-ku, Tokyo 151-8543, Japan

Printed on recycled paper.