

QV-4000 User Documentation Files

- The QV-4000 user documentation available here has been divided among a number of files in order to facilitate downloading. You can download the entire manual, or you can save time by using the table of contents below to find specific information and then download only the files you need.

File 1 (File name : qv4000_e_1.pdf)

E-2 CONTENTS

E-6 INTRODUCTION

Quick Reference	E-6
Getting Ready	E-6
Recording an Image	E-7
Viewing (Playing Back) an Image	E-8
Deleting an Image	E-9
Features	E-11
Recording Features	E-13
Precautions	E-14
General Precautions	E-14
Operating conditions	E-15
Condensation	E-15
Lens Precautions	E-16
About the camera's backlight...	E-16

E-17 GETTING ACQUAINTED

General Guide	E-17
Front	E-17
Back	E-18
Side	E-19
Bottom	E-19
Mode Dials	E-20
Using the Control Button	E-21
Monitor Screen Indicators	E-22
REC mode	E-22
PLAY mode	E-23
Changing the Contents of the Monitor Screen	E-24
Indicator display	E-24
Operation Indicator Lamp	E-25
Operation/card access lamp	E-25
Flash Charge lamp	E-26
AF Assist Light/Self-timer Lamp	E-26
Using the Bundled Accessories	E-27
Attaching the Neck Strap	E-27
Adjusting the Length of the Neck Strap	E-27
Using the Lens Cap	E-28
Power Requirements	E-29
Loading Batteries	E-29
Battery Handling Precautions	E-32
Low Battery Indicator	E-33
Using AC Power	E-33
Turning the Camera On and Off	E-35
Power Save Settings	E-35
Memory Cards	E-37
Inserting a Memory Card into the Camera	E-37
Removing a Memory Card from the Camera	E-38

Formatting a Memory Card	E-39
Memory Card Precautions	E-40
IBM Microdrive Precautions	E-41
Menu Screens	E-42
Setting the Current Date and Time	E-43
Setting the Date and Time	E-43
Selecting the Date Format	E-44

E-45 BASIC IMAGE RECORDING

Using the Full Auto Mode	E-45
Recording Precautions	E-47
Focusing	E-47
About Auto Focus	E-48
Image Recording when the Batteries are Low	E-48
About the REC Mode Monitor Screen	E-49
Using Optical Zoom	E-49
Using the Viewfinder for Recording	E-51
Using the Self-timer	E-52
Camera Orientation Detection	E-53

File 2 (File name : qv4000_e_2.pdf)

E-54 OTHER RECORDING FUNCTIONS

Recording a Single Image (1-Image)	E-54
Previewing the Last Image Recorded	E-54
Deleting the Last Image Recorded in the REC Mode	E-55
Using the Flash	E-55
Selecting the Flash Mode	E-55
Flash Status Indicators	E-56
Adjusting the Flash Intensity	E-57
Changing the Sync Speed	E-57
Selecting a Flash Sync Setting	E-58
Precautions when Using Flash	E-60
Selecting the Focus Mode	E-61
Using Auto Focus (Multi-area Auto Focus)	E-62
Using the Spot Auto Focus Mode	E-63
Using the Manual Focus Mode	E-64
Using the Infinity Mode	E-65
Using the Macro Mode	E-65
Using Focus Lock	E-66
Expanding the Focus Area	E-67
Camera Shake Indicator	E-67
Selecting the Metering Mode	E-68
Selecting White Balance	E-69
Adjusting White Balance Manually	E-70
Using AE Lock	E-71
Exposure Compensation	E-72
Using the Histogram	E-74
Using Digital Zoom	E-75

Instant Setup Using the Best Shot Mode	E-76
Copying a Scene from the CD-ROM Best Shot Library	E-77
Registering Your Own Best Shot Scenes	E-80
Specifying the Location of Best Shot Mode Scenes	E-81
Specifying the Exposure Mode	E-82
Full Auto	E-82
Program AE	E-83
Aperture Priority AE	E-84
Shutter Speed Priority AE	E-85
Manual Exposure	E-87
Using the Continuous Shutter Mode	E-88
Using the AEB (Automatic Exposure Bracketing) Mode	E-89
To configure AEB Mode settings	E-89
To record an image using AEB	E-90
Creating a Panorama	E-91
Recording a Movie	E-93
REC Mode Camera Settings	E-94
Specifying Image Size and Quality	E-94
Enhancing Certain Colors	E-96
Using the Filter Function	E-97
Specifying Color Saturation	E-97
Specifying Contrast	E-98
Specifying Outline Sharpness	E-98
Turning the On-screen Grid On and Off	E-99
Inserting a Time Stamp into an Image	E-100
Specifying Power On Default Settings	E-101
Resetting the Camera	E-102
Using the Remote Shutter Release	E-103
Using an External Flash	E-104
External Flash Unit Requirements	E-104
Attaching an External Flash Unit	E-104
Attaching a Conversion Lens, Close-up Lens, or Filter	E-106
Installing a Conversion Lens or Close-up Lens	E-106
Using a Filter	E-108

File 3 (File name : qv4000_e_3.pdf)

E-109 PLAYBACK

Basic Playback Operation	E-109
Playing a Movie	E-110
Playing a Panorama	E-111
Enlarging the Playback Image	E-112
Displaying the 9-image View	E-113
Selecting a Specific Image in the 9-image View	E-114
Displaying the Histogram and Other Image Information	E-115
Using the Slide Show Feature	E-117
Resizing an Image	E-118

E-119 DELETING IMAGES

Deleting the Displayed Image	E-119
Deleting Selected Images	E-120

Deleting All Images in Selected Folders	E-121
Deleting All Unprotected Images	E-122

E-124 MANAGING IMAGES

Folders and Files	E-123
Folders	E-123
Files	E-124
Protecting Images Against Deletion	E-125
Protecting Selected Images	E-125
Protecting and Unprotecting All Images in Selected Folders	E-126
Protecting and Unprotecting All Images	E-127
DPOF	E-127
Making DPOF Settings for Particular Images	E-128
Making DPOF Settings for Particular Folders	E-129
Making DPOF Settings of All Images on the Memory Card	E-129
PRINT Image Matching	E-130

E-131 OTHER SETTINGS

Changing the Menu Language	E-131
Installing a Different Language Set	E-131
Turning the Confirmation Beep On and Off	E-135

E-136 CONNECTING TO EXTERNAL EQUIPMENT

Connecting to a Television	E-136
Selecting the Video Output Signal Mode	E-137
Connecting to a Computer	E-138
Using a Memory Card to Transfer Image Data	E-140
Memory Card Data	E-141
DCF Protocol	E-141
Memory Card File Structure	E-142
Image Files Supported by the Camera	E-143
Precautions when Using a Memory Card on a Computer	E-144
Using the HTML Card Browser	E-145
Specifying the Card Browser Type	E-145
Viewing Card Browser File Contents	E-147
Saving Card Browser Files	E-149

E-150 REFERENCE

Camera Menus	E-150
REC mode	E-150
PLAY mode	E-151
Mode Settings	E-152
Settings in Each Mode	E-152
Drive Mode + Exposure Mode Combinations	E-153
Full Auto Mode Settings	E-154
Menu Settings	E-154
Non-Menu Settings	E-154
Troubleshooting	E-155
Messages	E-158
Specifications	E-160