

Chapter

1


1

Basic Operation

- 1-1 Keys
- 1-2 Display
- 1-3 Inputting and Editing Calculations
- 1-4 Option (OPTN) Menu
- 1-5 Variable Data (VARs) Menu
- 1-6 Program (PRGM) Menu
- 1-7 Using the Set Up Screen
- 1-8 When you keep having problems...




1-1 Keys

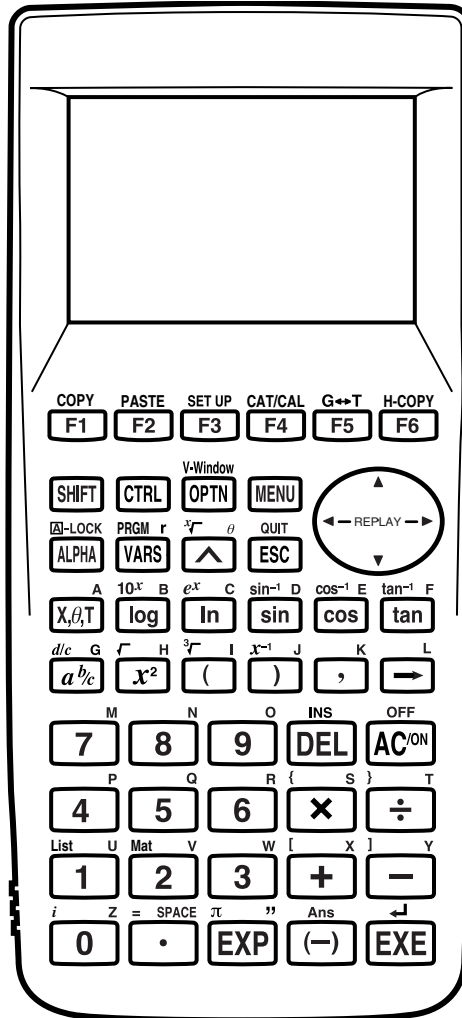




■ Key Table

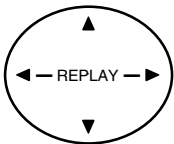	Page		Page		Page		Page		Page
COPY F1	1-3-5	PASTE F2	1-3-5	SET UP F3	1-7-1	CAT/CAL F4	1-3-5	G↔T F5	5-3-4
SHIFT	1-1-3	CTRL	1-3-4	V-Window OPTN	5-2-1 1-4-1	MENU	1-2-1		
Δ-LOCK ALPHA	1-1-3	PRGM r VARS	1-6-1 1-5-1	\sqrt{x} θ	2-4-4	QUIT ESC	2-4-4		
A X,θ,T	2-4-10	10^x B log	2-4-4	e^x C In	2-4-4	\sin^{-1} D sin	2-4-3	\cos^{-1} E cos	2-4-3
d/c G a^{b/c}	2-4-10	$\sqrt{}$ H x²	2-4-6	$\sqrt[3]{}$ I (2-4-6 2-1-1	x^{-1} J)	2-4-6 2-1-1	K ,	2-4-3
								L →	2-2-1
	Page		Page		Page		Page		Page
M 7		N 8		O 9		INS DEL	1-3-3 1-3-1	OFF AC/ON	
P 4		Q 5		R 6		{ S ×	2-1-1	} T ÷	2-1-1
List U 1	3-1-2	Mat V 2	2-8-11	W 3		[X +	2-1-1] Y -	2-1-1
i Z 0		= SPACE .		π ” EXP	2-4-3 2-1-1	Ans (-)	2-2-5 2-1-1	↓ EXE	



■ Key Markings

Many of the calculator's keys are used to perform more than one function. The functions marked on the keyboard are color coded to help you find the one you need quickly and easily.

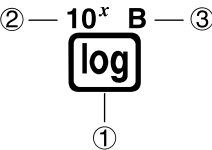

	Function	Key Operation
①	log	
②	10^x	
③	B	

The following describes the color coding used for key markings.

Color	Key Operation
Orange	Press and then the key to perform the marked function.
Red	Press and then the key to perform the marked function.



Alpha Lock

Normally, once you press and then a key to input an alphabetic character, the keyboard reverts to its primary functions immediately.

If you press and then , the keyboard locks in alpha input until you press again.



1-2 Display

■ Selecting Icons

This section describes how to select an icon in the Main Menu to enter the mode you want.

●To select an icon

1. Press **[MENU]** to display the Main Menu.
2. Use the cursor keys (**[◀]**, **[▶]**, **[▲]**, **[▼]**) to move the highlighting to the icon you want.

Currently selected icon



3. Press **[EXE]** to display the initial screen of the mode whose icon you selected.
Here we will enter the STAT Mode.



- You can also enter a mode without highlighting an icon in the Main Menu by inputting the number or letter marked in the lower right corner of the icon.

888

888



About the Function Menu

Use the function keys (**F1** to **F6**) to access the menus and commands in the menu bar along the bottom of the display screen. You can tell whether a menu bar item is a menu or a command by its appearance.

- **Command** (Example: **DRAW**)

Pressing a function key that corresponds to a menu bar command executes the command.

- **Pull-up Menu** (Example: **HYPI**)

Pressing a function key that corresponds to a pull-up menu opens the menu.

You can use either of the following two methods to select a command from a pull-up menu.



- Input the key to the left of the command on the pull-up menu.
- Use the **▲** and **▼** cursor keys to move the highlighting to the command you want, and then press **EXE**.

The symbol **▶** to the right of a command indicates that executing the command displays a submenu.

To cancel the pull-up menu without inputting the command, press **ESC**.


About Display Screens

This calculator uses two types of display screens: a text screen and a graph screen. The text screen can show 21 columns and 8 lines of characters, with the bottom line used for the function key menu. The graph screen uses an area that measures 127 (W) × 63 (H) dots.

Text Screen



Graph Screen

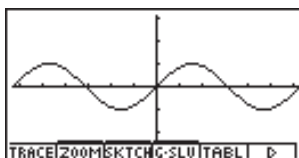

The contents of each type of screen are stored in independent memory areas.

Press **CTRL F5** (**G↔T**) to switch between the graphic screen and text screen.



The symbol **↑** in the upper left corner of a pull-up menu indicates that there are more commands running off the top of the menu.

Use the cursor keys to scroll the menu contents to view the commands running off the top.



■ Normal Display

The calculator normally displays values up to 10 digits long. Values that exceed this limit are automatically converted to and displayed in exponential format.

• How to interpret exponential format

$$\boxed{1.2\text{E}12} \qquad 1.2\text{E}+12$$

$1.2\text{E}+12$ indicates that the result is equivalent to 1.2×10^{12} . This means that you should move the decimal point in 1.2 twelve places to the right, because the exponent is positive. This results in the value 1,200,000,000,000.

$$\boxed{1.2\text{E}-3} \qquad 1.2\text{E}-03$$

$1.2\text{E}-03$ indicates that the result is equivalent to 1.2×10^{-3} . This means that you should move the decimal point in 1.2 three places to the left, because the exponent is negative. This results in the value 0.0012.

You can specify one of two different ranges for automatic changeover to normal display.

Norm 1 10^{-2} (0.01) $> |x|$, $|x| \geq 10^{10}$

Norm 2 10^{-9} (0.000000001) $> |x|$, $|x| \geq 10^{10}$

All of the examples in this manual show calculation results using Norm 1.


See page 2-3-2 for details on switching between Norm 1 and Norm 2.




Special Display Formats

This calculator uses special display formats to indicate fractions, hexadecimal values, and degrees/minutes/seconds values.


- Fractions

 Indicates: $456 \frac{12}{23}$

- Hexadecimal Values

 Indicates: ABCDEF12₍₁₆₎, which equals -1412567278₍₁₀₎


- Degrees/Minutes/Seconds

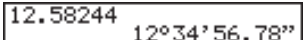 Indicates: 12° 34' 56.78"

- In addition to the above, this calculator also uses other indicators or symbols, which are described in each applicable section of this manual as they come up.

Calculation Execution Indicator

Whenever the calculator is busy drawing a graph or executing a long, complex calculation or program, a black box "■" flashes in the upper right corner of the display. This black box tells you that the calculator is performing an internal operation.

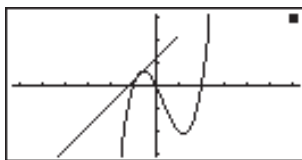



1-3 Inputting and Editing Calculations

Inputting Calculations

When you are ready to input a calculation, first press **AC** to clear the display. Next, input your calculation formulas exactly as they are written, from left to right, and press **EXE** to obtain the result.

• • • • •

Example 1 $2 + 3 - 4 + 10 =$

AC **2** **+** **3** **-** **4** **+** **1** **0** **EXE**

2+3-4+10 11

• • • • •

Example 2 $2(5 + 4) \div (23 \times 5) =$

AC **2** **(** **5** **+** **4** **)** **÷**
(**2** **3** **×** **5** **)** **EXE**

2(5+4)÷(23×5)
0.1565217391

Editing Calculations

Use the **◀** and **▶** keys to move the cursor to the position you want to change, and then perform one of the operations described below. After you edit the calculation, you can execute it by pressing **EXE**. Or you can use **▶** to move to the end of the calculation and input more.

To change a step

• • • • •

Example To change cos60 to sin60

AC **cos** **6** **0**

cos 60

◀ **◀** **◀**

cos 60

DEL

60

sin

sin 60



• To delete a step

• • • • •

Example To change $369 \times \times 2$ to 369×2

AC 3 6 9 X X 2	369××2
← ← DEL	369×2

• To insert a step

• • • • •

Example To change 2.36^2 to $\sin 2.36^2$

AC 2 . 3 6 x²	2.36²
← ← ← ← ←	2.36²
sin	sin 2.36²

• To change the last step you input

• • • • •

Example To change 396×3 to 396×2

AC 3 6 9 X 3	369×3
DEL	369×
2	369×2



■ Using Replay Memory

The last calculation performed is always stored into replay memory. You can recall the contents of the replay memory by pressing or . If you press , the calculation appears with the cursor at the beginning. Pressing causes the calculation to appear with the cursor at the end. You can make changes in the calculation as you wish and then execute it again.

● ● ● ● ●

Example 1 To perform the following two calculations

$4.12 \times 6.4 = 26.368$

$4.12 \times 7.1 = 29.252$

	<div>4.12×6.426.368</div>
	<div>4.12×6.4</div>
(INS)	<div>4.12×<u>6</u>.4</div>
	<div>4.12×7.1_</div>
	<div>4.12×7.129.252</div>

After you press , you can press or to recall previous calculations, in sequence from the newest to the oldest (Multi-Replay Function). Once you recall a calculation, you can use and to move the cursor around the calculation and make changes in it to create a new calculation.

● ● ● ● ●

Example 2

	<div>123+456579</div>
	<div>234-567-333</div>
	<div>□□</div>
(One calculation back)	<div>234-567</div>
(Two calculations back)	<div>123+456</div>



Pressing (INS) changes the cursor to “_”. The next function or value you input is overwritten at the location of “_”. To abort this operation, press (INS) again.

A calculation remains stored in replay memory until you perform another calculation or change modes.

The contents of replay memory are not cleared when you press the key, so you can recall a calculation and execute it even after performing the all clear operation.



■ Making Corrections in the Original Calculation

● ● ● ● ●

Example $14 \div 0 \times 2.3$ entered by mistake for $14 \div 10 \times 2.3$

AC 1 4 \div 0 \times 2 \cdot 3

14/0×2.3

EXE

14/0×2.3

Ma ERROR
Press: [ESC]

Press [ESC].

14/0×2.3

Cursor is positioned automatically at the location of the cause of the error.

Make necessary changes.

◀ 1

14/[0]×2.3

Execute again.

EXE

14/10×2.3

3.22

■ Copy and Paste

You can temporarily copy commands, programs, and other text data you input to a memory area called “the clipboard,” and then paste it to another location on the display.

● To specify the copy range

1. Move the cursor (▢) the beginning or end of the range of text you want to copy and then press [CTRL]. This changes the cursor to “⌘”.

14/10×2.3⌘

2. Use the cursor keys to move the cursor and highlight the range of text you want to copy.

14/10×2.3



3. Press **CTRL** **F1** (COPY) to copy the highlighted text to the clipboard, and exit the copy range specification mode.

14/10×2.3

To cancel text highlighting without performing a copy operation, press **ESC**.

● **Pasting Text**

Move the cursor to the location where you want to paste the text, and then press **CTRL** **F2** (PASTE). The contents of the clipboard are pasted at the cursor position.

AC

CTRL **F2** (PASTE)

14/10×2.3

■ **Catalog Function**

The Catalog is an alphabetic list of all the commands available on this calculator. You can input a command by calling up the Catalog and then selecting the command you want.

● **To use the Catalog to input a command**

1. Press **CTRL** **F4** (CAT/CAL) to display the Catalog at the bottom of the screen.

A | B | C~ | CoM | D | D~ |

2. Press the function key that matches the first letter of the command you want to input.
3. Select the command from the pull-up menu.

● ● ● ● ●

Example 1 To use the Catalog to input the ClrGraph command

AC **CTRL** **F4** (CAT/CAL) **F3** (C~) **7** (CLR)

1 (Graph)

ClrGraph

A | B | C~ | CoM | D | D~ |



• • • • •

Example 2 To use the Catalog to input the Prog command

AC CTRL F4 (CAT/CAL) F6 (▷) F6 (▷)

F5 (P) In (Prog)



Pressing ESC or SHIFT ESC (QUIT) closes the Catalog.



1-4 Option (OPTN) Menu

The option menu gives you access to scientific functions and features that are not marked on the calculator's keyboard. The contents of the option menu differ according to the mode you are in when you press the **[OPTN]** key.

See "8-7 Program Mode Command List" for details on the option (OPTN) menu.

• Option Menu in the RUN • MAT or PRGM Mode

- **{LIST}** ... {list function menu}
- **{MAT}** ... {matrix operation menu}
- **{CPLX}** ... {complex number calculation menu}
- **{CALC}** ... {functional analysis menu}
- **{NUM}** ... {numeric calculation menu}
- **{PROB}** ... {probability/distribution calculation menu}
- **{HYP}** ... {hyperbolic calculation menu}
- **{ANGL}** ... {menu for angle/coordinate conversion, DMS input/conversion}
- **{STAT}** ... {paired-variable statistical estimated value menu}
- **{FMEM}** ... {function memory menu}
- **{ZOOM}** ... {zoom function menu}
- **{SKTCH}** ... {sketch function menu}
- **{PICT}** ... {picture memory menu}
- **{SYBL}** ... {symbol menu}
- **{° ' ''}** ... {DMS}
- **{← ° ' ''}** ... {DMS conversion}
- **{ENG}/{← ENG}** ... {ENG conversion}



The option (OPTN) menu does not appear during binary, octal, decimal, and hexadecimal calculations.



The following shows the function menus that appear under other conditions.

• **Option Menu when a number table value is displayed in the GRPH · TBL or RECUR Mode**

- {LMEM} ... {list memory menu}
- { \leftarrow° ' " }/{ENG}/{ \leftarrow ENG}

• **Option Menu in the CAS or ALGEBRA or TUTOR Mode**

- { ∞ } ... {infinity}
- {Abs} ... {absolute value}
- {x!} ... {factorial}
- {sign} ... {signum function}
- {HYP}/{FMEM}

The meanings of the option menu items are described in the sections that cover each mode.



1-5 Variable Data (VARS) Menu

To recall variable data, press **[VARS]** to display the variable data menu.

**{V-WIN}/{FACT}/{STAT}/{GRPH}/{DYNA}/
{TABL}/{RECR}/{EQUA}*1}**

See “8-7 Program Mode Command List” for details on the variable data (VARS) menu.

• V-WIN — Recalling View Window values

- **{Xmin}/{Xmax}/{Xscale}/{Xdot}**
... X-axis {minimum value}/{maximum value}/{scale}/{dot value*2}
- **{Ymin}/{Ymax}/{Yscale}**
... Y-axis {minimum value}/{maximum value}/{scale}
- **{Tθmin}/{Tθmax}/{Tθptch}**
... T, θ {minimum value}/{maximum value}/{pitch}
- **{R-Xmin}/{R-Xmax}/{R-Xscl}/{R-Xdot}**
... Dual Graph right graph X-axis {minimum value}/{maximum value}/{scale}/
{dot value*2}
- **{R-Ymin}/{R-Ymax}/{R-Yscl}**
... Dual Graph right graph Y-axis {minimum value}/{maximum value}/{scale}
- **{R-Tmin}/{R-Tmax}/{R-Tpch}**
... Dual Graph right graph T, θ {minimum value}/{maximum value}/{pitch}

• FACT — Recalling zoom factors

- **{Xfact}/{Yfact}**
... {x-axis factor}/{y-axis factor}



*1 The EQUA item appears only when you access the variable data menu from the RUN • MAT or PRGM Mode.

The variable data menu does not appear if you press **[VARS]** while binary, octal, decimal, or hexadecimal is set as the default number system.

*2 The dot value indicates the display range (Xmax value – Xmin value) divided by the screen dot pitch (126).

The dot value is normally calculated automatically from the minimum and maximum values. Changing the dot value causes the maximum to be calculated automatically.



• STAT — Recalling statistical data

- **{n}** ... {number of data}
- **{X}** ... {single-variable, paired-variable x -data}
 - $\{\bar{x}\}/\{\Sigma x\}/\{\Sigma x^2\}/\{x_{on}\}/\{x_{on-1}\}/\{\min X\}/\{\max X\}$
 ... {mean}/{sum}/{sum of squares}/{population standard deviation}/{sample standard deviation}/{minimum value}/{maximum value}
- **{Y}** ... {paired-variable y -data}
 - $\{\bar{y}\}/\{\Sigma y\}/\{\Sigma y^2\}/\{\Sigma xy\}/\{y_{on}\}/\{y_{on-1}\}/\{\min Y\}/\{\max Y\}$
 ... {mean}/{sum}/{sum of squares}/{sum of products of x -data and y -data}/
 {population standard deviation}/{sample standard deviation}/{minimum value}/
 {maximum value}
- **{GRAPH}** ... {graph data menu}
 - $\{a\}/\{b\}/\{c\}/\{d\}/\{e\}$
 ... {regression coefficient and multinomial coefficients}
 - $\{r\}/\{r^2\}$
 ... {correlation coefficient}
 - **{Q1}/{Q3}**
 ... {first quartile}/{third quartile}
 - **{Med}/{Mod}**
 ... {median}/{mode} of input data
 - **{H-Strt}/{H-ptch}**
 ... histogram {start division}/{pitch}
- **{PTS}** ... {summary point data menu}
 - $\{x_1\}/\{y_1\}/\{x_2\}/\{y_2\}/\{x_3\}/\{y_3\}$... {coordinates of summary points}



• GRPH — Recalling Graph Functions

- $\{Y_n\}/\{r_n\}$
... {rectangular coordinate or inequality function}/{polar coordinate function}
- $\{Xt_n\}/\{Yt_n\}$
... parametric graph function $\{Xt\}/\{Yt\}$
- $\{Xn\}$... $\{X=\text{constant}\}$ graph function
(Press these keys before inputting a value to specify a storage area.)

• DYNA — Recalling Dynamic Graph Set Up Data

- $\{\text{Start}\}/\{\text{End}\}/\{\text{Pitch}\}$
... {coefficient range start value}/{coefficient range end value}/{coefficient value increment}

• TABL — Recalling Table & Graph Set Up and Content Data

- $\{\text{Start}\}/\{\text{End}\}/\{\text{Pitch}\}$
... {table range start value}/{table range end value}/{table value increment}
- $\{\text{Result}^{*1}\}$
... {matrix of table contents}



*1 The Result item appears only when the TABL menu is displayed in the RUN•MAT or PRGM Mode.



• RECR — Recalling Recursion Formula^{*1}, Table Range, and Table Content Data

- **{FORM}** ... {recursion formula data menu}
 - $\{a_n\}/\{a_{n+1}\}/\{a_{n+2}\}/\{b_n\}/\{b_{n+1}\}/\{b_{n+2}\}/\{c_n\}/\{c_{n+1}\}/\{c_{n+2}\}$
... $\{a_n\}/\{a_{n+1}\}/\{a_{n+2}\}/\{b_n\}/\{b_{n+1}\}/\{b_{n+2}\}/\{c_n\}/\{c_{n+1}\}/\{c_{n+2}\}$ expressions
- **{RANGE}** ... {table range data menu}
 - **{R-Strt}/ {R-End}**
... table range {start value}/{end value}
 - $\{a_0\}/\{a_1\}/\{a_2\}/\{b_0\}/\{b_1\}/\{b_2\}/\{c_0\}/\{c_1\}/\{c_2\}$
... $\{a_0\}/\{a_1\}/\{a_2\} \{b_0\}/\{b_1\}/\{b_2\}/\{c_0\}/\{c_1\}/\{c_2\}$ value
 - **$\{a_n\text{Strt}\}/\{b_n\text{Strt}\}/\{c_n\text{Strt}\}$**
... origin of $\{a_n\}/\{b_n\}/\{c_n\}$ recursion formula convergence/divergence graph (WEB graph)
- **{Result^{*2}}** ... {matrix of table contents^{*3}}

• EQUA — Recalling Equation Coefficients and Solutions^{*4 *5}

- **{S-Rslt}/ {S-Coeff}**
... matrix of {solutions}/{coefficients} for linear equations^{*6}
- **{P-Rslt}/ {P-Coeff}**
... matrix of {solution}/{coefficients} for a high degree equation



^{*1} An error occurs when there is no function or recursion formula numeric table in memory.

^{*2} "Result" is available only in the RUN • MAT and PRGM Modes.

^{*3} Table contents are stored automatically in Matrix Answer Memory (MatAns).

^{*4} Coefficients and solutions are stored automatically in Matrix Answer Memory (MatAns).

^{*5} The following conditions cause an error.

- When there are no coefficients input for the equation
- When there are no solutions obtained for the equation

^{*6} Coefficient and solution memory data for a linear equation cannot be recalled at the same time.



1-6 Program (PRGM) Menu

To display the program (PRGM) menu, first enter the **RUN • MAT** or **PRGM** Mode from the Main Menu and then press **[SHIFT] [VARS]** (PRGM). The following are the selections available in the program (PRGM) menu.

- **{Prog}** {program recall}
- **{JUMP}** {jump command menu}
- **{?}** {input prompt}
- **{▲}** {output command}
- **{I/O}** {I/O control/transfer command menu}
- **{IF}** {conditional jump command menu}
- **{FOR}** {loop control command menu}
- **{WHILE}** {conditional loop control command menu}
- **{CTRL}** {program control command menu}
- **{LOGIC}** {logical operation command menu}
- **{CLR}** {clear command menu}
- **{DISP}** {display command menu}
- **{:}** {multistatement connector}

The following function key menu appears if you press **[SHIFT] [VARS]** (PRGM) in the **RUN • MAT** Mode or the **PRGM** Mode while binary, octal, decimal, or hexadecimal is set as the default number system.

- **{Prog}/{JUMP}/{?}/{▲}/{:}**
- **{= ≠ <}** {relational operator menu}

The functions assigned to the function keys are the same as those in the **Comp** Mode.

For details on the commands that are available in the various menus you can access from the program menu, see “8. Programming”.



1-7 Using the Set Up Screen

The mode's set up screen shows the current status of mode settings and lets you make any changes you want. The following procedure shows how to change a set up.

• To change a mode set up

1. Select the icon you want and press **EXE** enter a mode and display its initial screen. Here we will enter the RUN•MAT Mode.
2. Press **CTRL** **F3** (SET UP) to display the mode's SET UP screen.
 - This SET UP screen is just one possible example. Actual SET UP screen contents will differ according to the mode you are in and that mode's current settings.

```

Mode           :Comp
Func Type      :Y=
Draw Type      :Connect
Derivative      :Off
Angle          :Rad
Complex Mode    :Real
Coord          :On
Comf|Dec|Hex|Bin|Oct|

```

```

Angle          :Rad
Complex Mode    :Real
Coord          :On
Grid           :Off
Axes           :On
Label          :Off
Display        :Norm1
Fix|Sci|Norm|Eng|

```

3. Use the **▲** and **▼** cursor keys to move the highlighting to the item whose setting you want to change.
4. Press the function key (**F1** to **F6**) that is marked with the setting you want to make.
5. After you are finished making any changes you want, press **ESC** to return to the initial screen of the mode.

■ SET UP Screen Function Key Menus

This section details the settings you can make using the function keys in the SET UP display. indicates default setting.

• Mode (calculation/binary, octal, decimal, hexadecimal mode)

- **{Comp}** ... {arithmetic calculation mode}
- **{Dec}/{Hex}/{Bin}/{Oct}**
... {decimal}/{hexadecimal}/{binary}/{octal}



• Func Type (graph function type)

Pressing one of the following function keys also switches the function of the $\boxed{X, \theta, T}$ key.

- $\{\underline{Y=}\}/\{\underline{r=}\}/\{\underline{\text{Parm}}\}/\{\underline{X=c}\}$
... {rectangular coordinate}/{polar coordinate}/{parametric coordinate}/
{X = constant} graph
- $\{\underline{Y>}\}/\{\underline{Y<}\}/\{\underline{Y\geq}\}/\{\underline{Y\leq}\}$
... $\{y>f(x)\}/\{y<f(x)\}/\{y\geq f(x)\}/\{y\leq f(x)\}$ inequality graph

• Draw Type (graph drawing method)

- $\{\underline{\text{Con}}\}/\{\underline{\text{Plot}}\}$
... {connected points}/{unconnected points}

• Derivative (derivative value display)

- $\{\underline{\text{On}}\}/\{\underline{\text{Off}}\}$
... {display on}/{display off} while Graph-to-Table, Table & Graph, and Trace are being used

• Angle (default angle unit)

- $\{\underline{\text{Deg}}\}/\{\underline{\text{Rad}}\}/\{\underline{\text{Gra}}\}$
... {degrees}/{radians}/{grads}

• Complex Mode

- $\{\underline{\text{Real}}\}$... {calculation in real number range only}
- $\{a + bi\}/\{r \cdot e^{\theta i}\}$
... {rectangular format}/{polar format} display of a complex calculation

• Coord (graph pointer coordinate display)

- $\{\underline{\text{On}}\}/\{\underline{\text{Off}}\}$
... {display on}/{display off}

• Grid (graph gridline display)

- $\{\underline{\text{On}}\}/\{\underline{\text{Off}}\}$
... {display on}/{display off}

• Axes (graph axis display)

- $\{\underline{\text{On}}\}/\{\underline{\text{Off}}\}$
... {display on}/{display off}

• Label (graph axis label display)

- $\{\underline{\text{On}}\}/\{\underline{\text{Off}}\}$
... {display on}/{display off}



- **Display (display format)**

- $\{\text{Fix}\}/\{\text{Sci}\}/\{\text{Norm}\}/\{\text{Eng}\}$

... {fixed number of decimal places specification}/{number of significant digits specification}/{normal display setting}/{Engineering Mode}

- **Stat Wind (statistical graph view window setting method)**

- $\{\text{Auto}\}/\{\text{Man}\}$

... {automatic}/{manual}

- **Reside List (residual calculation)**

- $\{\text{None}\}/\{\text{LIST}\}$

... {no calculation}/{list specification for the calculated residual data}

- **List File (list file display settings)**

- $\{\text{FILE}\}$... {settings of list file on the display}

- **Variable (table generation and graph draw settings)**

- $\{\text{Rang}\}/\{\text{LIST}\}$

... {use table range}/{use list data}

- **Graph Func (function display during graph drawing and trace)**

- $\{\text{On}\}/\{\text{Off}\}$

... {display on}/{display off}

- **Dual Screen (Dual Screen Mode status)**

- $\{\text{T+G}\}/\{\text{G+G}\}/\{\text{GtoT}\}/\{\text{Off}\}$

... {graph on one side and numeric table on the other side of Dual Screen}/
{graphing on both sides of Dual Screen}/{graph on one side and numeric table
on the other side of Dual Screen}/{Dual Screen off}

- **Simul Graph (simultaneous graphing mode)**

- $\{\text{On}\}/\{\text{Off}\}$

... {simultaneous graphing on (all graphs drawn simultaneously)}/{simultaneous
graphing off (graphs drawn in area numeric sequence)}

- **Background (graph display background)**

- $\{\text{None}\}/\{\text{PICT}\}$

... {no background}/{graph background picture specification}



- **Dynamic Type (Dynamic Graph locus setting)**
 - $\{\text{Cnt}\}/\{\text{Stop}\}$
... {non-stop (continuous)}/{automatic stop after 10 draws}
- **Σ Display (Σ value display in recursion table)**
 - $\{\text{On}\}/\{\text{Off}\}$
... {display on}/{display off}
- **Slope (display of derivative at current pointer location in implicit function graph)**
 - $\{\text{On}\}/\{\text{Off}\}$
... {display on}/{display off}
- **Answer Type (result range specification)**
 - $\{\text{Real}\}/\{\text{Cplx}\}$
... {real number}/{complex number} range result
- **H-Copy (screen shot settings)**
 - $\{\text{Direct}\}/\{\text{Mem}\}$
... {direct send}/{store in memory}



1-8 When you keep having problems...

If you keep having problems when you are trying to perform operations, try the following before assuming that there is something wrong with the calculator.

■ Getting the Calculator Back to its Original Mode Settings

1. From the Main Menu, enter the SYSTEM Mode.
2. Press **[F5]** (Reset).
3. Press **[F1]** (S/U), and then press **[EXE]** (Yes).
4. Press **[MENU]** to return to the Main Menu.

Now enter the correct mode and perform your calculation again, monitoring the results on the display.


■ In Case of Hang Up

- Should the unit hang up and stop responding to input from the keyboard, press the P button on the back of the calculator to reset the calculator to its initial defaults (see page α -6-1). Note, however, that this may clear all the data in calculator memory.




■ Low Battery Message

If either of the following messages appears on the display, immediately turn off the calculator and replace main batteries or the back up battery as instructed.

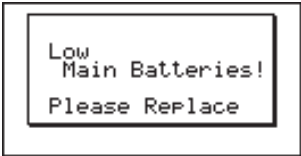

Low
Main Batteries!
Please Replace

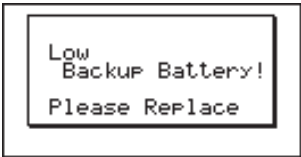

Low
Backup Battery!
Please Replace

If you continue using the calculator without replacing main batteries, power will automatically turn off to protect memory contents. Once this happens, you will not be able to turn power back on, and there is the danger that memory contents will be corrupted or lost entirely.



You will not be able to perform data communications operations after the low battery message appears.

If main batteries and the back up battery go low at the same time (indicated when both of the messages described above appear), replace the back up battery first and then replace the main batteries.