

GUIDELINES LAID DOWN BY FCC RULES FOR USE OF THE UNIT IN THE U.S.A. (not applicable to other areas).

NOTICE

 
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications to the product not expressly approved by CASIO could void the user's authority to operate the product.



Batterij niet weggooien,
maar inleveren als
KCA



CASIO ELECTRONICS CO., LTD.
Unit 6, 1000 North Circular Road,
London NW2 7JD, U.K.

 
Important!

Please keep your manual and all information handy for future reference.


BEFORE USING THE CALCULATOR FOR THE FIRST TIME...

This calculator does not contain any main batteries when you purchase it. Be sure to perform the following procedure to load batteries, reset the calculator, and adjust the color contrast before trying to use the calculator for the first time.



1. Push the battery compartment cover on the back of the calculator in the direction noted in the illustration and remove it.

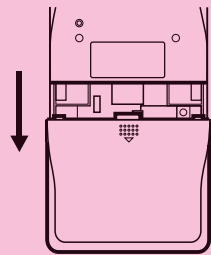

 2. Load the two batteries that come with calculator.
 - Make sure that the positive (+) and negative (–) ends of the batteries are facing correctly.

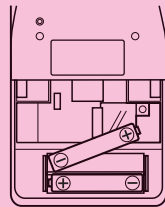

  3. Slide the battery compartment cover back into place, and then press the RESET button on the back of the calculator with a thin, pointed object. When you do, the RESET screen illustrated nearby appears.

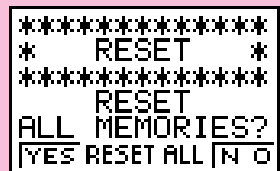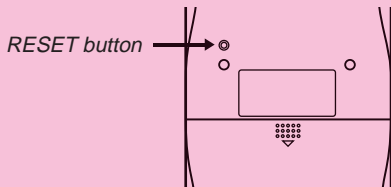


F1

4. Press **F1** (YES) to reset the calculator.



 5. Press **MENU**.

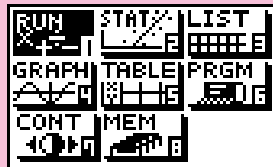

6. Use the cursor keys (**▲**, **▼**, **◀**, **▶**) to select the **CONT** icon and press **EXE** or simply press **7** to display the contrast adjustment screen.



7. Press **◀** to make the figure on the screen lighter or **▶** to make them darker.

8. After getting the contrast the way you want it, press **MENU** to return to the main menu.