



## READ THIS!

- Thank you for selecting this CASIO product.
- Before using the instrument, be sure to carefully read through the instructions contained in this leaflet.
  - Please keep all information for future reference.

- ⚠ DANGER** Indicates something that creates a major risk of death or serious personal injury.
- ⚠ WARNING** Indicates something that creates a risk of death or serious personal injury.
- ⚠ CAUTION** Indicates something that creates a risk of minor personal injury or physical damage.
- Symbol Examples**
- ⚠** This triangle symbol (⚠) means that the user should be careful. (The example at left indicates electrical shock caution.)
- Ⓞ** This circle with a line through it (Ⓞ) means that the indicated action must not be performed. Indications within or nearby this symbol are specifically prohibited. (The example at left indicates that disassembly is prohibited.)
- Ⓜ** The black dot (Ⓜ) means that the indicated action must be performed. Indications within this symbol are actions that are specifically instructed to be performed. (The example at left indicates that the power plug must be unplugged from the electrical socket.)

If this product is used by a child or in the presence of children, always take care to ensure that adequate adult supervision is provided.

Do not use the stand, soft case, bench, pedals or covers for anything other than the specified purpose.

**⚠ DANGER**

### Battery Precautions

- Do not allow a battery to come into contact with fresh water, salt water, or any other moisture. Do not use a battery that is wet. Doing so creates the risk of battery overheating, fire, and rupture.
- Observe the precautions below in order to avoid battery overheating, fire, and rupture.
  - Do not expose a battery to fire or heat.
  - Load a battery with its poles (plus (+) and minus (-)) facing correctly.
  - Do not carry or store a battery together with necklaces, coins, or other metal objects.
  - Do not try to disassemble or modify a battery, pierce it with a needle, subject it to strong impact (by stepping on it etc.), or apply solder directly to it.
  - Do not peel the external decorative sticker from a battery.
  - Do not put a battery into a microwave oven, dryer, high-pressure vessel, etc.
  - Always use only the specified type of battery.
- Immediately after noticing any fluid leak, abnormal odor, overheating, discoloration, deformation or other battery abnormality, very carefully remove the battery from the product and/or charger. Keep the removed battery away from fire. Do not use a battery exhibiting any abnormality. Continued use creates the risk of battery overheating, fire, and rupture.
- Do not use or leave a battery in a location exposed to direct sunlight, in an automobile parked outside, near open flame, a stove, or in any location subjected to high heat. Such conditions create the risk of battery overheating, fire, and rupture.
- Should fluid from a battery get on your skin or clothing, immediately rinse it off with clean water. Fluid creates the risk of skin irritation. Battery fluid getting into the eyes creates the risk of eyesight loss, etc. Immediately rinse the eyes and then contact a physician.
- Use only the specified charger to charge the rechargeable nickel metal hydride batteries. Using a non-specified charger creates the risk of abnormal charging, overheating, fire, and explosion.
- Do not use rechargeable nickel metal hydride batteries that do not finish charging even if charged for longer than the normal specified time. This could indicate that the batteries have deteriorated and cannot perform as expected, which creates the risk of overheating, fire, and explosion.
- Use a set of fully charged nickel-metal hydride batteries. Make sure that each of the batteries in a set is fully charged as soon as possible before or after the other batteries are charged.

**⚠ WARNING**

### AC Adaptor and Power Cord

- To prevent fire and electric shock from the AC adaptor and power cord, be sure to observe the precautions below.
  - Use only the specified type of AC adaptor.
  - Use only the included power cord.
  - Use the AC adaptor only with the device specified for it.
  - Use the included power cord with this product only.
  - Do not plug the power cord into an outlet with the wrong voltage rating.
  - Do not plug into an overloaded extension cord or power outlet.
  - Do not cover the power cord with a blanket or other material during use, and keep it away from heating devices.
  - Do not place heavy objects on the power cord and do not leave it bundled during use.
  - Do not subject a power cord to heat or attempt to modify it, and avoid damaging it.
  - Do not subject the power cord to excessive bending, twisting, or pulling.
  - Make sure the power cord is not pinched between the wall and the rack or table where the product is located, and never cover the power cord with a cushion or other object.
  - Should the AC adaptor or power cord become damaged, contact a CASIO Service Center.
  - Do not touch the plug with wet hands.
- When leaving the product unattended, unplug the AC adaptor and put the product in a place that is away from animals and pets. Pets chewing on the AC adaptor or pet urine can cause shorting, which creates the risk of fire.

**⚠ WARNING**

- In the case of a lightning storm, do not touch the device plugged into the power outlet.
  - Lightning creates the risk of electric shock.

### Storage and Operation Locations

- Do not store or use the product in any of the locations described below.
  - Doing so creates the risk of fire and electric shock.
  - Areas subjected to large amounts of moisture and dust
  - Food preparation areas, near a humidifier, or in areas where the product is exposed to oil smoke or water vapor
  - Near a heating device, on an electric carpet, in a location exposed to direct sunlight, in a car parked outside, or any other area where the product is subjected to high temperatures.
- Do not locate the product on an unsteady platform, on an uneven surface, or in any other unstable location. Take care to avoid locations such as folded carpeting, on top of the power cord, etc. Be sure to secure the product to the stand using screws.
- Do not place heavy objects on the product. Dropping and tipping over create the risk of personal injury.
- Do not climb up on the product and stand. (Stand-compatible models only.)
- Do not climb up on the product or rock it back and forth. Particular care is required in areas where young children are present. Doing so creates the risk of the stand falling over.

### Abnormalities (Smoke, Odor, Heat Generation, etc.)

- Do not use the product if it is emitting smoke, odor, heat, or exhibiting any other abnormality. Do not use the product after it has been dropped or otherwise damaged. Doing so creates the risk of fire and electric shock. Immediately perform the steps below.
  1. Turn off power.
  2. If you are using an AC adaptor, unplug its power plug from the power outlet.
  3. Contact your original retailer or a CASIO Service Center.

### Display Screen (Screen-equipped models only)

- Do not press the LCD or subject it to strong impact. Doing so can cause the LCD glass to crack, creating the risk of personal injury.
- Should the LCD become cracked, never touch any of the liquid inside. LCD liquid getting on the skin creates the risk of skin irritation. Should LCD liquid get into your mouth, immediately rinse your mouth out and contact your physician. Should LCD liquid get in your eyes or on your skin, rinse with clean water and then contact your physician.

### Disassembly and Modification

- Do not attempt any disassembly or modification. For any internal inspection, adjustment, or repair, contact your original retailer or a CASIO Service Center. Doing so creates the risk of electric shock, burn injury, and personal injury.

### Suffocation and Choking Risks

- Do not allow anyone to play with the plastic bags used for product packaging. Plastic bags create the risk of suffocation when placed over the head, when swallowed, etc. Particular care is required in areas where young children are present.

### Avoiding Water and Foreign Matter

- Do not allow water, other liquids (sports drinks, seawater, animal or pet urine, etc.), or foreign objects (metal fragments, etc.) to get into the product or the AC adaptor. Should any such matter get into the product, immediately perform the steps below. Continued use creates the risk of fire and electric shock.
  1. Turn off power.
  2. If you are using an AC adaptor, unplug its power plug from the power outlet.
  3. Contact your original retailer or a CASIO Service Center.

**⚠ WARNING**

### Display Screen (Screen-equipped models only)

- Do not press the LCD or subject it to strong impact. Doing so can cause the LCD glass to crack, creating the risk of personal injury.
- Should the LCD become cracked, never touch any of the liquid inside. LCD liquid getting on the skin creates the risk of skin irritation. Should LCD liquid get into your mouth, immediately rinse your mouth out and contact your physician. Should LCD liquid get in your eyes or on your skin, rinse with clean water and then contact your physician.

### Disassembly and Modification

- Do not attempt any disassembly or modification. For any internal inspection, adjustment, or repair, contact your original retailer or a CASIO Service Center. Doing so creates the risk of electric shock, burn injury, and personal injury.

### Suffocation and Choking Risks

- Do not allow anyone to play with the plastic bags used for product packaging. Plastic bags create the risk of suffocation when placed over the head, when swallowed, etc. Particular care is required in areas where young children are present.

### Avoiding Water and Foreign Matter

- Do not allow water, other liquids (sports drinks, seawater, animal or pet urine, etc.), or foreign objects (metal fragments, etc.) to get into the product or the AC adaptor. Should any such matter get into the product, immediately perform the steps below. Continued use creates the risk of fire and electric shock.
  1. Turn off power.
  2. If you are using an AC adaptor, unplug its power plug from the power outlet.
  3. Contact your original retailer or a CASIO Service Center.

### Do not locate any of the items listed below on top of or next to the product, AC adaptor, or keyboard cover.

- Containr holding water or other liquid (vase, flower pot, cup, cosmetics, medicine, etc.)
- Small metal items (hairpins, sewing needles, coins, etc.)
- Flammable items
- Candies or other flame producing item

Liquid spilling into the product creates the risk of fire and electric shock. Should any foreign matter get into the product, immediately perform the steps below.

1. Turn off power.
2. If you are using an AC adaptor, unplug its power plug from the power outlet.
3. Contact your original retailer or a CASIO Service Center.

### This Product

- Do not throw the product into fire. Doing so can cause it to explode, creating the risk of fire and personal injury.
- Do not drop the product and avoid subjecting it to impact. Continued use of the product while it is damaged creates the risk of fire and electric shock. Should the product become damaged, perform the steps below.
  1. Turn off power.
  2. If you are using the AC adaptor for power, unplug the power plug from the wall outlet.
  3. Contact a CASIO Service Center.
- When moving this product, make sure to use both hands to pick it up. This product should always be moved by two people, one at each end, after first disconnecting any cables from the product. This applies particularly to products with a stand. Failure to do so creates the risk of personal injury to those around you and other unforeseen accidents.

### Pedals

- Do not put your fingers or hands into moving parts of the pedal unit. Doing so may result in injury, product fault or damage.

### Keyboard Cover

- Always observe the following precautions.
  - Always use both hands when opening or closing the keyboard cover.
  - When opening or closing the keyboard cover, take care to ensure that you do not trap your own fingers or hand, or those of people nearby (especially small children) in the gap between the keyboard cover and the product body.
  - Only use this product when the keyboard cover is fully open.

### Strap Lock (Guitar Strap Compatible Models Only)

- When handling the strap lock, take care to avoid swallowing by small children. Store it in a place away from small children. Should the strap lock lever be accidentally swallowed, contact a physician immediately.

**⚠ WARNING**

- After attaching a guitar strap, check the strap lock to make sure that it is securely attached from above. Do not use a damaged strap lock. Failure to attach the strap lock or an improperly attached strap lock can cause the guitar strap to come off, creating the risk of dropping of the product resulting in product damage and personal injury.

### Commercially Available Guitar Strap (Guitar Strap Compatible Models Only)

- Do not pick up the product, transport it, or swing it around by the commercially available guitar strap. Doing so can cause the guitar strap to come off, creating the risk of dropping the product, resulting in damage or personal injury.

### Felt and Nylon Covers

- Do not use the cover close to an open flame. Doing so could cause the cover to catch fire.

**⚠ CAUTION**

### Battery Precautions

- Observe the precautions below. Failure to do so can cause a battery to rupture, creating the risk of fire, personal injury, and soiling of nearby objects by leaking fluid.
  - Never allow a battery to become shorted.
  - Do not mix old and new batteries.
  - Do not mix different battery types.
  - Do not charge a non-rechargeable battery.
  - If you do not plan to use the product for a long time, remove batteries.
  - Replace the batteries as soon as possible after they go dead.
  - Do not use a battery whose cover has been peeled off.
- Do not use a leaking battery. Doing so creates the risk of fire and electric shock. Immediately stop using the product and contact your original retailer or a CASIO Service Center.
- Keep batteries away from children. During use, make sure that small children are unable to remove batteries from the product.
- Do not leave a battery near areas used by pets. Pets chewing on a battery creates the risk of fluid leaking, overheating, fire, and rupture.

### AC Adaptor and Power Cord

- To prevent fire and electric shock from the AC adaptor and power cord, be sure to observe the precautions below.
  - Grasp the power plug when unplugging it from the wall outlet.
  - Do not use detergent when cleaning the power cord, especially the power plug and jack parts.
  - Insert the power plug into the outlet as far as it will go.
  - If you do not plan to use the product for a long time, unplug from the power outlet!
  - At least once a year, unplug the power plug from the power outlet and use a dry cloth to wipe away any dust buildup from the area between the prongs of the plug.
  - Before moving the product, turn it off and unplug from the power outlet.

**⚠ CAUTION**

### User Maintenance

- Before cleaning the product, turn off power and unplug the AC adaptor from the power outlet. Failure to do so creates the risk of electric shock. Leaving the AC adaptor plugged in creates the risk of damage to the power cord, fire, and electric shock.

### Connections

- Connect only specified devices and items to connectors. Do not insert foreign objects (pieces of metal, pencils, etc.) into connections. Connecting to other devices and items creates the risk of fire and electric shock.

### Volume Level

- Do not listen at very loud volumes for long periods. High volume settings can damage hearing. Particular care is required concerning this precaution when using headphones.

### Backing Up Important Data

- Always keep backup copies of important data by transferring it to a computer or other storage device. Note that data can be deleted in the case of product malfunction, repair, etc.
  - Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.

### Correct Stand Assembly (Stand-compatible models only)

- Always use the screws provided. Using screws other than those specified could cause lead to damage or an accident.
- Take care not to trap your hand or other body parts during assembly.
  - Perform assembly as instructed in the user documentation.
  - Be sure to adjust the height using the adjustable leg.
  - Make sure the instrument is correctly mounted on the stand.
  - When placing the instrument on the stand, take care to avoid pinching your fingers between them.
- Spread felt or some other type of cloth under the stand to avoid direct contact between the rubber on its legs and the floor surface.
- Be sure to observe the precautions below.
  - Perform assembly as instructed in the user documentation.
  - Be sure to adjust the height using the adjustable leg.
  - Make sure the instrument is correctly mounted on the stand.
  - When placing the instrument on the stand, take care to avoid pinching your fingers between them.
- This product must always be set up and moved by at least 2 adults. Two or more people should work together when mounting or moving the instrument.
- When mounting or moving the instrument, do not drag or tilt the stand. Failure to do so can cause the stand to tip over and the instrument to fall, creating the risk of personal injury.

### Stand Safety Precautions (Stand-compatible models only)

- Set up this product correctly before using it. If the screws are not securely tightened or the product is not attached in the correct position, the stand could tip over, resulting in the product falling and causing injury.
- The stand screws may loosen due to factors such as vibration and changes in temperature or humidity. Check for loose screws before playing. If any of the screws are loose, tighten them securely. Failing to do so could result in the product falling over and causing injury.
- Should you notice any unsteadiness, missing screws, loose screws, or any other problems while playing, contact your original retailer or a CASIO Service Center. Periodically check for loose screws. Securely tighten loose screws. Failure to do so can cause the stand to tip over and the instrument to fall, creating the risk of personal injury.

**⚠ CAUTION**

### Health Precautions (Lighting Keyboard models only)

- It has been reported that in very rare cases, exposure to strong light or flashing light can cause momentary muscle spasms, loss of consciousness, or other symptoms.
  - Individuals who have experienced such symptoms should consult with a physician before using this product.
  - Use this product in a brightly lit location.
- Should anyone experience symptoms like the ones described here, immediately stop using the product and contact a physician.

### Bench (Bench-compatible Models Only)

- Spread felt or some other type of cloth under the bench to avoid direct contact between the rubber on its legs and the floor surface. Direct contact between the rubber and flooring can cause discoloration, marring, or other damage.

### Soft Case (Soft-Case-Compatible Models Only)

- When relocating the product, always ensure that the fastener is closed beforehand. Failing to do so could result in the product falling and causing damage or injury.

### Small Components

- Handle small parts with care to ensure that they are not swallowed by small children. If a part is accidentally swallowed, immediately consult a physician.

### This Product

- Do not insert your hand or fingers into gaps in the product. Doing so creates the risk of personal injury, and malfunction of and damage to the product.
- When turning this product over or standing it on end, always disconnect all the plugs on the back of the product. Striking the plugs against a table or the floor could damage the connectors.

**⚠ CAUTION**

### Battery Precautions

- Observe the precautions below. Failure to do so can cause the battery to explode or leak flammable liquid or gas.
  - Use only the type of battery that is specified for this product.
  - Do not burn a battery or dispose of it in an incinerator, or by mechanical crushing or cutting.
  - Do not subject a battery to excessively high or low temperatures during use, storage, or transport.
  - Do not subject a battery to excessively low barometric pressure during use, storage, or transport.
  - Allow the battery to cool down before replacing it. Failure to do so could result in a burn or other injury.

### Battery Precautions

- Observe the precautions below. Failure to do so can cause the battery to explode or leak flammable liquid or gas.
  - Use only the type of battery that is specified for this product.
  - Do not burn a battery or dispose of it in an incinerator, or by mechanical crushing or cutting.
  - Do not subject a battery to excessively high or low temperatures during use, storage, or transport.
  - Do not subject a battery to excessively low barometric pressure during use, storage, or transport.
  - Allow the battery to cool down before replacing it. Failure to do so could result in a burn or other injury.

**⚠ CAUTION**

### Battery Precautions

- Observe the precautions below. Failure to do so can cause the battery to explode or leak flammable liquid or gas.
  - Use only the type of battery that is specified for this product.
  - Do not burn a battery or dispose of it in an incinerator, or by mechanical crushing or cutting.
  - Do not subject a battery to excessively high or low temperatures during use, storage, or transport.
  - Do not subject a battery to excessively low barometric pressure during use, storage, or transport.
  - Allow the battery to cool down before replacing it. Failure to do so could result in a burn or other injury.

### Registered Trademarks and Trademarks

The terms below are registered trademarks or trademarks of their respective owners.

- enloop is a trademark of Panasonic Corporation.

### Copyrights

You are allowed to use recordings for your own personal use. Any reproduction of an audio or music format file, without the permission of its copyright holder, is strictly prohibited under copyright laws and international treaties. Also, making such files available on the Internet or distributing them to third parties, regardless of whether such activities are conducted with or without compensation, is strictly prohibited under copyright laws and international treaties. CASIO COMPUTER CO., LTD. shall not be held in any way liable for any use of this Digital Keyboard that is illegal under copyright laws.

Company and product names used in this manual may be registered trademarks of others.

### NOTICE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### FCC CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Manufacturer: CASIO COMPUTER CO., LTD. 6-2, Hon-machi 1-chome, Shibuya-ku, Tokyo 151-8543, Japan

Responsible within the European Union: Casio Europe GmbH Casio-Platz 1, 22848 Norderstedt, Germany www.casio-europe.com

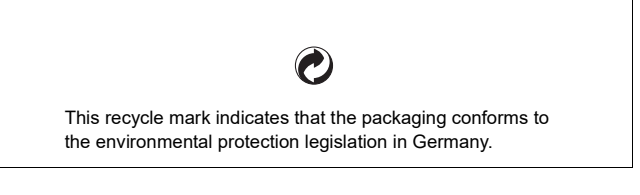

Manufacturer: CASIO COMPUTER CO., LTD. 6-2, Hon-machi 1-chome, Shibuya-ku, Tokyo 151-8543, Japan

Responsible within the United Kingdom: Casio Electronics Co. Ltd. 10 Norwich Street, London, ECA4 1BD, U.K. www.casio.co.uk

Spanish

## ¡LEA ESTO!

### Precauciones de seguridad

Gracias por seleccionar este producto CASIO.

- Antes de utilizar el instrumento, asegúrese de leer atentamente las instrucciones indicadas en este folleto.
- Por favor guarde toda la información para futuras consultas.

**⚠ PELIGRO** Indica una situación que implica riesgo inminente de muerte o lesiones graves.

**⚠ ADVERTENCIA** Indica una situación que implica riesgo de muerte o lesiones graves.

**⚠ PRECAUCIÓN** Indica una situación que implica riesgo de lesiones o daños materiales menores.

### Ejemplos de símbolos

- ⚠ Este símbolo triangular (⚠) significa que el usuario debe tener cuidado. (El ejemplo de la izquierda indica precaución de descargas eléctricas.)
- Ⓞ Este círculo con una línea en diagonal (Ⓞ) indica una acción prohibida. Las indicaciones dentro o cerca de este símbolo están colocadas desde arriba. (El ejemplo de la izquierda indica que el desmontaje está prohibido.)
- Ⓜ El círculo negro (Ⓜ) indica una acción obligatoria. Las indicaciones que aparecen dentro de este símbolo son las acciones que se deben realizar. (En el ejemplo de la izquierda se indica que el enchufe se debe desconectar del tomacorriente.)

Este producto no debe ser utilizado por niños ni en presencia de niños sin la supervisión de un adulto.

No utilice el soporte, el estuche blando, el banco, los pedales ni las tapas para ningún otro fin que no sea el especificado.

**⚠ PELIGRO**

### Precauciones con las pilas

- No deje que la batería entre en contacto con agua dulce, agua salada u otras fuentes de humedad. No utilice una batería mojada. De lo contrario, existe el riesgo de sobrecalentamiento, incendio y rotura de la batería.
  - No exponga las baterías al fuego o calor.
  - Instale la pila con sus polos (positivo (+) y negativo (-)) correctamente orientados.
  - No transporte ni guarde las baterías junto con collares, monedas u otros objetos metálicos.
  - No intente desarmar ni modificar una batería, perforarla con una aguja, exponerla a fuertes impactos (pisándola, etc.) ni aplicar soldadura directamente a la misma.
  - No despegue la etiqueta decorativa externa de la batería.
  - No ponga la batería en un horno de microondas, secadora, recipiente de alta presión, etc.
  - Utilice únicamente el tipo de batería especificado.
- En cuanto observe fugas de electrolito, olores anormales, sobrecalentamiento, alteración de color, deformación o cualquier otra anomalía en la batería, retirela con cuidado del producto y/o cargador. Mantenga las baterías retiradas alejadas de las llamas. No utilice la batería si observa alguna anomalía. Si continúa utilizando la batería, podría producirse sobrecalentamiento, incendio y rotura de la batería.
- No utilice ni deje la batería en lugares expuestos a la luz directa del sol, en un vehículo aparcado al sol, cerca de una llama abierta, de un horno, o en cualquier otro lugar expuestos a altas temperaturas. Dichas condiciones implican el riesgo de sobrecalentamiento, incendio y rotura de la batería.
- Si el líquido de la batería llegara a entrar en contacto con su piel o ropa, lave inmediatamente con agua limpia. El líquido puede producir irritación cutánea. Si el líquido de la batería entra en contacto con sus ojos podría sufrir la pérdida de visión. Lávese los ojos y consulte inmediatamente con un médico.
- Para cargar las pilas de níquel-metal hidruro recargables utilice sólo el cargador especificado. Si no utiliza el cargador especificado, correrá el riesgo de causar una carga anormal, sobrecalentamiento, incendio y explosión.
- No utilice pilas de níquel-metal hidruro recargables si la carga no se completa, incluso si las ha cargado por más tiempo que el especificado. Esto podría indicar que las pilas se han deteriorado y pueden no ofrecer el rendimiento previsto, con riesgo de causar sobrecalentamiento, incendio y explosión.

### Desarmado y modificación

- No intente desarmar ni modificar. Para inspecciones, ajustes o reparaciones internas, póngase en contacto con su vendedor original o un Centro de servicio CASIO.

### Riesgos de asfixia y atragantamiento

- No permita que nadie juegue con las bolsas de plástico utilizadas para el embalaje del producto. Las bolsas de plástico pueden implicar riesgos de asfixia si se puestas en la cabeza, si se tragan, etc. Se requiere especial atención en presencia de niños pequeños.

### Evite el agua y las impurezas

- No permita que en el producto o en el adaptador de CA entre agua, otras sustancias líquidas (bebidas deportivas, agua de mar, orina de mascotas u otros animales, etc.) u objetos extraños (fragmentos de metal, etc.) Si alguna de estas sustancias llegara a entrar en el producto, realice inmediatamente los siguientes pasos. Si lo sigue utilizando, se corre el riesgo de incendio y descargas eléctricas.
  1. Apague la unidad.
  2. Si está utilizando un adaptador de CA, desconecte el enchufe de la toma de corriente.
  3. Póngase en contacto con su vendedor original o con un Centro de servicio CASIO.
- Ninguno de los siguientes elementos deberá ser colocado sobre o junto al producto, el adaptador de CA, o la tapa del teclado.
  - Recipiente que contenga agua u otras sustancias líquidas (jarrón, macetas con flores, taza, cosméticos, medicinas, etc.)
  - Objetos metálicos pequeños (horquillas, agujas de coser, monedas, etc.)
  - Materiales inflamables
  - Velas u otros objetos que produzcan llamas

**⚠ ADVERTENCIA**

### Adaptador de CA y cable de alimentación

- Para evitar que el adaptador de CA cause incendios y descargas eléctricas, asegúrese de observar las siguientes precauciones.
  - Utilice únicamente el tipo de adaptador de CA especificado.
  - Utilice únicamente el cable de alimentación incluido.
  - Utilice el adaptador de CA únicamente con el dispositivo especificado.
  - Utilice el cable de alimentación incluido únicamente con este producto.
  - No enchufe el cable de alimentación en una toma con una tensión nominal incorrecta.
  - No enchufe en cables de extensión o tomas de corriente sobrecargados.
  - No cubra el cable de alimentación con una manta u otros materiales durante el uso, y manténgalo alejado de los dispositivos de calefacción.
  - No coloque objetos pesados sobre el cable de alimentación ni lo deje enrollado durante el uso.
  - Para evitar daños en el cable de alimentación, no lo exponga a fuentes de calor ni intente modificarlo.
  - Evite doblar, enrollar o tirar excesivamente el cable de alimentación.
  - Asegúrese de que el cable de alimentación no quede aplastado entre la pared y el estante o la mesa donde se encuentra ubicado el producto, y no cubra nunca el cable de alimentación con un cojín u otro objeto.
  - Si el adaptador de CA o el cable de alimentación se ha dañado, póngase en contacto con un Centro de servicio CASIO.
  - No toque el enchufe a con las manos mojadas.

**⚠ ADVERTENCIA**

- Si las mascotas orinan o mastican el adaptador de CA se podría producir un cortocircuito, con riesgo de causar un incendio. Si las mascotas orinan o mastican el adaptador de CA podría producirse un cortocircuito, con el consiguiente riesgo de incendio.
- En caso de tormenta eléctrica, no toque el dispositivo si está enchufado a la toma de corriente.
  - Los relámpagos implican el riesgo de descargas eléctricas.

### Lugares para el almacenamiento y funcionamiento

- No guarde ni utilice el producto en ninguno de los lugares que se describen a continuación.
  - De lo contrario, existe el riesgo de incendio y descargas eléctricas.
  - Lugares con mucha humedad y polvo
  - Areas de preparación de alimentos, cerca de un humidificador o en lugares donde el producto quede expuesto a humo generado por aceites o vapor de agua
  - Cerca de un aparato de calefacción, sobre una alfombra radiante, en lugares expuestos a la luz directa del sol, en un vehículo aparcado afuera o en cualquier otro lugar donde el producto quede expuesto a altas temperaturas.
- No coloque el producto sobre un tablero inestable, sobre una superficie irregular o en cualquier otro lugar inestable. Tenga cuidado de no colocarlo en lugares como por ejemplo, alfombras con dobleces, encima del cable de alimentación, etc. Asegúrese de utilizar tornillos para fijar el producto al soporte.
- No coloque objetos pesados sobre el producto. La caída o vuelco del producto implica el riesgo de lesiones personales.

### No se suba al producto o soporte. (Solo modelos compatibles con el soporte).

- No se suba al producto ni lo balancee hacia atrás y hacia adelante. Se requiere especial atención en presencia de niños pequeños. De lo contrario, existe el riesgo de que el soporte se caiga.

### Normalidades (generación de humo, olores, calor, etc.)

- No utilice el producto si emite humo, olores, calor o si observa cualquier otra anomalía. No utilice el producto si se ha calentado o si presenta daños. De lo contrario, existe el riesgo de incendio y descargas eléctricas. Realice inmediatamente los siguientes pasos.
  1. Apague la unidad.
  2. Si está utilizando un adaptador de CA, desconecte el enchufe de la toma de corriente.
  3. Póngase en contacto con su vendedor original o con un centro de servicio CASIO.

### Pantalla de visualización (Solo modelos equipados con pantalla)

- No presione con fuerza la pantalla LCD ni la exponga a fuertes impactos. De lo contrario, el cristal de la pantalla LCD se podría agrietar, lo que implicaría la pérdida de lesiones.
- Si se llegara a agrietar la pantalla LCD, nunca toque el líquido contenido en su interior. Si entrara en contacto con la piel, el líquido de la pantalla LCD podría producir irritación cutánea. Si el líquido del LCD llegara a entrar en su boca, enjuáguese la boca inmediatamente y póngase en contacto con su médico. Si el líquido del LCD entra en contacto con sus ojos o su piel, enjuáguese con agua limpia y póngase en contacto con su médico.

### Precauciones con las pilas

- No deje que la batería entre en contacto con agua dulce, agua salada u otras fuentes de humedad. No utilice una batería mojada. De lo contrario, existe el riesgo de sobrecalentamiento, incendio y rotura de la batería.
  - No exponga las baterías al fuego o calor.
  - Instale la pila con sus polos (positivo (+) y negativo (-)) correctamente orientados.
  - No transporte ni guarde las baterías junto con collares, monedas u otros objetos metálicos.
  - No intente desarmar ni modificar una batería, perforarla con una aguja, exponerla a fuertes impactos (pisándola, etc.) ni aplicar soldadura directamente a la misma.
  - No despegue la etiqueta decorativa externa de la batería.
  - No ponga la batería en un horno de microondas, secadora, recipiente de alta presión, etc.
  - Utilice únicamente el tipo de batería especificado.
- En cuanto observe fugas de electrolito, olores anormales, sobrecalentamiento, alteración de color, deformación o cualquier otra anomalía en la batería, retirela con cuidado del producto y/o cargador. Mantenga las baterías retiradas alejadas de las llamas. No utilice la batería si observa alguna anomalía. Si continúa utilizando la batería, podría producirse sobrecalentamiento, incendio y rotura de la batería.
- No utilice ni deje la batería en lugares expuestos a la luz directa del sol, en un vehículo aparcado al sol, cerca de una llama abierta, de un horno, o en cualquier otro lugar expuestos a altas temperaturas. Dichas condiciones implican el riesgo de sobrecalentamiento, incendio y rotura de la batería.
- Si el líquido de la batería llegara a entrar en contacto con su piel o ropa, lave inmediatamente con agua limpia. El líquido puede producir irritación cutánea. Si el líquido de la batería entra en contacto con sus ojos podría sufrir la pérdida de visión. Lávese los ojos y consulte inmediatamente con un médico.
- Para cargar las pilas de níquel-metal hidruro recargables utilice sólo el cargador especificado. Si no utiliza el cargador especificado, correrá el riesgo de causar una carga anormal, sobrecalentamiento, incendio y explosión.
- No utilice pilas de níquel-metal hidruro recargables si la carga no se completa, incluso si las ha cargado por más tiempo que el especificado. Esto podría indicar que las pilas se han deteriorado y pueden no ofrecer el rendimiento previsto, con riesgo de causar sobrecalentamiento, incendio y explosión.

### Desarmado y modificación

- No intente desarmar ni modificar. Para inspecciones, ajustes o reparaciones internas, póngase en contacto con su vendedor original o un Centro de servicio CASIO.

### Riesgos de asfixia y atragantamiento

- No permita que nadie juegue con las bolsas de plástico utilizadas para el embalaje del producto. Las bolsas de plástico pueden implicar riesgos de asfixia si se puestas en la cabeza, si se tragan, etc. Se requiere especial atención en presencia de niños pequeños.

### Evite el agua y las impurezas

- No permita que en el producto o en el adaptador de CA entre agua, otras sustancias líquidas (bebidas deportivas, agua de mar, orina de mascotas u otros animales, etc.) u objetos extraños (fragmentos de metal, etc.) Si alguna de estas sustancias llegara a entrar en el producto, realice inmediatamente los siguientes pasos. Si lo sigue utilizando, se corre el riesgo de incendio y descargas eléctricas.
  1. Apague la unidad.
  2. Si está utilizando un adaptador de CA, desconecte el enchufe de la toma de corriente.
  3. Póngase en contacto con su vendedor original o con un Centro de servicio CASIO.
- Ninguno de los siguientes elementos deberá ser colocado sobre o junto al producto, el adaptador de CA, o la tapa del teclado.
  - Recipiente que contenga agua u otras sustancias líquidas (jarrón, macetas con flores, taza, cosméticos, medicinas, etc.)
  - Objetos metálicos pequeños (horquillas, agujas de coser, monedas, etc.)
  - Materiales inflamables
  - Velas u otros objetos que produzcan llamas

### Este producto

- No arroje el producto al fuego. El producto podrá explotar, con riesgo de incendio y descarga eléctrica.
- No deje caer el producto y evite que reciba impactos. Si el producto se continúa utilizando en estado dañado, se correrá el riesgo de causar un incendio y descargas eléctricas. Si el producto está dañado, realice los siguientes pasos.
  1. Apague la unidad.
  2. Si está utilizando el adaptador de CA, desenchúfelo de la toma de corriente.
  3. Póngase en contacto con un Centro de servicio CASIO.

### Este producto

- No arroje el producto al fuego. El producto podrá explotar, con riesgo de incendio y descarga eléctrica.
- No deje caer el producto y evite que reciba impactos. Si el producto se continúa utilizando en estado dañado, se correrá el riesgo de causar un incendio y descargas eléctricas. Si el producto está dañado, realice los siguientes pasos.
  1. Apague la unidad.
  2. Si está utilizando el adaptador de CA, desenchúfelo de la toma de corriente.
  3. Póngase en contacto con un Centro de servicio CASIO.

### Este producto

- No arroje el producto al fuego. El producto podrá explotar, con riesgo de incendio y descarga eléctrica.
- No deje caer el producto y evite que reciba impactos. Si el producto se continúa utilizando en estado dañado



