



English

# READ THIS!

## Safety Precautions

Thank you for selecting this CASIO product.

- Before using the instrument, be sure to carefully read through the instructions contained in this leaflet.
- Please keep all information for future reference.

- ⚠ DANGER** Indicates something that creates a major risk of death or serious personal injury.
- ⚠ WARNING** Indicates something that creates a risk of death or serious personal injury.
- ⚠ CAUTION** Indicates something that creates a risk of minor personal injury or physical damage.

**Symbol Examples**

**⚠** This triangle symbol (⚠) means that the user should be careful. (The example at left indicates electrical shock caution.)

**Ⓞ** This circle with a line through it (Ⓞ) means that the indicated action must not be performed. Indications within or nearby this symbol are specifically prohibited. (The example at left indicates that disassembly is prohibited.)

**Ⓜ** The black dot (Ⓜ) means that the indicated action must be performed. Indications within this symbol are actions that are specifically instructed to be performed. (The example at left indicates that the power plug must be unplugged from the electrical socket.)

If this product is used by a child or in the presence of children, always take care to ensure that adequate adult supervision is provided.

Do not use the stand, soft case, bench, pedals or covers for anything other than the specified purpose.

## ⚠ DANGER

### Battery Precautions

- Do not allow a battery to come into contact with fresh water, salt water, or other moisture. Do not use a battery that is wet. Doing so creates the risk of battery overheating, fire, and rupture.
- Observe the precautions below in order to avoid battery overheating, fire, and rupture.
  - Do not expose a battery to fire or heat.
  - Load a battery with its poles (plus (+) and minus (-)) facing correctly.
  - Do not carry or store a battery together with necklaces, coins, or other metal objects.
  - Do not try to disassemble or modify a battery, pierce it with a needle, subject it to strong impact (by stepping on it, etc.), or apply solder directly to it.
  - Do not peel the external decorative sticker from a battery.
  - Do not put a battery into a microwave oven, dryer, high-pressure vessel, etc.
  - Always use only the specified type of battery.
- Immediately after noticing any fluid leak, abnormal odor, overheating, discoloration, deformation or other battery abnormality, very carefully remove the battery from the product and/or charger. Keep the removed battery away from fire.
- Do not use a battery exhibiting any abnormality.

Continued use creates the risk of battery overheating, fire, and rupture.

- Do not use or leave a battery in a location exposed to direct sunlight, in an automobile parked outside, near open flame, a stove, or in any location subjected to high heat.

Such conditions create the risk of battery overheating, fire, and rupture.

- Should fluid from a battery get on your skin or clothing, immediately rinse it off with clean water.
- Fluid creates the risk of skin irritation. Battery fluid getting into the eyes creates the risk of eyesight loss, etc. Immediately rinse the eyes and then contact a physician.
- Use only the specified charger to charge the rechargeable nickel metal hydride batteries.

Using a non-specified charger creates the risk of abnormal charging, overheating, fire, and explosion.

- Do not use rechargeable nickel metal hydride batteries that do not finish charging even if charged for longer than the normal specified time.

This could indicate that the batteries have deteriorated and cannot perform as expected, which creates the risk of overheating, fire, and explosion.

- Use nickel metal hydride batteries that have been charged to full capacity at the same time.

Using batteries with different levels of charge can cause premature deterioration and creates the risk of overheating, fire, and explosion.

## ⚠ WARNING

### AC Adaptor and Power Cord

- To prevent fire and electric shock from the AC adaptor and power cord, be sure to observe the precautions below.
  - Use only the specified type of AC adaptor.
  - Use only the included power cord.
  - Use the AC adaptor only with the device specified for it.
  - Use the included power cord with this product only.
  - Do not plug the power cord into an outlet with the wrong voltage.
  - Do not plug into an overloaded extension cord or power outlet.
  - Do not cover the power cord with a blanket or other material during use, and keep it away from heating devices.
  - Do not place heavy objects on the power cord and do not leave it bundled during use.
  - Do not subject a power cord to heat or attempt to modify it, and avoid damaging it.
  - Do not subject the power cord to excessive bending, twisting, or pulling.
  - Make sure the power cord is not pinched between the wall and the rack or table where the product is located, and never cover the power cord with a cushion or other object.
  - Should the AC adaptor or power cord become damaged, contact a CASIO Service Center.
  - Do not touch the plug with wet hands.

- When leaving the product unattended, unplug the AC adaptor and put the product in a place that is away from animals and pets.

Pets chewing on the AC adaptor or pet urine can cause shorting, which creates the risk of fire.

- In the case of a lightning storm, do not touch the device plugged into the power outlet.

Lightning creates the risk of electric shock.

## ⚠ WARNING

### Storage and Operation Locations

- Do not store or use the product in any of the locations described below.
  - Areas subjected to large amounts of moisture and dust
  - Food preparation areas, near a humidifier, or in areas where the product is exposed to oil smoke or water vapor
  - Near a heating device, on an electric carpet, in a location exposed to direct sunlight, in a car parked outside, or in any other area where the product is subjected to high temperatures.
- Do not locate the product on an unsteady platform, on an uneven surface, or in any other unstable location. Take care to avoid locations such as folded carpeting, on top of the power cord, etc. Be sure to secure the stand to the product.

Secure the stand to the product as described in the user documentation.

- Do not place heavy objects on the product. Dropping and tipping over create the risk of personal injury.
- Do not climb up on the product and stand. (Stand-compatible models only.)
- Do not climb up on the product or rock it back and forth. Particular care is required in areas where young children are present.

Doing so can cause the stand to fall over, creating the risk of personal injury.

**Abnormalities (Smoke, Odor, Heat Generation, etc.)**

- Do not use the product if it is emitting smoke, odor, heat, or exhibiting any other abnormality. Do not use the product if it has been dropped or otherwise damaged.

Doing so creates the risk of fire and electric shock. Immediately perform the steps below.

1. Turn off power.
2. If you are using an AC adaptor, unplug its power plug from the power outlet.
3. Contact your original retailer or a CASIO Service Center.

**Display Screen (Screen-equipped models only)**

- Do not press the LCD or subject it to strong impact.

Doing so can cause the LCD glass to crack, creating the risk of personal injury.

- Should the LCD become cracked, never touch any of the liquid inside.

LCD liquid getting on the skin creates the risk of skin irritation. Should LCD liquid get into your mouth, immediately rinse your mouth out and contact your physician.

Should LCD liquid get in your eyes or on your skin, rinse with clean water and then contact your physician.

**Disassembly and Modification**

- Do not attempt any disassembly or modification. For any internal inspection, adjustment, or repair, contact your original retailer or a CASIO Service Center.

Doing so creates the risk of electric shock, burn injury, and personal injury.

**Suffocation and Choking Risks**

- Do not allow anyone to play with the plastic bags used for product packaging.

Plastic bags create the risk of suffocation when placed over the head, when swallowed, etc.

Particular care is required in areas where young children are present.

**Avoiding Water and Foreign Matter**

- Do not allow water, other liquids (sports drinks, seawater, animal or pet urine, etc.), or foreign objects (metal fragments, etc.) to get into the product or the AC adaptor. Should any such matter get into the product, immediately perform the steps below.

Continued use creates the risk of fire and electric shock.

1. Turn off power.
2. If you are using an AC adaptor, unplug its power plug from the power outlet.
3. Contact your original retailer or a CASIO Service Center.

**This Product**

- Do not throw the product into fire.

Doing so can cause it to explode, creating the risk of fire and personal injury.

- Do not drop the product and avoid subjecting it to impact.

Continued use of the product while it is damaged creates the risk of fire and electric shock.

Should the product become damaged, perform the steps below.

1. Turn off power.
2. If you are using an AC adaptor, unplug its power plug from the power outlet.
3. Contact your original retailer or a CASIO Service Center.

**Keyboard Cover and Music Stand**

- Always observe the following precautions.
  - Always use both hands when opening or closing the keyboard cover.
  - When opening or closing the keyboard cover, take care to ensure that you do not trap your own fingers or hand, or those of people nearby (especially small children) in the gap between the keyboard cover and the product body.
  - Only use this product when the keyboard cover is fully open.

- When changing the angle of the music stand, take care to ensure that you do not trap your own fingers or hands, or those of people nearby (especially small children) in the gap between the music stand and the product body (adjustable-angle music stands only).

**Felt and Nylon Covers**

- Do not use the cover close to an open flame. Doing so could cause the cover to catch fire.

**Medical devices affected by electromagnetism**

- Keep this product away from the chest area of any individual fitted with a cardiac pacemaker.

Cardiac pacemakers and similar devices can be affected by electromagnetism. Should anyone fitted with a cardiac pacemaker or other medical device ever experience any abnormality, move the product away and contact a physician.

## ⚠ CAUTION

**Battery Precautions**

- Observe the precautions below. Failure to do so can cause a battery to rupture, creating the risk of fire, personal injury, and soiling of nearby objects by leaking fluid.
  - Never allow a battery to become shorted.
  - Do not mix old and new batteries.
  - Do not mix different battery types.
  - Do not charge a non-rechargeable battery.
  - If you do not plan to use the product for a long time, remove batteries.
  - Replace the batteries as soon as possible after they go dead.
  - Do not use a battery whose cover has been peeled off.
- Do not use a leaking battery.

Doing so creates the risk of fire and electric shock. Immediately stop using the product and contact your original retailer or a CASIO Service Center.

- Keep batteries away from children. During use, make sure that small children are unable to remove batteries from the product.

- Do not leave a battery near areas used by pets. Pets chewing on a battery creates the risk of fluid leaking, overheating, fire, and rupture.

**AC Adaptor and Power Cord**

- To prevent fire and electric shock from the AC adaptor and power cord, be sure to observe the precautions below.
  - Grasp the power plug when unplugging it from the wall outlet.
  - Do not use detergent when cleaning the power cord, especially the power plug and jack parts.
  - Insert the power plug into the outlet as far as it will go.
  - If you do not plan to use the product for a long time, unplug from the power outlet.

At least once a year, unplug the power plug from the power outlet and use a dry cloth to wipe away any dust buildup from the area between the prongs of the plug.

- Before moving the product, turn it off and unplug from the power outlet.

**User Maintenance**

- Before cleaning the product, turn off power and unplug the AC adaptor from the power outlet.

Failure to do so creates the risk of electric shock.

Leaving the AC adaptor plugged in creates the risk of damage to the power cord, fire, and electric shock.

**Connections**

- Connect only specified devices and items to connectors. Do not insert foreign objects (pieces of metal, pencils, etc.) into connectors.

Connecting to other devices and items creates the risk of fire and electric shock.

**Volume Level**

- Do not listen at very loud volumes for long periods.

High volume settings can damage hearing.

Particular care is required concerning this precaution when using headphones.

**Backing Up Important Data**

- Always keep backup copies of important data by transferring it to a computer or other storage device.

Note that data can be deleted in the case of product malfunction, repair, etc.

**Correct Stand Assembly (Stand-compatible models only)**

- Do not remove the tape attached to the product keyboard cover until assembly is complete.

Removing the tape can cause the keyboard cover to open and close during assembly, creating the risk of injury to your hands and fingers.

- Always use the screws provided.

Using screws other than those specified could cause lead to damage or an accident.

- Take care not to trap your hand or other body parts during assembly.

- Spread felt or some other type of cloth under the stand to avoid direct contact between the rubber on its legs and the floor surface.

Direct contact between the rubber and flooring can cause discoloration, marring, or other damage.

- When placing the piano unit on the floor, spread some soft material (blanket, cushion, etc.) under the unit so that the underside of the unit does not come into direct contact with the floor.

Direct contact could cause scratching or other damage to the floor.

- Be sure to observe the precautions below.
  - Perform assembly as instructed in the user documentation.
  - Assembly should be carried out by at least 2 adults working together on a flat surface.
  - Be sure to adjust the height using the adjustable leg.
  - Make sure the instrument is correctly mounted on the stand.
  - When placing the instrument on the stand, take care to avoid pinching your fingers between them.
- When moving this product, make sure to use both hands to pick it up. This product should always be moved by two people, one at each end, after first disconnecting any cables from the product. This applies particularly to products with a stand.

Failure to do so creates the risk of personal injury to those around you and other unforeseen accidents.

**Pedals**

- Do not put your fingers or hands into moving parts of the pedal unit.

Doing so may result in injury, product fault or damage.

**Stand Safety Precautions (Stand-compatible models only)**

- Set up this product correctly before using it. If the screws are not securely tightened or the product is not attached in the correct position, the stand could tip over, resulting in the product falling and causing injury.
- The stand screws may loosen due to factors such as vibration and changes in temperature or humidity. Check for loose screws before playing. If any of the screws are loose, retighten them securely. Failing to do so could result in the product falling over and causing injury.

- Should you notice any unsteadiness, missing screws, loose screws, or any other problems while playing, contact your original retailer or a CASIO Service Center. Periodically check for loose screws. Securely tighten loose screws.

Failure to do so can cause the stand to tip over and the instrument to fall, creating the risk of personal injury.

**UK CA**

Manufacturer: CASIO COMPUTER CO., LTD. 6-2, Hon-machi 1-chome, Shibuya-ku, Tokyo 151-8543, Japan

Responsible within the European Union: Casio Europe GmbH Casio-Platz 1, 22846 Norderstedt, Germany www.casio-europe.com

**CAUTION**

This recycle mark indicates that the packaging conforms to the environmental protection legislation in Germany.

**UK CA**

Manufacturer: CASIO COMPUTER CO., LTD. 6-2, Hon-machi 1-chome, Shibuya-ku, Tokyo 151-8543, Japan

Responsible within the United Kingdom: Casio Electronics Co. Ltd. 10 Norwich Street, London, EC4A 1BD, U.K. www.casio.co.uk

**CAUTION**

This recycle mark indicates that the packaging conforms to the environmental protection legislation in Germany.

**UK CA**

Manufacturer: CASIO COMPUTER CO., LTD. 6-2, Hon-machi 1-chome, Shibuya-ku, Tokyo 151-8543, Japan

Responsible within the European Union: Casio Europe GmbH Casio-Platz 1, 22846 Norderstedt, Germany www.casio-europe.com

**CAUTION**

This recycle mark indicates that the packaging conforms to the environmental protection legislation in Germany.

**UK CA**

Manufacturer: CASIO COMPUTER CO., LTD. 6-2, Hon-machi 1-chome, Shibuya-ku, Tokyo 151-8543, Japan

Responsible within the United Kingdom: Casio Electronics Co. Ltd. 10 Norwich Street, London, EC4A 1BD, U.K. www.casio.co.uk

**CAUTION**

This recycle mark indicates that the packaging conforms to the environmental protection legislation in Germany.

**UK CA**

Manufacturer: CASIO COMPUTER CO., LTD. 6-2, Hon-machi 1-chome, Shibuya-ku, Tokyo 151-8543, Japan

Responsible within the European Union: Casio Europe GmbH Casio-Platz 1, 22846 Norderstedt, Germany www.casio-europe.com

**CAUTION**

This recycle mark indicates that the packaging conforms to the environmental protection legislation in Germany.

**UK CA**

Manufacturer: CASIO COMPUTER CO., LTD. 6-2, Hon-machi 1-chome, Shibuya-ku, Tokyo 151-8543, Japan

Responsible within the United Kingdom: Casio Electronics Co. Ltd. 10 Norwich Street, London, EC4A 1BD, U.K. www.casio.co.uk

**CAUTION**

This recycle mark indicates that the packaging conforms to the environmental protection legislation in Germany.

**UK CA**

Manufacturer: CASIO COMPUTER CO., LTD. 6-2, Hon-machi 1-chome, Shibuya-ku, Tokyo 151-8543, Japan

Responsible within the European Union: Casio Europe GmbH Casio-Platz 1, 22846 Norderstedt, Germany www.casio-europe.com

**CAUTION**

This recycle mark indicates that the packaging conforms to the environmental protection legislation in Germany.

**UK CA**

Manufacturer: CASIO COMPUTER CO., LTD. 6-2, Hon-machi 1-chome, Shibuya-ku, Tokyo 151-8543, Japan

Responsible within the United Kingdom: Casio Electronics Co. Ltd. 10 Norwich Street, London, EC4A 1BD, U.K. www.casio.co.uk

**CAUTION**

This recycle mark indicates that the packaging conforms to the environmental protection legislation in Germany.

**UK CA**

Manufacturer: CASIO COMPUTER CO., LTD. 6-2, Hon-machi 1-chome, Shibuya-ku, Tokyo 151-8543, Japan

Responsible within the European Union: Casio Europe GmbH Casio-Platz 1, 22846 Norderstedt, Germany www.casio-europe.com

**CAUTION**

This recycle mark indicates that the packaging conforms to the environmental protection legislation in Germany.

**UK CA**

Manufacturer: CASIO COMPUTER CO., LTD. 6-2, Hon-machi 1-chome, Shibuya-ku, Tokyo 151-8543, Japan

Responsible within the United Kingdom: Casio Electronics Co. Ltd. 10 Norwich Street, London, EC4A 1BD, U.K. www.casio.co.uk

**CAUTION**

This recycle mark indicates that the packaging conforms to the environmental protection legislation in Germany.

**UK CA**

Manufacturer: CASIO COMPUTER CO., LTD. 6-2, Hon-machi 1-chome, Shibuya-ku, Tokyo 151-8543, Japan

Responsible within the European Union: Casio Europe GmbH Casio-Platz 1, 22846 Norderstedt, Germany www.casio-europe.com

**CAUTION**

This recycle mark indicates that the packaging conforms to the environmental protection legislation in Germany.

**UK CA**

Manufacturer: CASIO COMPUTER CO., LTD. 6-2, Hon-machi 1-chome, Shibuya-ku, Tokyo 151-8543, Japan

Responsible within the United Kingdom: Casio Electronics Co. Ltd. 10 Norwich Street, London, EC4A 1BD, U.K. www.casio.co.uk

**CAUTION**

This recycle mark indicates that the packaging conforms to the environmental protection legislation in Germany.

**UK CA**

Manufacturer: CASIO COMPUTER CO., LTD. 6-2, Hon-machi 1-chome, Shibuya-ku, Tokyo 151-8543, Japan

Responsible within the European Union: Casio Europe GmbH Casio-Platz 1, 22846 Norderstedt, Germany www.casio-europe.com

**CAUTION**

This recycle mark indicates that the packaging conforms to the environmental protection legislation in Germany.

**UK CA**

Manufacturer: CASIO COMPUTER CO., LTD. 6-2, Hon-machi 1-chome, Shibuya-ku, Tokyo 151-8543, Japan

Responsible within the United Kingdom: Casio Electronics Co. Ltd. 10 Norwich Street, London, EC4A 1BD, U.K. www.casio.co.uk

**CAUTION**

This recycle mark indicates that the packaging conforms to the environmental protection legislation in Germany.

**UK CA**

Manufacturer: CASIO COMPUTER CO., LTD. 6-2, Hon-machi 1-chome, Shibuya-ku, Tokyo 151-8543, Japan

Responsible within the European Union: Casio Europe GmbH Casio-Platz 1, 22846 Norderstedt, Germany www.casio-europe.com

**CAUTION**

This recycle mark indicates that the packaging conforms to the environmental protection legislation in Germany.

**UK CA**

Manufacturer: CASIO COMPUTER CO., LTD. 6-2, Hon-machi 1-chome, Shibuya-ku, Tokyo 151-8543, Japan

Responsible within the United Kingdom: Casio Electronics Co. Ltd. 10 Norwich Street, London, EC4A 1BD, U.K. www.casio.co.uk

**CAUTION**

This recycle mark indicates that the packaging conforms to the environmental protection legislation in Germany.

**UK CA**

Manufacturer: CASIO COMPUTER CO., LTD. 6-2, Hon-machi 1-chome, Shibuya-ku, Tokyo 151-8543, Japan

Responsible within the European Union: Casio Europe GmbH Casio-Platz 1, 22846 Norderstedt, Germany www.casio-europe.com

**CAUTION**

This recycle mark indicates that the packaging conforms to the environmental protection legislation in Germany.

**UK CA**

Manufacturer: CASIO COMPUTER CO., LTD. 6-2, Hon-machi 1-chome, Shibuya-ku, Tokyo 151-8543, Japan

Responsible within the United Kingdom: Casio Electronics Co. Ltd. 10 Norwich Street, London, EC4A 1BD, U.K. www.casio.co.uk

**CAUTION**

This recycle mark indicates that the packaging conforms to the environmental protection legislation in Germany.

**UK CA**

Manufacturer: CASIO COMPUTER CO., LTD. 6-2, Hon-machi 1-chome, Shibuya-ku, Tokyo 151-8543, Japan

Responsible within the European Union: Casio Europe GmbH Casio-Platz 1, 22846 Norderstedt, Germany www.casio-europe.com

**CAUTION**

This recycle mark indicates that the packaging conforms to the environmental protection legislation in Germany.

**UK CA**

Manufacturer: CASIO COMPUTER CO., LTD. 6-2, Hon-machi 1-chome, Shibuya-ku, Tokyo 151-8543, Japan

Responsible within the United Kingdom: Casio Electronics Co. Ltd. 10 Norwich Street, London, EC4A 1BD, U.K. www.casio.co.uk

**CAUTION**

This recycle mark indicates that the packaging conforms to the environmental protection legislation in Germany.

**UK CA**

Manufacturer: CASIO COMPUTER CO., LTD. 6-2, Hon-machi 1-chome, Shibuya-ku, Tokyo 151-8543, Japan

Responsible within the European Union: Casio Europe GmbH Casio-Platz 1, 22846 Norderstedt, Germany www.casio-europe.com

**CAUTION**

This recycle mark indicates that the packaging conforms to the environmental protection legislation in Germany.

**UK CA**

Manufacturer: CASIO COMPUTER CO., LTD. 6-2, Hon-machi 1-chome, Shibuya-ku, Tokyo 151-8543, Japan

Responsible within the United Kingdom: Casio Electronics Co. Ltd. 10 Norwich Street, London, EC4A 1BD, U.K. www.casio.co.uk

**CAUTION**

This recycle mark indicates that the packaging conforms to the environmental protection legislation in Germany.

**UK CA**

Manufacturer: CASIO COMPUTER CO., LTD. 6-2, Hon-machi 1-chome, Shibuya-ku, Tokyo 151-8543, Japan

Responsible within the European Union: Casio Europe GmbH Casio-Platz 1, 22846 Norderstedt, Germany www.casio-europe.com

**CAUTION**

This recycle mark indicates that the packaging conforms to the environmental protection legislation in Germany.

**UK CA**

Manufacturer: CASIO COMPUTER CO., LTD. 6-2, Hon-machi 1-chome, Shibuya-ku, Tokyo 151-8543, Japan

Responsible within the United Kingdom: Casio Electronics Co. Ltd. 10 Norwich Street, London, EC4A 1BD, U.K. www.casio.co.uk

**CAUTION**

This recycle mark indicates that the packaging conforms to the environmental protection legislation in Germany.

**UK CA**

Manufacturer: CASIO COMPUTER CO., LTD. 6-2, Hon-machi 1-chome, Shibuya-ku, Tokyo 151-8543, Japan

Responsible within the European Union: Casio Europe GmbH Casio-Platz 1, 22846 Norderstedt, Germany www.casio-europe.com

**CAUTION**

This recycle mark indicates that the packaging conforms to the environmental protection legislation in Germany.

**UK CA**

Manufacturer: CASIO COMPUTER CO., LTD. 6-2, Hon-machi 1-chome, Shibuya-ku, Tokyo 151-8543, Japan

Responsible within the United Kingdom: Casio Electronics Co. Ltd. 10 Norwich Street, London, EC4A 1BD, U.K. www.casio.co.uk

**CAUTION**

This recycle mark indicates that the packaging conforms to the environmental protection legislation in Germany.

**UK CA**

Manufacturer: CASIO COMPUTER CO., LTD. 6-2, Hon-machi 1-chome, Shibuya-ku, Tokyo 151-8543, Japan

Responsible within the European Union: Casio Europe GmbH Casio-Platz 1, 22846 Norderstedt, Germany www.casio-europe.com

**CAUTION**

This recycle mark indicates that the packaging conforms to the environmental protection legislation in Germany.

**UK CA**

Manufacturer: CASIO COMPUTER CO., LTD. 6-2, Hon-machi 1-chome, Shibuya-ku, Tokyo 151-8543, Japan

Responsible within the United Kingdom: Casio Electronics Co. Ltd. 10 Norwich Street, London, EC4A 1BD, U.K. www.casio.co.uk

**CAUTION**

This recycle mark indicates that the packaging conforms to the environmental protection legislation in Germany.

**UK CA**

Manufacturer: CASIO COMPUTER CO., LTD. 6-2, Hon-machi 1-chome, Shibuya-ku, Tokyo 151-8543, Japan

Responsible within the European Union: Casio Europe GmbH Casio-Platz 1, 22846 Norderstedt, Germany www.casio-europe.com

**CAUTION**

This recycle mark indicates that the packaging conforms to the environmental protection legislation in Germany.

**UK CA**

Manufacturer: CASIO COMPUTER CO., LTD. 6-2, Hon-machi 1-chome, Shibuya-ku, Tokyo 151-8543, Japan

Responsible within the United Kingdom: Casio Electronics Co. Ltd. 10 Norwich Street, London, EC4A 1BD, U.K. www.casio.co.uk

**CAUTION**

This recycle mark indicates that the packaging conforms to the environmental protection legislation in Germany.

**UK CA**

Manufacturer: CASIO COMPUTER CO., LTD. 6-2, Hon-machi 1-chome, Shibuya-ku, Tokyo 151-8543, Japan

Responsible within the European Union: Casio Europe GmbH Casio-Platz 1, 22846 Norderstedt, Germany www.casio-europe.com

**CAUTION**

This recycle mark indicates that the packaging conforms to the environmental protection legislation in Germany.

**UK CA**

Manufacturer: CASIO COMPUTER CO., LTD. 6-2, Hon-machi 1-chome, Shibuya-ku, Tokyo 151-8543, Japan

Responsible within the United Kingdom: Casio Electronics Co

