



SOUND MODE

 **Bouton de mode sonore (SOUND MODE) + Touche du clavier**

B7		
B7		
A7		
A7		
G7		
F#7		
F7		
E7		
E7		
D7		
C#7		
C7		
B6		
B6		
A6		
A6		
G6		
F#6		
F6		
E6		
E6		
D6		
C#6		
C6		
B5		
B5		
A5		
A5		
G5		
F#5		
F5		
E5		
E5		
D5		
C#5		
C5		
B4		
B4		
A4		
A4		
G4		
F#4		
F4		
E4		
E4		
D4		
C#4		
C4		
B3		
B3		
A3		
A3		
G3		
F#3		
F3		
E3		
E3		
D3		
C#3		
C3		
B2		
B2		
A2		
A2		
G2		
F#2		
F2		
E2		
E2		
D2		
C#2		
C2		
B1		
B1		
A1		
A1		
G1		
F#1		
F1		
E1		
E1		
D1		
C#1		
C1		
B0		
B0		
A0		

Effets de mode sonore

Chorus

Éclat

Simulateur acoustique

(Une valeur de réglage plus élevée augmente le niveau de l'effet appliqué.)

FUNCTION

 **Bouton de fonction (FONCTION) + Touche du clavier**

B7			
B7			
A7			
A7			
G7			
F#7			
F7			
E7			
E7			
D7			
C#7			
C7			
B6			
B6			
A6			
A6			
G6			
F#6			
F6			
E6			
E6			
D6			
C#6			
C6			
B5			
B5			
A5			
A5			
G5			
F#5			
F5			
E5			
E5			
D5			
C#5			
C5			
B4			
B4			
A4			
A4			
G4			
F#4			
F4			
E4			
E4			
D4			
C#4			
C4			
B3			
B3			
A3			
A3			
G3			
F#3			
F3			
E3			
E3			
D3			
C#3			
C3			
B2			
B2			
A2			
A2			
G2			
F#2			
F2			
E2			
E2			
D2			
C#2			
C2			
B1			
B1			
A1			
A1			
G1			
F#1			
F1			
E1			
E1			
D1			
C#1			
C1			
B0			
B0			
A0			

Adaptateur sans fil pour MIDI & audio

Clé USB

Note de base de l'ajustement de gamme

Sélection de l'ajustement de la gamme

Accordage

Duo

Réglages MIDI

(Hors service/5 secondes/30 secondes/60 secondes/120 secondes)

