

# Operation Guide ANA (I3H-2)

 
CASIO®

You can also find information about operational procedures at the CASIO website.

<https://support.casio.com/global/en/wat/model/5687/>



- Your watch may differ somewhat from the one shown in the illustration.

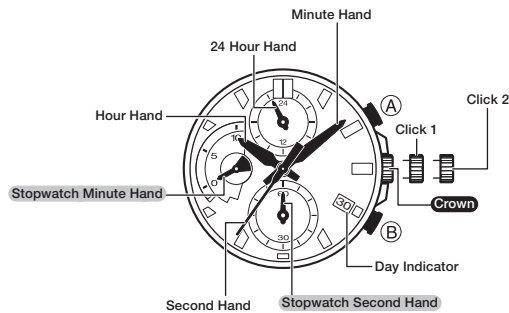

## Stopwatch functions

### To adjust the time setting

When the second hand is at 12 o'clock, pull the **Crown** out to Click 2.

Rotate the **Crown** to change the time setting.

Push the **Crown** back in on a time signal to resume timekeeping.

#### Note

- Take care that you set the correct AM or PM time.
- When changing the time, move the minute hand four or five minutes past your final setting, and then back it up to the setting you want.

### To change the day indicator setting

Pull the **Crown** out to Click 1.

Rotate the **Crown** towards you to set the day.

 
Push the **Crown** back in.

#### Note

- The day indicator setting uses a 31-day month. Make adjustments for months of shorter lengths.
- Avoid changing the day indicator setting between the hours of 9 p.m. and 1 a.m. Otherwise, the day indicator may not change correctly at midnight.


### Crown Operations

Some water-resistant models (10BAR, 20BAR) have a screw-in crown. When you need to perform a crown operation, rotate it towards you to unscrew it. Then pull the crown out. Avoid applying undue force when pulling. The watch loses its water resistance while the crown is unscrewed. After performing a crown operation, fully screw the crown back in.

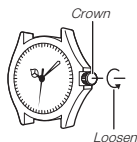

### If your watch has a rotary bezel...

 You can rotate the bezel to align its ▼ mark with the minute hand. Then you will be able to tell how much time has elapsed since aligning the ▼ mark.



### Low Battery Alert

- The second hand will jump at two-second intervals to alert you when battery power is low.
- Have the battery replaced as soon as possible after low battery alert is indicated.
- Stopwatch operation is disabled during low battery alert.
- If low battery alert occurs during a stopwatch operation, the stopwatch will automatically reset to all zeros and stop.

### Using the Stopwatch

The stopwatch measures elapsed time in 1-second increments up to 9 minutes, 59 seconds.

#### Elapsed time

(A) → (A) → (A) → (A) → (B)  
Start Stop Resume Stop Reset

#### Split time

(A) → (B) → (B) → (A) → (B)  
Start Split Split release Stop Reset

#### Two finishes

(A) → (B) → (A) → (B) → (B)  
Start Split Stop Split release Reset  
First runner finishes. Display time of first runner.  
Second runner finishes.  
Display time of second runner.

### Important!

- Do not operate the stopwatch with the crown pulled out.

### Note

- An elapsed time operation will stop automatically at the end of 10 minutes.

### Correcting the 0 Positions of the Hands

Perform the following procedure if the stopwatch hands do not return to their 0 (zero) positions when you reset the stopwatch.

Pull the **Crown** out to Click 2.

Use (A) (clockwise) and (B) (counterclockwise) to move the **Stopwatch Second Hand** to 12 o'clock and the **Stopwatch Minute Hand** to 0.

- Holding down either button will move the second hand at high speed, until you release the button.
- The **Stopwatch Minute Hand** is synchronized with the **Stopwatch Second Hand**.

After all of the hands are the way you want, push the **Crown** back in.

### Important!

- Timekeeping stops while the crown is pulled out. Correct the current time setting after performing the above operation.

### Specifications

**Accuracy at normal temperature:** ±20 seconds a month

**Stopwatch:** Measuring Capacity: 9'59" (10 minutes)

Measuring Unit: 1 second

Measurements: Elapsed time; split time; two finishes

**Other:** Low battery alert

**Battery:** One silver oxide battery (Type: SR920SW)

**Battery Life:** Approximately 3 years

Specifications are subject to change without notice.