 
 


# Operation Guide 5534

- Your watch may differ somewhat from the one shown in the illustration.

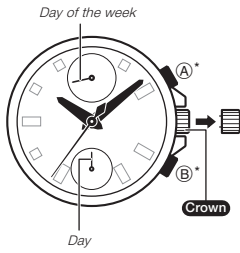 


\* Some buttons are designed to be more difficult to operate to prevent unintended operation. To operate such a button, use a thin pointed object to press its depression.

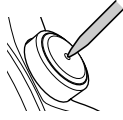


### Crown Operations

Some water-resistant models (100 meters, 200 meters) have a screw-in crown. When you need to perform a crown operation, rotate it towards you to unscrew it. Then pull the crown out. Avoid applying undue force when pulling. The watch loses its water resistance while the crown is unscrewed. After performing a crown operation, fully screw the crown back in.

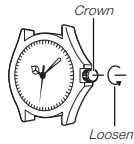

### If your watch has a rotary bezel...

 You can rotate the bezel to align its ▼ mark with the minute hand. Then you will be able to tell how much time has elapsed since aligning the ▼ mark.

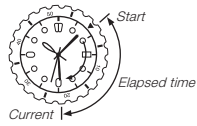

### To adjust the time setting

When the second hand is at 12 o'clock, pull the **Crown** out.

Rotate the **Crown** to change the time setting.

Push the **Crown** back in on a time signal to resume timekeeping.

#### Note

- Take care that you set the correct AM or PM time.
- When changing the time, move the minute hand four or five minutes past your final setting, and then back it up to the setting you want.

### To change the day and day of the week settings

Press **B** to change the day and **A** to change the day of the week.

#### Note

- The day setting uses a 31-day month. Make adjustments for months of shorter lengths.
- Avoid changing the day and day of the week settings between the hours of 9 p.m. and 4 a.m. Otherwise, the day and day of the week may not change correctly at midnight.

### Specifications

Module No.	Accuracy at normal temperature (per month)	Battery type	Battery life
5534	±20 seconds	SR927SW	Approx. 3 years