

# EX-ZR200 Firmware Version Update Software

Version 1.01

The following are the details of the update provided by this software.

- V.1.00 → V.1.01
- Enables use of a FlashAir card (SD memory card with embedded wireless LAN).

## Using a Smartphone to Play Back Images Stored on a FlashAir Card

Loading a commercially available FlashAir card in the camera makes it possible to view images on and copy them to a smartphone or computer over a wireless LAN connection.

- For more information, see the instructions that come with the card.

### 1. Use a computer or other device to configure the settings of the FlashAir card.


- To protect your personal information, it is recommended that you change the password of a FlashAir card after you purchase it. For more information, see the instructions that come with the card.
- If the FlashAir card's "Start automatically at boot" setting is selected, a wireless LAN connection will be established automatically whenever the camera is turned on.
- If you want to turn "FlashAir" on and off manually on the camera, change the FlashAir card's setting to "Start with the control image".



### 2. Load the configured FlashAir card into the camera and shoot the images you want.


- Formatting a FlashAir card with the camera will delete files on the card that are required for communication. For details about formatting, see the instructions that come with the card.

### 3. Access the FlashAir card from a smartphone or other device.

## IMPORTANT!

- When on an aircraft or in any other location where use of wireless communication is limited or prohibited, either disable FlashAir communication or refrain from using the FlashAir card entirely.
- Loading a FlashAir card into the camera will cause the FlashAir icon  to appear on the monitor screen.

Transparent		No wireless LAN connection
Not transparent		Communication enabled
Flashing		Running (Communication disabled)

- The following applies to camera operations while image data on a FlashAir card is being manipulated from a smartphone or other device.
  -  icon displayed on the monitor screen.
  - The Sleep function and Auto Power Off function are disabled.
  - A confirmation message appears on the monitor screen if you try to turn it off. If this happens, follow the instructions in the message.
- The FlashAir wireless LAN connection is automatically terminated if no operation is performed for a certain amount of time.
- Recording or playing back a movie to a FlashAir card can result in breaks in the image and/or audio.
- Proper FlashAir card communication may not be possible due to camera settings, battery level, or operating conditions.
- Changing the configuration of camera settings and performing other operations may take longer than normal when a FlashAir card is running.

## ■ To disable FlashAir communication

### 1. Change the FlashAir card setting to "Start with the control image".

- Configure FlashAir card settings on a computer or other device.

### 2. Press [MENU].

### 3. Use [◀] and [▶] to select the "Set Up" tab.

### 4. Use [▲] and [▼] to select "FlashAir" and then press [▶].

### 5. Use [▲] and [▼] to select "Off" and then press [SET].

- This will disable communication using FlashAir.

FlashAir and the FlashAir logo are trademarks of TOSHIBA CORPORATION.