

DST Setting / Module : 2747

Firstly, make sure it is in the Timekeeping Mode.

<Timekeeping Mode Screen>



To return to the Timekeeping Mode from any other mode, hold down (C) button for about two seconds.

<How to change the digital time.>

1.



In the Timekeeping Mode, hold down (A) button until the seconds start to flash.

2.



Press (C) button once.

3.



DST indicator and the DST setting (ON or OFF) will appear in the display.

4.



Press (D) button to toggle ON and OFF.

5.



Press (A) button to exit the setting screen.

<How to change the analog time.>

1.



In the Timekeeping Mode, press (C) button six times to enter the Hand Setting Mode.

2.



Hold down (A) button until the current digital time starts to flash.

3.



Press (D) button to advance the analog time setting by 20 seconds.

*Holding down (D) button advances the analog time setting at high speed.

4.



Press (A) button to exit the setting screen.

5.



Press (C) button to return to the Timekeeping Mode.