


DST Setting Module : 3159

Firstly, make sure it is in the Timekeeping Mode.

<Timekeeping Mode Screen>

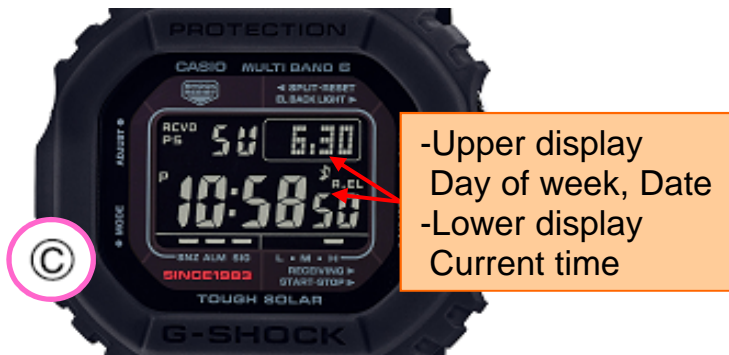

If you don't know which mode it is,
press (C) button several times to
change the mode.

1.



In the Timekeeping Mode, hold
down (A) button until the city
code starts to flash.

2.



Press (C) button once.

3.



Current DST setting will appear.

4.



Use (D) button to toggle ON and OFF.

5.



Press (A) button to exit the setting screen.