

DST Setting Module : 3198/3299

Firstly, make sure it is in the Timekeeping Mode.

<Timekeeping Mode Screen>



- Upper display
Current time
- Lower display
Day of week and Date

If you don't know which mode it is,
press (C) button to change the mode.

1.



Hold down (A) button until the
seconds start to flash.

2.



Press (C) button to display the
DST setting screen.

3.



Press (D) button to toggle between Daylight Saving Time (on) and Standard Time (off).

4.



Press (A) button to exit the setting screen. When the Daylight Saving Time is turned on, the DST indicator appears on the screen.