

DST Setting / Module : 5081

Firstly, make sure it is in the Timekeeping Mode.

<Timekeeping Mode Screen>



To return to the Timekeeping Mode, press **C** several times.

1.



In the Timekeeping Mode, hold down **A** for about three seconds.

2.



City code will flash on the lower right display.

3.



Press **C** once.

4.



DST setting (ON or OFF) will appear on the lower right display.

5.



Press **D** to toggle ON and OFF.

6.



Press **A** to exit the setting screen.