


DST Setting / Module : 5208

Firstly, make sure it is in the Timekeeping Mode.

<Timekeeping Mode Screen>

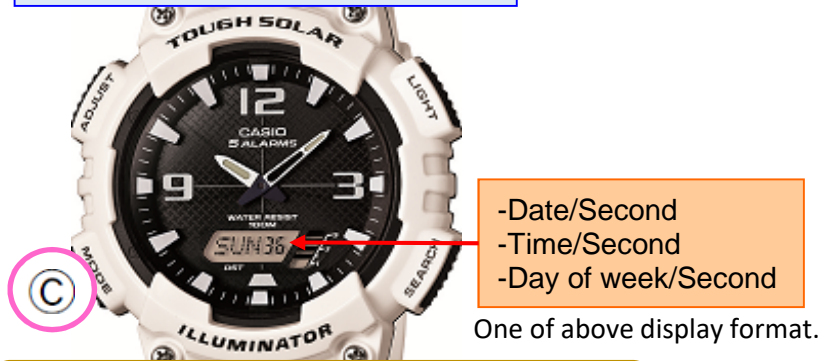

To return to the Timekeeping Mode, press (C) several times.

1.



In the Timekeeping Mode, hold down (A) for about two seconds.

2.



City code will be flashing on the screen.

3.



Press (C) once.

4.



DST setting (ON or OFF) will be flashing on the screen.

5.

OFF

ON



Press **D** to toggle ON and OFF.

6.

A



Press **A** to exit the setting screen.