

DST Setting Module : 5229/5518

Firstly, make sure it is in the Timekeeping Mode.

<Timekeeping Mode Screen>



If you don't know which mode it is, press (C) button to change the mode.

1.



In the Timekeeping Mode, hold down (A) button for three seconds until the currently selected city code flashes.

2.



Press (C) button once.
Current DST setting will appear.

3



Use (D) button to toggle ON and OFF.

4.



Press (A) button to exit the setting mode.