


DST Setting / Module : 5522

Firstly, make sure it is in the Timekeeping Mode.

<Timekeeping Mode Screen>

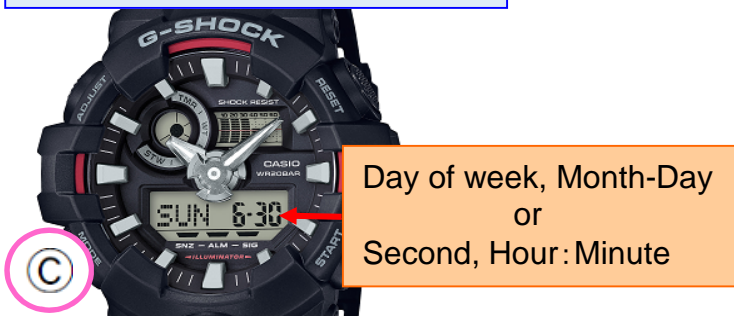

To return to the Timekeeping Mode,
hold down (C) for about two seconds.



In the Timekeeping Mode,
hold down (A) until city code
flashes on the display.




Press (C) to display
the DST setting mode.



Press (D) to toggle ON
and OFF.

4.



Press  to return to the Timekeeping Mode.