


CASIO®

EN

Digital Camera

EX-TR70

User's Guide

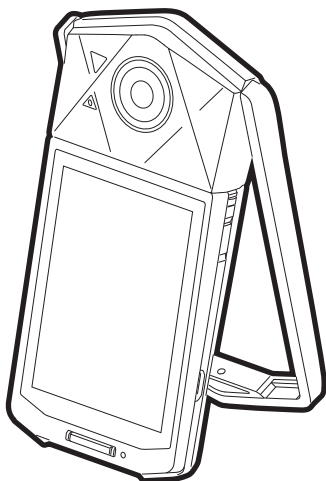

Thank you for purchasing this CASIO product.

- Before using it, be sure to read the precautions contained in this User's Guide.
- Keep the User's Guide in a safe place for future reference.
- For the most up-to-date information about this product, visit the official EXILIM Website at <http://www.exilim.com/>


EXILIM

Accessories


As you unpack your camera, check to make sure that all accessories shown below are included. If anything is missing, contact your original retailer.



Rechargeable lithium ion
battery (NP-150)

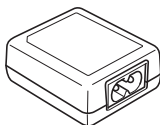


USB-AC adaptor
(AD-C53U)



Power cord*



Micro USB cable



Basic Reference

* The shape of the power cord plug varies according to the country or geographic area where the camera is sold.

Read this first!

- The contents of this manual are subject to change without notice.
- The contents of this manual have been checked at each step of the production process. Feel free to contact us if you notice anything that is questionable, erroneous, etc.
- Any copying of the contents of this User's Guide, either in part or its entirety, is forbidden. Except for your own personal use, any other use of the contents of this manual without the permission of CASIO COMPUTER CO., LTD. is forbidden under copyright laws.
- CASIO COMPUTER CO., LTD. shall not be held liable for any damages or lost profits suffered by you or any third party due to the use or malfunction of this product.
- CASIO COMPUTER CO., LTD. shall not be held liable for any damages, lost profits, or claims by third parties arising out of the use of EXILIM Connect.
- CASIO COMPUTER CO., LTD. shall not be held liable for any damages or lost profits caused by loss of memory contents due to malfunction, repair, or any other reason.
- Note that the example screens and product illustrations shown in this User's Guide may differ somewhat from the screens and configuration of the actual camera.

LCD Panel

The liquid crystal panel of the monitor screen uses high-precision technology that provides a pixel yield in excess of 99.99%. This means that some very small number of pixels may not light or may remain lit at all times. This is due to the characteristics of the liquid crystal panel, and does not indicate malfunction.

Take test shots

Before shooting your final image, shoot a test shot to ensure that the camera is recording correctly.

Contents

Accessories	2
Read this first!	3
General Guide	8
Monitor Screen Contents and How to Change Them	9

Quick Start Basics 12

What you can do with your CASIO camera	12
Changing the Camera Style to Suit Shooting Conditions	14
■ Opening and Closing the Frame	14
■ Rotating the Monitor Screen	15
■ Camera Configurations	16
Using the Touch Panel	17
Using the Selfie Pad	19
First, charge the battery prior to use	19
■ Loading the Battery	19
■ Charge the Battery	21
Configuring Basic Settings the First Time You Turn On the Camera	26
Preparing a Memory Card	28
■ Supported Memory Cards	28
■ To load a memory card	29
■ To format (initialize) a new memory card	30
Turning Power On and Off	31
To Shoot a Snapshot	32
■ Selecting an Auto Recording Mode	32
■ To shoot a snapshot	33
Viewing Snapshots	35
Deleting Snapshots and Movies	36
Snapshot Shooting Precautions	38

Recording Images 39

Selecting a Recording Mode	40
■ Recording Beautiful Portraits (Make-up)	41
■ Shooting with Artistic Effects (Art Shot)	42
■ Shooting with Posing Shot (Posing Shot)	44
Using the Camera as a Mirror	45
Shooting with Zoom	46
Shooting a Self-portrait (Selfie timer)	47
Using the LED Light (LED)	48
Adjusting Skin Tone and Texture	49

Recording Movie 50

To record a movie	50
Shooting a Movie of Short Clips (Instant Movie)	53
■ Configuring Recording Settings	53
■ Shooting the Movie	54

Using Motion Shutter to Trigger a Self-timer Operation . . .(Motion Shutter) . . .	56
Shooting Three Versions of an Image with Different Skin Tone Settings (Make-up BKT) . . .	57
Shooting with High Speed Night Scene(HS Night Scene) . . .	58
Shooting with High Speed Night Scene and Portraits (HS Night Scene Portrait) . . .	59
Shooting Beautiful Food Images (Food) . . .	59
Shooting Beautiful Nail Art Images (Nails) . . .	59
Digitally Correcting for Overexposure and Underexposure (HDR) . . .	60
Shooting with Triple Shot	61

Using the REC Menu	62
■ Using the Selfie Pad (Selfie Pad) . . .	63
■ Using Touch Shutter(Touch Shutter) . . .	64
■ Editing a Movie as You Shoot It (Instant Movie) . . .	64
■ Horizontally Flipping the Recording Image (L/R Flip Shot) . . .	64
■ Using the Self-timer (Self-timer) . . .	65
■ Using the LED Light (LED) . . .	65
■ Changing the Image Size (Image Size) . . .	66
■ Movie Image Quality Settings (Movie Quality) . . .	67
■ Correcting Image Brightness (Brightness) . . .	67
■ Adjusting White Balance (White Balance) . . .	68
■ Specifying ISO Sensitivity (ISO) . . .	69
■ Selecting a Focus Mode (Focus) . . .	70
■ Turning on Image Review (Review) . . .	71

Viewing Snapshots	72
Viewing a Movie	72
■ Editing a Movie on the Camera (Movie Editing) . . .	74
Viewing the Image Menu	75
Zooming an On-screen Image	75
Creating a Promotion Movie (Promotion Movie) . . .	76

Using the PLAY Menu	78
■ Using the Selfie Pad	(Selfie Pad)... 79
■ Performing Paint Operations on an Image	(Paint)... 80
■ Playing a Slideshow on the Camera	(Slideshow)... 81
■ Extracting an Image from a Snapshot	(Cut out subject)... 81
■ Inserting a Subject into another Snapshot or Adding a Built-in Frame to a Snapshot	(Paste subject)... 83
■ Protecting a File Against Deletion	(Protect)... 84
■ Rotating an Image	(Rotation)... 85
■ Resizing a Snapshot	(Resize)... 85
■ Cropping a Snapshot	(Trimming)... 86

**Connecting the Camera with a Smartphone
(Wireless Connection)**

Controlling Your Camera with a Smartphone	87
Using a Wireless Mode	89
Getting Ready to Establish a Connection between a Smartphone and Your Camera	90
■ Installing the EXILIM Connect App on Your Smartphone	91
■ Establishing a Wireless Connection for the First Time	92
Using a Smartphone as a Camera Remote Controller (Shoot with phone) ..	94
Sending a Snapshot or Movie File from Camera Memory to a Smartphone	(Send Selected Image)... 95
Viewing Snapshots and Movies in Camera Memory on a Smartphone	(View on phone)... 96
Configuring Wireless Connection Settings	97
■ Entering the Camera's Airplane Mode	(Airplane Mode)... 97
■ Sending Images from the Camera to a Smartphone as They are Recorded	(Auto Send)... 98
■ Specifying Images to be Sent by Auto Send	(Auto Send File Settings)... 99
■ Resizing Snapshots before Sending Them to a Smartphone	(Resize before send)... 99
■ Changing the Camera Password for Wireless LAN Connection	(WLAN password)... 99
■ Unpairing the Camera from a Smartphone	(Unpairing)... 100

Printing

Printing with a Computer	101
--------------------------------	-----


Things you can do using a computer...	102
Using the Camera with a Windows Computer	102
■ Viewing and Storing Images on a Computer	103
■ Playing Movies	105
Using the Camera with a Macintosh	106
■ Connecting the Camera to Your Computer and Saving Files	106
■ Playing a Movie	108
Files and Folders	109
Memory Card Data	110

Adjusting Monitor Screen Brightness	(Screen)	111
Selecting Display Information	(Info)	111
Locking the Screen	(Screen Lock)	112
Configuring Camera Sound Settings	(Sounds)	112
Time Stamping Snapshots	(Timestamp)	113
Configuring World Time Settings	(World Time)	114
■ Setting a Travel Destination		114
■ Selecting the Time Display		114
Setting the Camera's Clock	(Adjust)	115
Specifying the Date Style	(Date Style)	115
Specifying the Display Language	(Language)	116
Displaying a Startup Screen at Power On	(Startup)	117
Formatting Built-in Memory or a Memory Card	(Format)	117
Resetting the Camera to Factory Defaults	(Reset)	117
Checking the Current Camera Firmware Version	(Version)	118


Safety Precautions	119
Precautions During Use	126
Power Supply	139
■ Charging	139
■ Battery Precautions	140
■ Using the Camera in another Country	140
Using a Memory Card	141
Reset Initial Default Settings	142
When things don't go right...	144
■ Troubleshooting	144
■ Display Messages	148
Number of Snapshots/Movie Recording Time	149
Specifications	151

General Guide

The numbers in parentheses indicate the pages where each item is explained.

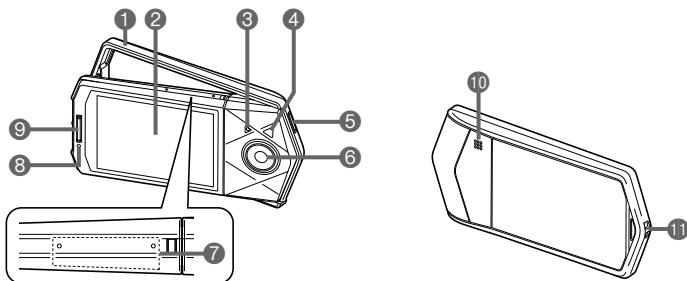


- ① Frame (page 14)
- ② Monitor screen (pages 9, 17, 111)
- ③ Microphone (pages 17, 52)
- ④ LED light (page 48)
- ⑤ [⏻] (Power) (page 31)
- ⑥ Lens
- ⑦ Selfie pad (pages 19, 63, 79)
- ⑧ Operation lamp (pages 22, 25, 31, 33)
- ⑨ Shutter button (page 33)
- ⑩ Speaker
- ⑪ Strap hole (page 8)

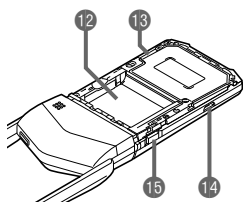

- ⑫ Battery compartment (page 19)
- ⑬ Memory card slot (page 29)
- ⑭ [USB] port (pages 21, 24)
- ⑮ [OPEN] button (pages 19, 29)

• Above illustration shows the camera's cover removed (page 19).

To attach the strap to the camera
(commercially available or separately available)

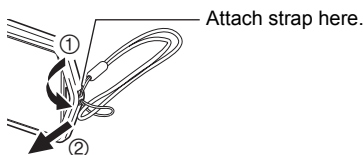


Monitor Screen Contents and How to Change Them

The monitor screen uses various indicators, icons, and values to keep you informed of the camera's status.

- The sample screens in this section are intended to show you the locations of all the indicators and figures that can appear on the monitor screen in various modes. They do not represent screens that actually appear on the camera.


■ Snapshot Recording

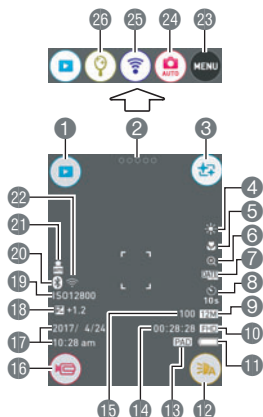

- 1 PLAY mode icon (page 31)
- 2 “○○○○○” (Show Icons) icon
- 3 Make-up icon (page 41)
- 4 White Balance (page 68)
- 5 Focus mode (page 70)
- 6 Digital zoom (page 46)
- 7 Timestamp (page 113)
- 8 Self-timer mode (page 65)
- 9 Snapshot image size (page 66)
- 10 Movie quality (pages 50, 67)
- 11 Battery level indicator (page 26)

- 12 LED light (page 48)
- 13 Operation assigned to selfie pad (pages 19, 63)
- 14 Remaining movie memory capacity (page 150)
- 15 Remaining snapshot memory capacity (page 149)
- 16 “Movie” icon (pages 34, 51)
- 17 Date/Time (pages 26, 115)
- 18 Brightness (page 67)
- 19 ISO sensitivity (page 69)
- 20 Bluetooth Smart communication status (page 90)
- 21 Auto Send (page 98)
- 22 Wireless LAN communication status (page 90)/Airplane mode (page 97)
- 23 Menu icon (page 62)
- 24 Recording mode icon (page 40)
- 25 Wireless mode icon (page 89)
- 26 Mirror mode icon (page 45)

■ Movie Recording

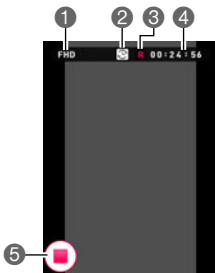


- ❶ Movie quality (pages 50, 67)
- ❷ Recording time switch icon (page 51)
- ❸ Movie remaining time icon (page 51)
- ❹ Remaining movie memory capacity/
Movie recording time (pages 51, 150)
- ❺ “■” Movie stop icon (pages 34, 51)

NOTE

- If you do not perform any operation for about three seconds during snapshot recording or movie recording, icons will become transparent.

■ Snapshot Viewing

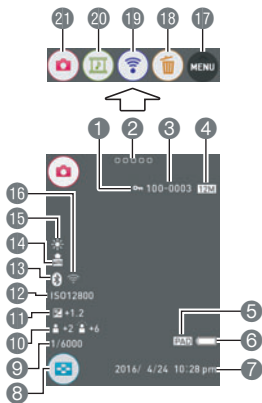


- ❶ Protect indicator (page 84)
- ❷ “○○○○○” (Show Icons) icon
- ❸ Folder name-file name (page 109)
- ❹ Snapshot image size (page 66)

- ❺ Operation assigned to selfie pad (pages 19, 79)
- ❻ Battery level indicator (page 26)
- ❼ Date/time (pages 26, 115)
- ❽ Image menu icon (page 75)
- ❾ Shutter speed
- ❿ Make-up (page 41)
- ⓫ Brightness (page 67)
- ⓬ ISO sensitivity (page 69)
- ⓭ Bluetooth Smart communication status (page 90)
- ⓮ Auto Send (page 98)
- ⓯ White Balance (page 68)
- ⓰ Wireless LAN communication status (page 90)/Airplane mode (page 97)
- ⓱ Menu icon (page 78)
- ⓲ Delete icon (page 36)
- ⓳ Wireless mode icon (pages 89, 96)
- ⓴ Promotion Movie icon (page 76)
- ⓵ REC mode icon (page 31)

NOTE

- The folder name and file name in the upper right corner of the monitor screen has the meaning described below (page 109).
Example: 100-0023: 23rd image file in the folder named "100CASIO".

■ Movie Playback

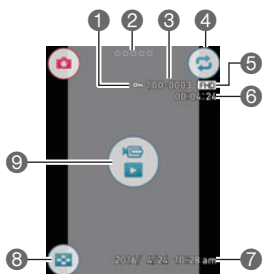


- 1 Protect indicator (page 84)
- 2 "○○○○○" (Show Icons) icon
- 3 Folder name-file name (page 109)
- 4 Repeat playback icon (page 72)
- 5 Movie quality (pages 50, 67)
- 6 Movie recording time (page 72)
- 7 Date/time (pages 26, 115)
- 8 Image menu icon (page 75)
- 9 "🎬" Movie play icon (page 72)

NOTE

- If you do not perform any operation for about three seconds during snapshot viewing or movie playback, icons will become transparent.

What you can do with your CASIO camera


Your CASIO camera is packed with a powerful selection of features and functions to make recording of digital images easier, including the following main functions.

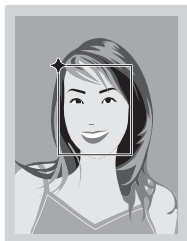

Shooting better looking portraits

Make-up enables adjustment of human skin tone hues and texture, and softening of facial shadows caused by harsh sunlight for better looking portraits.


→ See page **41** for more information.

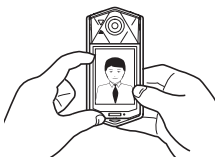

Simple self-portrait shooting

The monitor screen can be rotated so it faces in the same direction as the camera's lens, making self-shooting much easier.

→ See page **47** for more information.

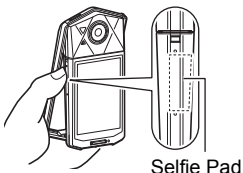

Selfie Pad

The camera's selfie pad enables one-hand operation. One operation each for the REC Mode and PLAY Mode can be assigned to the selfie pad.
REC Mode: Selfie Art, shutter release, zoom.
PLAY Mode: screen scrolling, zoom.

→ See page **19** for more information.



Selfie Art

Apply different effects to make self-portraits shot with the selfie pad better looking and more interesting.


→ See page **63** for more information.



Instant Movie

Movie recording can be paused and resumed as required to create a short movie quickly and easily.

→ See page **53** for more information.

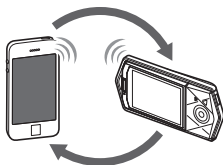


Wireless Connection

Use EXILIM Auto Transfer to transfer images you shoot with the camera to a smartphone or a social networking service automatically.

You can also turn your smartphone into a camera remote controller and send images recorded with your camera to your smartphone.

→ See page **87** for more information.

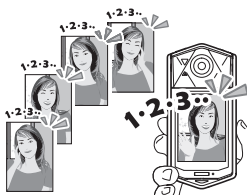

Posing Shot

Posing Shot lets you shoot five successive snapshots, as the camera provides voice guidance for each. This lets you strike a pose for each individual shot.

→ See page **44** for more information.

Changing the Camera Style to Suit Shooting Conditions


You can change the configuration of the camera by opening or closing the frame and rotating the monitor screen panel to suit shooting conditions.

IMPORTANT!

- Do not apply strong pressure to the surface of the monitor screen. Doing so can damage it.
- Never touch the lens with your fingers. Finger smudges, dirt, and other foreign matter on the lens can interfere with proper operation of the camera. Use a blower or other means to keep the lens and flash window free of dirt and dust, and wipe gently with a soft, dry cloth.

Opening and Closing the Frame


The camera's frame can be rotated 225 degrees as shown in the illustration.

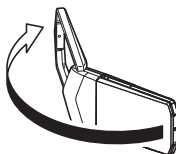


225 degrees

1. With the lens facing towards you, hold onto the frame.

2. Push the monitor screen panel.

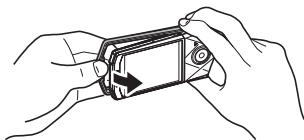

3. Holding the edges of the monitor screen panel, swing the frame open.

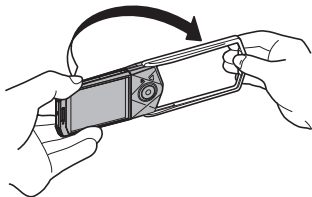

IMPORTANT!

- Do not try to open or close the frame while the monitor screen panel is rotated. Doing so can cause the frame to come into contact with the monitor screen panel and cause malfunction.


Rotating the Monitor Screen

Use the steps below to rotate the monitor screen.


NOTE

- While holding the monitor screen panel as shown in the illustration, you can rotate it 270 degrees counterclockwise.

- 1. Hold the camera as shown in the illustration.**

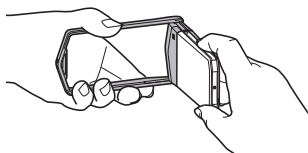


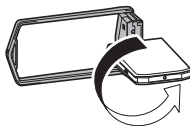


- 2. Firmly holding the frame, carefully rotate the monitor screen panel.**



270 degrees counterclockwise

Camera Configurations

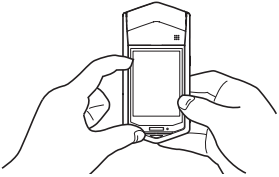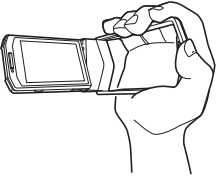
You can open the frame and rotate the monitor screen for a variety of different styles.

Normal Shooting	Shooting with the Frame
<p data-bbox="96 195 505 244">Shoot with the monitor screen facing the opposite direction of the lens.</p> 	<p data-bbox="526 195 935 270">Open the frame 90 degrees and hold the frame. You can also shoot with the camera upside down, if you like.</p> 
Tabletop Shooting	Self-portrait Shooting
<p data-bbox="96 570 505 669">Point the monitor screen and lens in the same direction and open the frame about 30 degrees so the camera can stand up.</p> 	<p data-bbox="526 570 912 620">Open the frame, point the monitor screen and lens in the same direction.</p> 

NOTE

- When shooting hold the camera still. Carefully press the shutter button and take care to avoid all movement as the shutter releases and for a few moments after it releases.
- Take care that your fingers and the strap do not cover any of the areas indicated in the illustration.
- To protect against accidentally dropping the camera, attach the wrist strap (commercially available or separately available) and make sure it is around your fingers or wrist while you are operating the camera.
- Never swing the camera around by its strap.

LED light

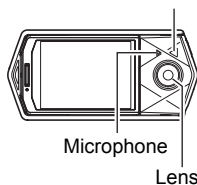


Lens



IMPORTANT!

- Take care to ensure that your finger is not blocking or is not too close to the LED light. Fingers can cause unwanted shadows when shooting.




Using the Touch Panel

The monitor screen of the camera is a touch panel. This means you can perform the following operations by touching the screen with your fingers.


Touch

Momentarily touching the screen with your finger. Touch the screen to select an icon or menu item, and to configure settings. You can zoom in and zoom out on a displayed image by tapping it twice in succession.

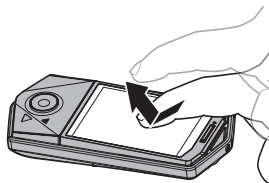

Touch-and-hold


Holding your finger against the screen. Touch and hold the screen to perform continual frame-by-frame playback of a movie.

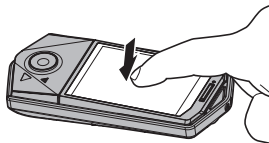

Drag

Holding your finger against the screen as you drag it up, down, left, or right.

Use drag to move a screen image to a different location, and to scroll between images.

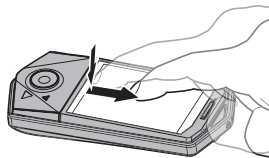

Spread

Holding your thumb and forefinger against the screen as you spread them out.


Use spread to enlarge the screen image.



Squeeze

Holding your thumb and forefinger against the screen as you bring them together.

Use squeeze to reduce the size of the screen image.

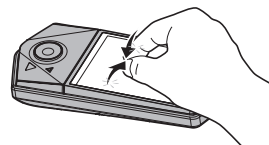

IMPORTANT!

- Never use a pointed or hard object to perform screen operations. Doing so can damage the screen.
- The camera will have a hard time interpreting a screen operation made using your fingernails. Use the fleshy pad of your finger.

NOTE

- Applying a commercially available LCD protective sheet will reduce the operation sensitivity of the monitor screen.


Using the Selfie Pad

You can use the selfie pad to perform various functions while shooting a self-portrait.

Double-tap

Double-tapping the selfie pad displays an icon “PAD” to let you know that selfie pad operation is enabled.

Double-tapping the selfie pad again disables selfie pad operation. Note, however, that if the Selfie Art function is assigned to the selfie pad, you will need to disable it using either one of the following operations: double-tap the selfie pad and then touch “EXIT”, or double-tap the selfie pad, use the selfie pad to select “EXIT”, and then double-tap the selfie pad again.

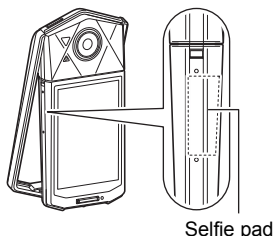

Slide

Slide your finger up or down along the selfie pad. The function assigned to the selfie pad will operate.

NOTE

- Use the menu screen's “Selfie Pad” item (pages 63, 79) to assign an operation to the selfie pad.

First, charge the battery prior to use.

Note that the battery of a newly purchased camera is not charged. Perform the steps below to load the battery into the camera and charge it.


- Your camera requires a special CASIO rechargeable lithium ion battery (NP-150) for power. Never try to use any other type of battery.

Loading the Battery

1. Open the frame (page 14).


2. Open the cover.

While depressing the [OPEN] button, slide the cover in the direction of arrow ② in the nearby illustration.

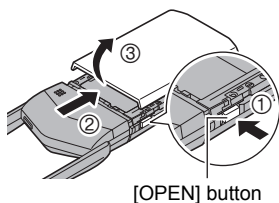


3. Load the battery.

With the CASIO logo on the battery upwards, load the battery into the camera as shown in the illustration.

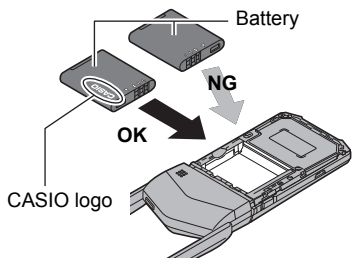

4. Close the cover.

- Positioning the cover about two millimeters from the lens unit, keep it parallel with the camera as you slide it in the direction of arrow ① and then arrow ② to secure it in place.

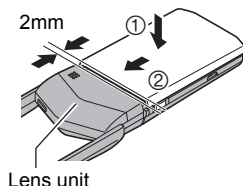


To replace the battery

1. Press [⏻] (Power) to turn off the camera and then open the battery cover.

2. Remove the current battery and load a new one.

As shown in the illustration, pull up the edge of the battery to remove it.

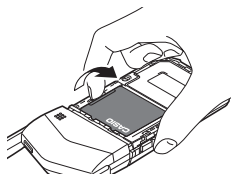

3. Close the battery cover.

★ IMPORTANT!

- The operation lamp (page 8) will flash green for some time after you press [⏻] (Power) to turn off the camera. Never remove the battery while the operation lamp is flashing green. Doing so can result in corruption or loss of data in camera memory.


Charge the Battery

You can use either of the two following methods to charge the battery. Before charging the battery, use the procedure under “Opening and Closing the Frame” (page 14) to open the frame.

- USB-AC adaptor
- USB connection to a computer (Using the included micro USB cable.)

■ To charge with the USB-AC adaptor

The adaptor lets you charge the battery while it is loaded in the camera. While the camera is turned off, connect in the sequence shown below. Charging time: Approximately 2 hours 20 minutes

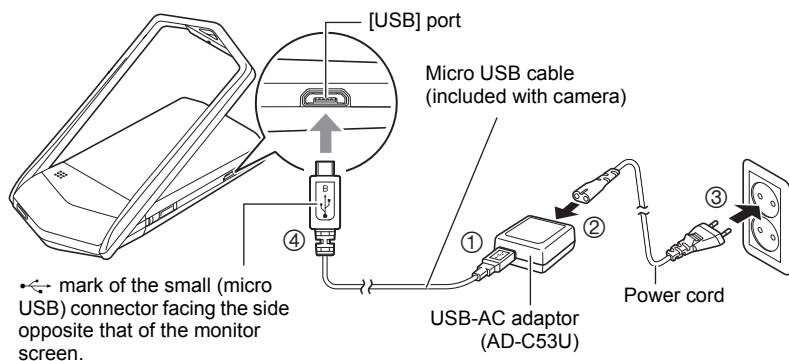

- When disconnecting the USB-AC adaptor from the camera, be sure to disconnect from the camera first.


IMPORTANT!

- A battery that has not been used for a long time and/or ambient temperature can cause charging to take longer than normal. These conditions may also cause the operation lamp to flash red. If this happens, refer to page 139.
- Pressing [⏻] (Power) while the USB-AC adaptor is connected to the camera will turn on the camera with power being supplied by the battery. Because of this, charging will stop.
- The USB-AC adaptor will become warm during charging. This is normal and does not indicate malfunction.
- The shape of the power plug depends on each country or geographic area.

Operation Lamp Operation


Lamp Status	Description
Lit Red	Charging
Flashing Red	Abnormal ambient temperature, USB-AC adaptor problem, or battery problem (page 139), or charging terminated by the timer
Off	Charging complete


Operation lamp

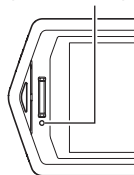

USB Cable Connection Precautions

- When connecting the USB cable to the camera, make sure that the cable connector and monitor screen panel are oriented correctly as shown in the illustration below.


Make sure that the  mark side of the USB cable connector and the opposite side of the monitor screen are facing in the same direction.

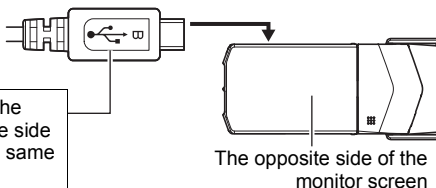

The operation lamp always initially light after charging starts. Even if the battery is already fully charged, the lamp will light momentarily.


If the lamp does not light, check the orientation of the USB cable connector.

- Make sure that you insert the cable connector into the USB port until you feel it click securely into place. Failure to insert the connector fully can result in poor communication or malfunction.
- Note that even while the connector is fully inserted, you still will be able to see the metal part of the connector as shown in the illustration.

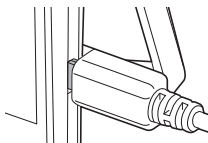

■ To charge using a USB connection to a computer

USB connection lets you charge the battery while it is loaded in the camera. While the camera is turned off, connect in the sequence shown below (①, ②).

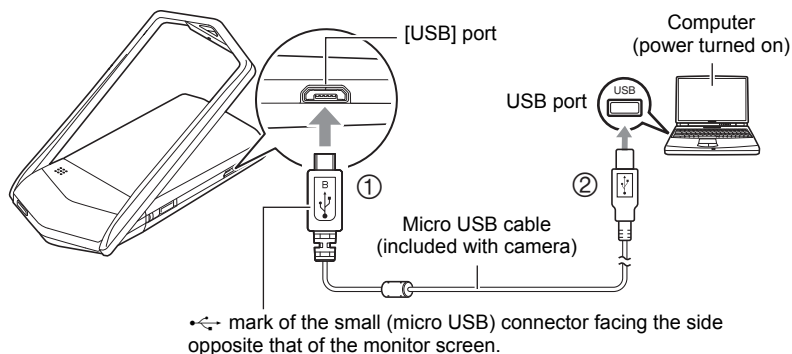

- If the camera is on, press [⏻] (Power) to turn it off before connecting it to your computer.
Charging time: Approximately 2 hours 50 minutes


★ **IMPORTANT!**

- The first time you connect the camera to your computer with the USB cable, an error message may appear on your computer. If this happens, disconnect and then reconnect the USB cable.
- A battery that has not been used for a long time, certain types of computers, and connection conditions can cause charging to take longer than normal. These conditions may also cause the operation lamp to flash red. If this happens, refer to page 139.
- For faster charging, use of the supplied USB-AC adaptor is recommended.
- You cannot use the camera to shoot images while it is being charged over a computer USB connection. If you want to shoot with the camera, disconnect the USB cable.
- If you turn on the camera while charging over a USB connection to a computer is in progress, the camera will establish a USB connection with the computer. Though charging normally should continue at this time, certain types of computers or connection environments may stop charging if supply power is low. This will be indicated by the camera's operation lamp lighting green.
- Charging is not performed while the connected computer is in the hibernate mode.

Operation Lamp Operation

Lamp Status	Description
Lit Red, (Lit/Flashing Amber)	Charging
Flashing Red	Abnormal ambient temperature, charging taking abnormally long, or battery problem (page 139)
Off, (Lit Green)	Charging complete

Operation lamp

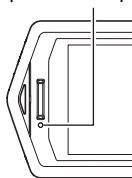





- The information in parentheses in the above table shows the lamp status while the camera is turned on during charging.

Other Charging Precautions


- With the two charging methods described above, you can charge the camera's battery (NP-150) without removing it from the camera. Never use any other type of charger device. Attempting to use a different charger can result in unexpected accident.
- This model can be charged only via from USB 2.0 specification USB port only.
- USB charging devices and power supply devices are subject to fixed standards. Use of an inferior device or a device that is not up to standard can cause malfunction and/or failure of your camera.
- Operation is not guaranteed in the case of a computer built or modified by you. Even in the case of a commercially available computer, certain USB port specifications may make it impossible to charge via the USB cable.
- A battery that is still warm immediately after normal use may not charge fully. Give the battery time to cool before charging it.
- A battery discharges slightly even when it is not loaded in the camera. Because of this, it is recommended that you charge the battery immediately before you need to use it.
- Charging the camera's battery may cause interference with TV and radio reception. If this happens, plug the USB-AC adaptor into an outlet that is further away from the TV or radio.
- Actual charging time depends on current battery capacity and charging conditions.
- Do not use the USB-AC adaptor with any other device.
- Never use the power cord with another device.
- Use only the USB-AC adaptor and USB cable specified in this manual for charging. Use of any other type of devices may result in improper charging.

Checking the Current Battery Level

As battery power is consumed, a battery indicator on the monitor screen indicates its current level as shown below.

Remaining Power	High ←————→ Low
Battery Indicator	 →  →  → 
Indicator Color	White → White → Red → Red

 indicates battery power is low. Charge the battery as soon as possible.

Recording is not possible when  is indicated. Charge the battery immediately.

- The level shown by the battery indicator may change when you switch between the REC mode and PLAY mode.
- Leaving the camera for about 20 days with no power supplied while the battery is dead will cause its date and time settings to be cleared. A message telling you to configure time and date settings will appear the next time you turn on the camera after restoring power. When this happens, configure date and time settings (page 115).
- See page 153 for information about battery life and number of shots.

Configuring Basic Settings the First Time You Turn On the Camera

The first time you turn on the camera, a screen appears for configuring the display language, date, and time settings. Failure to set the date and time correctly will cause the wrong date and time data to be recorded with images.

IMPORTANT!

- A screen for language selection will not appear in step 2 of the procedure below if you purchased a camera intended for the Japanese market. To change the display language from Japanese in this case, use the procedure under “Specifying the Display Language (Language)” (page 116). Note that a version of this manual in the language you select may not be included with a camera intended for the Japanese market.
- Camera models sold in certain geographic areas may not support display language selection.

1. Press [⏻] (Power) to turn on the camera.

2. Drag (page 18) upwards and downwards until you find the language you want, and then touch to select it.


3. Touch the date display format you want.

Example: July 10, 2016

YY/MM/DD → 16/7/10

DD/MM/YY → 10/7/16


MM/DD/YY → 7/10/16

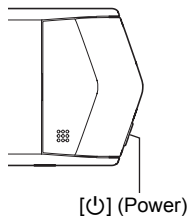

4. Touch the value you want to change (year, month, day, hour, minute).

5. Touch “⏮”, “⏭” to change the currently selected value.

- Touching and holding “⏮”, “⏭” will change the setting at high speed.
- To switch between 12-hour and 24-hour format, touch the 12/24 hour switch icon.

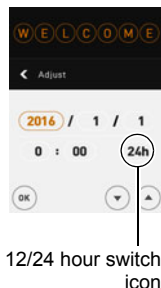

6. When the date and time settings are the way you want, touch “OK”.

7. Touch “Auto” or “Premium Auto Pro” to select the default auto recording mode you want.

8. Touch “Apply”.

- You will be able to change this setting later, if you want. See page 32 for details.

If you make a mistake configuring display language, date, or time settings with the above procedure, refer to the following pages for information about how to correct the settings.

– Display language: Page 116

– Date and time: Page 115

NOTE

- Each country controls its local time offset and the use of summer time, and so they are subject to change.

Preparing a Memory Card

Though the camera has built-in memory that can be used to store images and movies, you probably will want to purchase a commercially available memory card for greater capacity. The camera does not come with a memory card. Images recorded while a memory card is loaded are saved to the memory card. When no memory card is loaded, images are saved to built-in memory.

- For information about memory card capacities, see page 149.


Supported Memory Cards

- microSD Memory Card
- microSDHC Memory Card
- microSDXC Memory Card



- The above are supported memory card types as of August 2015.
- This camera supports use of microSD memory cards of the following types and capacities: microSD memory cards up to 2GB; microSDHC memory cards greater than 2GB, up to 32GB; microSDXC memory cards greater than 32GB, up to 2TB. Note that the ability to use any particular card with this camera, even if it satisfies the above capacity and type requirements, is not guaranteed.

Warning!


- Memory cards are small and present a risk of accidentally being swallowed by infants and young children. Keep memory cards out of the reach of infants and young children. If a memory card is ever swallowed accidentally, contact a physician immediately. 

Memory Card Handling Precautions

Certain types of memory cards can slow down processing speeds. In particular, high-quality movies may not be able to be stored correctly. A slow memory card can take too much time to record data and result in breaks in the image and/or audio during playback. When this happens the movie icon will turn yellow on the monitor screen.


To load a memory card

1. Press [⏻] (Power) to turn off the camera and then open the frame (page 14).
2. While holding down [OPEN], slide the cover in the direction of arrow ② in the nearby illustration to remove it.

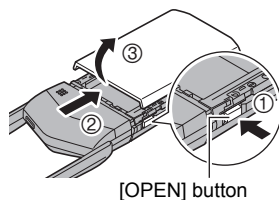


3. Load a memory card.

Positioning the memory card as shown in the nearby illustration insert it into the camera's memory card slot and press until you hear it click into place.

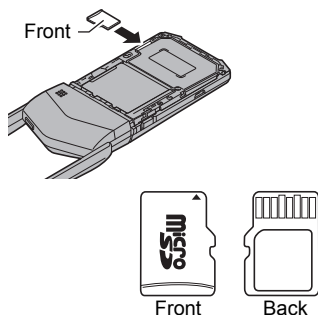

4. Close the cover.

- Positioning the cover about two millimeters from the lens unit, keep it parallel with the camera as you slide it in the direction of arrow ① and then arrow ② to secure it in place.

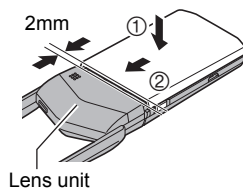


IMPORTANT!

- Never insert anything besides a supported memory card (page 28) into the memory card slot.
- Should water or any foreign object ever get into the card slot, immediately turn off the camera, and contact your retailer or nearest CASIO authorized service center.

■ To replace the memory card

Press the memory card and then release it. This will cause it to pop out of the memory card slot slightly. Pull the card out the rest of the way and then insert another one.

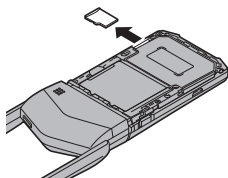

★ **IMPORTANT!**

- Turn off the camera before replacing the memory card.
- The operation lamp (page 8) will flash green for some time after you press [⏻] (Power) to turn off the camera. Never remove the memory card while the operation lamp is flashing green. Doing so can cause the image save operation to fail and even damage the memory card.

|| **To format (initialize) a new memory card**

Format a memory card on the camera before using it for the first time.

★ **IMPORTANT!**

- Formatting a memory card that already has snapshots or other files on it, will delete its contents. Normally you do not need to format a memory card again. However, if storing to a card has slowed down or if you notice any other abnormality, re-format the card.
- Be sure to use the camera to format a memory card. Formatting a card on a computer will result in a non-SD standard format, which can greatly slow down processing time and cause compatibility, performance, and other problems.

1. Load a memory card (page 29).

2. Turn on the camera and then touch “○○○○○” (Show Icons).

3. Touch “MENU”.

4. Drag upwards and downwards until you find “Setup”, and then touch it.

5. Touch “Format”.

6. Touch “Format” and then touch “Yes”.

This starts the memory card format operation.

Turning Power On and Off


■ To turn on the camera

Press [⏻] (Power).

This will turn on the camera, which is indicated when the operation lamp lights green, and enter the REC mode.

Operation lamp

[⏻] (Power)

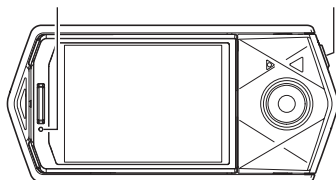


★ **IMPORTANT!**

- The camera will not turn on when you press [⏻] (Power) while it is being charged over a computer USB connection (page 24).

■ To enter the REC mode and PLAY mode


To enter the PLAY mode	In the REC mode, touch "⏮" (PLAY). <ul style="list-style-type: none">• If "⏮" (PLAY) is not displayed on the screen, you can touching the Review image (page 71), or switch to the PLAY mode by touching "○○○○○" (Show Icons) and then touching "⏮" (PLAY).
To enter the REC mode	In the PLAY mode, touch "○○○○○" (Show Icons). On the screen image that appears, touch "⏻" (REC).

"○○○○○"
(Show Icons)



Screen after "○○○○○"
(Show Icons) is touched

"⏮" (PLAY) / "⏻" (REC)

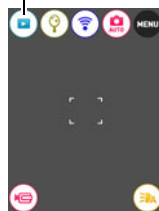

NOTE





- To conserve battery power, an Auto Power Off function will turn off power automatically if you do not perform any operation for about five minutes.

To Shoot a Snapshot

Your camera has a variety of different recording modes to suit various shooting conditions and objectives (page 40). This section explains general shooting procedures using the auto recording mode.

Selecting an Auto Recording Mode

You can select one of two auto recording modes (Auto or Premium Auto Pro) according to your digital imaging needs.


Setting	REC Screen Icon Display	Description
 Auto		This is the standard Auto recording mode.
 Premium Auto Pro		With Premium Auto Pro recording, the camera automatically determines whether you are shooting a subject or scenery, and other conditions. Premium Auto Pro recording delivers higher image quality than standard Auto recording. <ul style="list-style-type: none">• Some of the settings configured automatically by Premium Auto Pro cannot be changed by you.• It also requires more power (and runs down the battery quicker) than Auto.

1. Press [⏻] (Power) to turn on the camera.
2. Touch “○○○○” (Show Icons).
3. Touch the second icon from the right (second icon from the top in the case of portrait display orientation) (Recording mode).

Recording mode icon



4. Touch “Auto” or “Premium Auto Pro” to select the auto recording mode you want.

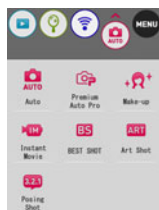

To shoot a snapshot

1. Point the camera at the subject.

If you are using Premium Auto Pro, text will appear on the monitor screen describing the type of shot the camera has detected.

- Spread your fingers apart on the screen to change the zoom factor (page 46).



+ (Telephoto)



– (Wide Angle)




Type of shot

2. Half-press the shutter button to focus the image.

When focus is complete, the camera will beep, the operation lamp will light green, and the focus frame will turn green.

Half-press




Press lightly until the button stops.

Beep, beep (Image is in focus.)


When you half-press the shutter button, the camera automatically adjusts exposure and focuses on the subject it is currently pointed at. Mastering how much pressure is required for a half-press and a full-press of the shutter button is an important technique for good-looking images.

Shutter button

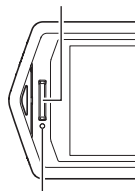

Operation lamp


Focus frame

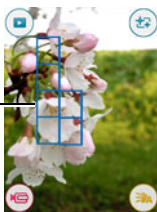

3. Continuing to keep the camera still, press the shutter button the rest of the way down.



This records the snapshot.


Full-press




Snap (Image is recorded.)

Recording a Movie

Touch “” (Movie) to start movie recording. Touch “” (Movie Stop) to stop recording. See page 50 for details.

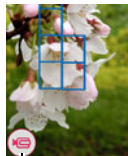

“” (Movie)/
“” (Movie Stop)

NOTE

- You also can shoot a snapshot by touching a point on the monitor screen (page 64).
- You can specify the image size for snapshots. See page 66 for more information.

■ If the image does not focus...

If the focus frame stays red and the operation lamp is flashing green, it means that the image is not in focus (because the subject is too close, etc.). Re-point the camera at the subject and try to focus again.

■ Shooting with Auto

“Focus lock” (page 71) is the name of a technique you can use when you want to shoot an image in which the subject to be focused on is not within the focus frame in the center of the screen.

■ Shooting with Premium Auto Pro

- Some menu items are not available while Premium Auto Pro is in use (page 62). Only the menu items whose settings can be configured will be displayed on the menus while Premium Auto Pro is in use.
- In addition to shutter speed and ISO sensitivity, the camera automatically executes the following operation as required when shooting with Premium Auto Pro.
 - Auto Focus is normally performed until you half-press the shutter button.
 - The camera automatically determines the focus point on the screen and focuses there.
 - When shooting people, the face detection feature detects the faces of up to ten individuals and adjusts focus and brightness accordingly.
- When shooting with Premium Auto Pro, the message “Processing Premium Auto.” may appear on the monitor screen. If you feel the camera is taking too long to process data, try shooting with standard Auto instead.
- In some cases, Premium Auto Pro may not be able to interpret the shooting environment correctly. If this happens, shoot with standard Auto.
- If “[HS]” is displayed, the camera will shoot a series of CS images and merge them into a final image. Take care to avoid any camera and subject movement until shooting of all of the CS images is complete.

Viewing Snapshots

Use the following procedure to view snapshots on the camera's monitor screen.


- For information about how to play back movies, see page 72.

1. Touch “▶” (PLAY) to enter the PLAY mode.

This will display one of the snapshots currently stored in memory.

- If “Type 2” is selected for the “Review” setting (page 71), touch the Review image on the monitor screen.
- You can display and delete information about the displayed snapshot as required (page 111).
- To zoom in on a displayed image, tap the monitor screen twice in succession (page 75).

If you are recording a snapshot that is very important to you, it is recommended that you zoom the image and check its details after recording it.

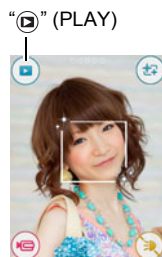

2. Drag left or right across the screen image to scroll through the snapshots.

NOTE

- Pressing the shutter button while in the PLAY mode or while a menu screen is displayed will switch directly to the REC mode.
- A question mark (?) will be displayed for images that cannot be displayed for some reason.

Deleting Snapshots and Movies

If memory becomes full, you can delete snapshots and movies you no longer need in order to free up storage and record more images.



IMPORTANT!

- Remember that a file (snapshot and movie) delete operation cannot be undone.

■ To delete a single file


1. In the PLAY mode, drag left or right to display the file you want to delete.

2. Touch “○○○○○” (Show Icons).

3. Touch “🗑️”.

4. Touch “Delete 1 File”.

This will delete the selected image.

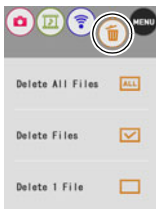

■ To delete specific files

1. Enter the PLAY mode.

2. Touch “○○○○○” (Show Icons).

3. Touch “”.

4. Touch “Delete Files”.

This displays a file selection screen.

5. Touch a file you want to delete.

This will select the check box of the selected file's image.

- To clear (deselect) a check box, touch the applicable file.
-

6. After you are finished selecting files, touch “OK” or “”.

7. Touch “OK” or “”.

This deletes the files you selected.

- To cancel the delete operation, touch “Cancel” in step 6.
-

NOTE

- You can also delete images using the image menu (page 75).
-

■ To delete all files

1. Enter the PLAY mode.

2. Touch “○○○○○” (Show Icons).

3. Touch “”.

4. Touch “Delete All Files”.

5. Touch “Delete”.

This will cause the message “There are no files.” to appear.

Snapshot Shooting Precautions

Operation

- If unwanted light is shining onto the lens, shade the lens with your hand when shooting an image.

Monitor Screen when Shooting Snapshots

- Subject brightness conditions can cause monitor screen response to slow and can cause digital noise in the monitor screen image.
- The image that appears on the monitor screen is for image composition. The actual image will be recorded in accordance with the currently selected recording mode (page 40).

Shooting Indoors under Fluorescent Lighting

- Minute flickering of fluorescent lighting can affect the brightness or color of an image.

Other Precautions

- A noise reduction process is performed when ISO sensitivity is set to a high value. This can cause the camera to take relatively longer to be ready to shoot again after you press the shutter button. Do not perform any operation while the image recording operation is in progress.
- Due to the characteristics of the imaging element used by the camera, very fast moving objects in an image may appear distorted.

■ Auto Focus Restrictions

- Any of the following can make proper focus impossible.
 - Solid color wall or other very low contrast subject
 - Strongly back lit subject
 - Very shiny subject
 - Blinds or other subject with a repeating horizontal pattern
 - Multiple subjects at varying distances from the camera
 - Subject in a dark location
 - Camera movement while shooting
 - Fast-moving subject
 - Subjects outside the focus range of the camera
- If you cannot focus properly while shooting with Auto recording mode, try using focus lock (page 71).


Recording Images

Touching the monitor screen in the REC mode will display a screen for configuring REC mode settings.

■ To configure REC mode settings

1. Press [⏻] (Power) to turn on the camera and enter the REC mode.

- If the camera is in the PLAY mode, touch “📷” (REC) to enter the REC mode.

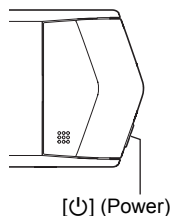

2. Touch “○○○○○” (Show Icons).

3. Touch the item whose setting you want to change.

- 1 Menu (page 62)*
- 2 Recording mode (page 40)
- 3 Wireless mode (page 89)
- 4 Mirror mode (page 45)
- 5 PLAY mode (page 31)
- 6 Movie (page 50)
- 7 LED light (page 48)




* Depending on the recording mode, some of the items on the menu that appears may not be usable.

Selecting a Recording Mode

The camera has a variety of different recording modes.

1. In the REC mode, touch the “○○○○○” (Show Icons).



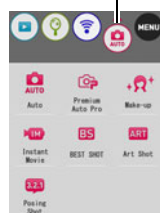




Recording mode icon



2. Touch the recording mode icon.



3. Touch the icon of the recording mode you want to use.

This enters the selected recording mode.

 Auto	Standard Auto recording mode. This is the mode normally used for shooting (page 32).
 Premium Auto Pro	With Premium Auto Pro recording, the camera automatically determines whether you are shooting a subject or scenery, and other conditions. Premium Auto Pro recording delivers higher image quality than standard Auto recording mode (page 32).
 Make-up	Makes it easier to shoot beautiful portraits. Skin tone and texture can be adjusted while shooting (page 41).
 Instant Movie	Movie recording can be paused and resumed as required to create a short movie (page 53).
 BEST SHOT	With BEST SHOT, simply select the sample scene that resembles the type of shot you want, and the camera automatically configures ideal settings for the subject and shooting conditions (page 55).
 Art Shot	A variety of artistic effects help to make even common, ordinary subjects become more novel and exciting (page 42).
 Posing Shot	Posing Shot lets you shoot five successive snapshots, as the camera provides voice guidance (page 44).

Recording Beautiful Portraits (Make-up)

Make-up enables adjustment of human skin tone hues and texture, and softening of facial shadows caused by harsh sunlight for better looking portraits.


1. In the REC mode, touch the “○○○○○” (Show Icons).
2. Touch the recording mode icon.
3. Touch “” (Make-up).
This will enter the Make-up mode.
4. Touch “” (Make-up) that appears on the monitor screen.
5. Touch the screen and adjust “Skin Tone” and “Smooth Skin”.

Skin Tone	“Tan +6” to “0 (Off)” to “Light +6”
Smooth Skin	“0 (Off)” to “+12 (Max.)”

6. Touch “OK”.
7. Press the shutter button to shoot.



NOTE

- Make-up can also be used with other recording modes besides Make-up Mode. The Make-up icon “” will appear on the monitor screen when the current recording mode supports use of the Make-up function (page 49).



Shooting with Artistic Effects (Art Shot)

A variety of artistic effects help to make even common, ordinary subjects become more novel and exciting.

Scene	Description
HDR Art	Uses HDR (High Dynamic Range, page 60) to turn normal images into works of art.
Crystal Ball	Creates a mysterious effect by placing the image in a bubble floating in midair.
Sparkling Shot	Softens the overall image and adds points of light for a sparkle effect.
Toy Camera	Dark edges and altered hues make images look like they were shot by a toy camera.
Soft Focus	Overall blurring for a soft and romantic effect.
Light Tone	Weakened contrast for a feeling of airy refinement.
Pop	Enhanced saturation makes colors stand out in with rich clarity.
Sepia	Sepia tones create a decidedly retro look.
Monochrome	All of the strong contrast and graininess of a black and white print.
Miniature	Partial blurring makes scenes look like they are from of a miniature world.
Fisheye	A fisheye lens effect can be used to create a variety of humorous images.

1. In the REC mode, touch the “○○○○○” (Show Icons).
2. Touch the recording mode icon.
3. Touch “**ART**” (Art Shot).
4. Touch the Art Shot scene you want to use.
 - Touch “⬇️”, “⬆️” to display another scene.
 - Touching “**i**” on the monitor screen and then touching an Art Shot scene will display detailed information about the scene.

5. Touch the “ART” icon.

The intensity of the selected effect can be adjusted as described below. Note, however, that the “Miniature” effect cannot be adjusted.

Scene	Adjustment
HDR Art	Effect level
Crystal Ball	Effect type
Sparkling Shot	Effect type
Toy Camera	Hue
Soft Focus	Effect level
Light Tone	Hue
Pop	Effect level
Sepia	Effect level
Monochrome	Effect level
Fisheye	Effect level

6. Touch the level you want to select.

7. Touch “OK”.

8. Press the shutter button to shoot.

NOTE

- With the HDR Art scene, the settings below are configured automatically.
 - LED: Off
- Shooting with this REC mode makes the shooting range narrower than normal.
- The desired effect may not be attained if the camera or subject moves during shooting.
- Depending on shooting conditions and image composition, this REC mode may not be able to produce the desired result.
- Movie recording is disabled while shooting with Art Shot.
- Sample images shown on Art Shot scene screens were not shot with this camera.
- An image shot with an Art Shot scene cannot be converted to a normal image without the Art Shot effect.

Shooting with Posing Shot (Posing Shot)

Posing Shot lets you shoot five successive snapshots, as the camera provides voice guidance for each. This lets you strike a pose for each individual shot.

1. In the REC mode, touch the “○○○○○” (Show Icons).

2. Touch the recording mode icon.

3. Touch “3,2,1” (Posing Shot).

4. Press the shutter button to start recording.

Shoot in accordance with the voice guidance from the camera.

NOTE

- To adjust the volume of the voice guidance, use the “Posing Vol” setting under “Sounds” (page 112).
- To interrupt an ongoing Posing Shot operation, press the shutter button or touch the monitor screen.
- Note that preview images are not displayed when shooting with this function.

■ Changing the Voice Guidance Type

You can use the procedure below to select one of five types for the voice guidance that sounds while you are shooting.

1. Touch “3,2,1” (Voice).

2. Touch the number of the voice guidance you want to use.

This will cause the corresponding voice to sound.

3. After selecting the voice guidance type you want to use, touch “OK”.

Using the Camera as a Mirror

You can use the procedure below to configure the camera so its monitor screen acts as a mirror.

- Images cannot be recorded while in the Mirror Mode. Mirror Mode image data is not saved in camera memory.
- The Mirror Mode can be entered only while the camera is positioned in portrait (vertical) orientation. It cannot be entered while the camera is in landscape (horizontal) orientation.



- 1. Rotate the monitor screen panel so the screen is facing in the same direction as the lens (page 14).**
- 2. On your camera, enter the REC mode and then touch “○○○○○” (Show Icons).**
- 3. Touch the “🔄” icon.**
This enters the Mirror Mode.

■ Mirror Mode Functions

Brightness adjustment	Touch the “+” side or “-” side of “🔍”.
Horizontal screen image flip	Touch “🔄”. <ul style="list-style-type: none">• Image flips to show how your face appears to others.
Screen image freeze	Touch “PAUSE”. <ul style="list-style-type: none">• Freezes the image to make it easier to view in detail.
Zoom	Spread two fingers apart or squeeze them together on the screen to zoom the image. <ul style="list-style-type: none">• Lets you move in on an image for greater detail.
Exit the Mirror Mode	Touch “⏪”.

- Brightness adjustment and horizontal screen image flip cannot be used while the screen image is frozen.

Shooting with Zoom

Your camera is equipped with various types of zoom: HD Zoom, SR Zoom, and digital zoom. The maximum zoom factor depends on the image size setting.

HD Zoom	Allows greater zoom capabilities by cutting out a portion of the original image and enlarging it, without deterioration of image quality.
SR Zoom	Applies super resolution technology to suppress image deterioration.
Digital zoom	A digital process is used to enlarge the center of the image, so there is deterioration of image quality.

1. Perform the required screen operation to change the zoom factor as desired.

Zoom in: Spread

Zoom out: Squeeze



Telephoto





Wide Angle

Telephoto : Enlarges the subject and narrows the range.

Wide Angle : Reduces the size of the subject and broadens the range.

2. Press the shutter button to shoot the image.

NOTE

- Telephoto images are prone to blurring caused by camera movement when you press the shutter button. Because of this, stabilizing the camera by placing it on a level surface, etc. is recommended.
- Zoom operations are disabled during high speed movie recording. Perform the zoom operation before you touch “” (Movie) to start recording.
- “” is displayed on the monitor screen while digital zoom is being used.

■ Zoom Factor

- The image deterioration point depends on the image size (page 66). The smaller the image size, the higher the zoom factor you can use before reaching the image deterioration point.

Image Size	Undeteriorated Zoom Limit	Maximum Zoom Factor
12M	1.5X	4.0X
3M	2.9X	7.8X

Shooting a Self-portrait (Selfie timer)

While the camera is configured so the monitor screen and lens are facing in the same direction, you can use a special self-portrait timer (Selfie Timer) to shoot a self-portrait while composing the image on the screen.

- When using the selfie timer to shoot a self-portrait, select one of the following recording modes.
 - Auto
 - Premium Auto Pro
 - Make-up
 - Make-up BKT
 - Selfie Art



1. Rotate the monitor screen panel so the screen is facing in the same direction as the lens (page 14).

2. Select one of the above as the recording mode.

3. Drag “☺” (Selfie Timer) downwards to specify the selfie timer countdown duration.

The camera will shoot an image when the countdown reaches zero.

- You can set a selfie timer countdown duration within the range of two to ten seconds. The further you drag, the longer the duration.
- To cancel an ongoing countdown, touch anywhere on the screen except where the selfie timer icon is displayed or press the shutter button.







Using the LED Light (LED)

Use the LED light when shooting where lighting is dim. The effectiveness of the LED light is reduced the further you are from the subject.

1. In the REC mode, touch “○○○○○” (Show Icons).

2. Touch “” (LED).


Each touch of the “” (LED) icon cycles between the settings below.

Setting	REC Screen Icon Display	Description
Auto		The LED light fires automatically under dark shooting conditions when the shutter button is half-pressed to focus and/or full-pressed to shoot.
On		LED always lights when shooting.
Off		LED never turns on or fires.

IMPORTANT!


- Do not turn on the LED light near a person's eyes and do not allow anyone to look directly into the light.
- You should compose the image so the main subject is in the center of the image when using the LED light.
- Since the camera is equipped with a wide-angle lens, the center tends to be brighter while the periphery tends to be darker.
- LED light is disabled while shooting with the following feature.
 - Following BEST SHOT scenes
Triple Shot, HDR, HS Night Scene
 - Following Art Shot scene
HDR Art

Adjusting Skin Tone and Texture

When “” (Make-up) appears on the monitor screen while you are shooting, you can adjust the skin tone and texture of your subject.

- Make-up can be used with the recording modes listed below.
 - Premium Auto Pro
 - Make-up
 - Posing Shot
 - Following BEST SHOT scenes
 - Motion Shutter, HS Night Scene Portrait, Make-up BKT, Triple Shot
 - Selfie Art
 - Instant Movie



1. Touch “” (Make-up) that appears on the monitor screen.

2. Touch the screen and adjust “Skin Tone” and “Smooth Skin”.

Skin Tone	“Tan +6” to “0 (Off)” to “Light +6”
Smooth Skin	“0 (Off)” to “+12 (Max.)”

3. Touch “OK”.

4. Press the shutter button to shoot.



Recording Movie

To record a movie

The following procedure explains how to record a movie.




- You can record a movie while one of the following recording modes is selected.
 - Auto
 - Premium Auto Pro
 - Make-up
 - Following BEST SHOT scenes
HS Night Scene, HS Night Scene Portrait, Food, Nails

1. In the REC mode, touch “○○○○○” (Show Icons).

2. Touch “MENU”.

3. Drag upwards and downwards until you find “Movie Quality”, and then touch to select it.



4. Touch the item whose setting you want to change.

Movie Quality	REC Screen Icon Display	Frame Rate	Image Size (Pixels)	Description
Full HD		30fps	1920×1080	Select this setting to record full high-definition (Full HD) movies. The aspect ratio of movies recorded with this setting is 16:9.
HD		30fps	1280×720	Select this setting to record high-definition (HD) movies. The aspect ratio of movies recorded with this setting is 16:9.
HS240		240fps	512×384	Select this setting to record high speed movies at a speed of 240 fps. <ul style="list-style-type: none">• Audio is not recorded.


5. To close the menu screen, touch “MENU” or press the shutter button.



6. Touch “” (Movie).

This will start recording.

- Monaural audio is also recorded during movie recording while “Full HD” or “HD” is selected for the movie quality setting.
- Touching “” while recording is in progress will cause the remaining recording time and “R” to appear. Touch “” again to switch back to the elapsed recording time.
- Zoom is supported during movie recording when “Full HD” or “HD” is selected for the movie quality setting (page 46).
- When “Macro” is selected as the movie focus mode (page 70), you can half-press the shutter button before starting recording to focus.

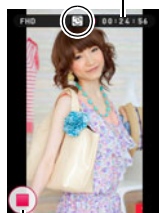Recording time/
Remaining recording time



“” (Movie)/
“” (Movie Stop)

7. Touch “” (Movie Stop) to stop recording.

- Each movie can be up to 4GB or 29 minutes long. Movie recording stops automatically after 29 minutes of recording. Movie recording also will stop automatically if memory becomes full before you stop movie recording.

Minimizing the Effects of Camera Movement during Movie Recording


You can configure the camera to minimize the effects of camera movement during Full HD and HD movie recording. Note, however, that this does not prevent image blur due to subject movement.

High Speed Movie Recording Precautions



- When shooting a high speed movie, shoot in a well-lit environment.
- When recording a high speed movie, light source flicker can cause horizontal bands to appear in the image. This does not indicate malfunction of the camera.

IMPORTANT!

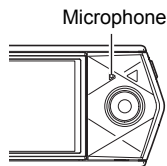- Spending a long time using movie recording will cause the camera to become slightly warm to the touch. This is normal and does not indicate malfunction. The camera may automatically adjust its monitor screen brightness in order to reduce heat generation.
- The camera also records audio along with Full HD and HD movies. Note the following points when shooting a movie.
 - Take care that the microphone is not blocked by your fingers, etc.
 - Good audio recording results are not possible when the camera is too far away from what you are trying to record.
- Shooting movies for long periods in areas where temperature is relatively high can cause digital noise (dots of light) to appear in the movie image. A rise in the camera's internal temperature also may force movie recording to stop automatically. If this happens, stop recording and allow the camera to cool down, which should cause normal operation to resume.
- Use of the camera's built-in memory or certain types of memory cards can slow down processing speeds. In particular, high-quality movies may not be able to be stored correctly. A slow memory card can take too much time to record data and result in breaks in the image and/or audio during playback. When this happens the movie icon will turn yellow on the monitor screen.



NOTE

- Except for High Speed Movie, zoom operations are supported during movie recording (page 46). Zoom is disabled during high speed movie recording. If you want to use zoom, perform the zoom operation before you touch “” (Movie) to start recording.
- SR Zoom (page 46) is disabled during movie recording.
- The effects of camera movement in an image become more pronounced when you shoot close up or with a large zoom factor. Because of this, stabilizing the camera by placing it on a level surface, etc. is recommended.
- During High Speed Movie recording, focus is fixed at the position where it was when recording started. To focus an image, half-press the shutter button for Auto Focus before you touch “” (Movie) to start recording.

Shooting a Movie of Short Clips (Instant Movie)

Movie recording can be paused and resumed as required to create a short movie quickly and easily.

Configuring Recording Settings

1. Enter the REC mode.
2. Touch “○○○○○” (Show Icons) and then touch “MENU”.
3. Drag the screen upwards and downwards until you find “Instant Movie”, and then touch to select it.
4. Touch the screen and configure the “Movie Quality” and “Length” settings.

Movie Quality	Select one of the following quality settings: Full HD (1920×1080), HD (1280×720), STD (640×480).
Length	Select one of the following shooting time settings: 15 sec, 10 sec, 6 sec.
5. To close the menu screen, touch “MENU”.

Shooting the Movie

1. In the REC mode, touch “○○○○○” (Show Icons).
2. Touch the Recording mode icon.
3. Touch “IM” (Instant Movie).
4. Touch-and-hold “REC” (Recording).

Movie recording is performed as long as “REC” (Recording) is held, or until the shooting time you selected under “Configuring Recording Settings” elapses.

- Releasing “REC” (Recording) pauses movie recording. Touching and holding “REC” (Recording) again resumes movie recording.


Before recording



Recording



Recording paused

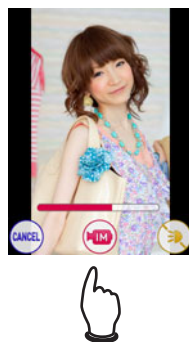

■ To end an ongoing recording operation

1. Remove your finger from “REC” (Movie) to pause recording.
2. Touch “CANCEL”.
3. Follow the instructions that appear on the screen.

NOTE

- The functions below cannot be used with Instant Movie.
Touch Shutter, Self-timer
- While recording is paused, you can turn the LED light on or off, and perform zoom operations.
- If about five minutes elapse after you pause movie recording, the part of the movie recorded up to the pause will be saved and the camera will turn off automatically.

Using BEST SHOT

BEST SHOT provides you with a collection of sample “scenes” that show a variety of different types of shooting conditions. When you need to change the setup of the camera, simply find the scene that matches what you are trying to achieve, and the camera sets up for it automatically. This helps to minimize the chance of ruined images due to poor exposure and shutter speed settings.

■ To shoot an image with BEST SHOT

1. In the REC mode, touch “○○○○○” (Show Icons).


2. Touch the recording mode icon.

3. Touch “BS” (BEST SHOT).

This will display a menu of BEST SHOT scenes.

4. Touch the scene you want to select.

- Touching “i” on the monitor screen and then touching a BEST SHOT scene will display detailed information about the scene.

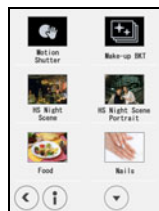

5. Press the shutter button (if you are shooting a snapshot) or touch “Ⓜ” (Movie) (if you are shooting a movie).

- With some BEST SHOT scenes, the message “Busy... Please wait...” will appear on the monitor screen after you press the shutter button. The camera is in the process of recording an image until the message appears. Keep the camera still. The image processing operation takes some time to complete after the message appears. You will not be able to record another image while the message is displayed.

■ BEST SHOT Precautions

- BEST SHOT scene images were not shot using this camera.
- Images shot using a BEST SHOT scene may not produce the results you expected due to shooting conditions and other factors.
- You can modify the camera settings that are configured after you select a BEST SHOT scene. Note, however, that the BEST SHOT settings revert to their defaults when you select another BEST SHOT scene or turn off the camera.
- Movie recording can be performed while one of the BEST SHOT scenes below is selected. Note that if “HS240” is selected for the movie quality setting, movies will be recorded using the auto recording “Auto” setting.
HS Night Scene, HS Night Scene Portrait, Food, Nails

Using Motion Shutter to Trigger a Self-timer Operation (Motion Shutter)

With Motion Shutter the camera automatically triggers a self-timer countdown whenever it detects subject movement within an icon you specify on the monitor screen. This means you can control operation of the self-timer from a distance by waving your hand, so you can include yourself in the image being shot.




1. Select “” (Motion Shutter) scene (page 55).

2. Drag the start self-timer icon “” and preview icon “” to the location in the image where you want movement to be detected.

- Keep the two icons separate from each other. Whenever you move an icon to a location where it overlaps the other icon, the other icon will move out of the way automatically.


3. When everything is ready, press the shutter button all the way down.

- About three seconds after you press the shutter button, the camera will go into standby. This will cause the self-timer icon “” to change from flashing to lit (without flashing).

4. Facing the camera, move your hand or perform some other movement in the area of the start self-timer icon you positioned in step 3.

When the camera detects subject movement within the icon, it will automatically start a self-timer countdown. The camera will shoot an image when the countdown reaches zero, and then go back into Motion Shutter standby to wait for the next trigger movement.

NOTE

- The trigger time of the Motion Shutter self-timer is fixed at two seconds.
- The preview icon “” will appear on the monitor screen when a snapshot is shot. When the camera detects movement within the preview icon, it will display the image that was shot for three seconds.
- Motion Shutter exits standby automatically after it shoots six images.
- To cancel Motion Shutter standby at any time, press the shutter button or touch the monitor screen.
- The Motion Shutter may not operate properly when there is little difference between the subject and the background of the icon, or when the subject is located far away from the camera.

Shooting Three Versions of an Image with Different Skin Tone Settings (Make-up BKT)

Make-up Bracketing (Make-up BKT) lets you shoot three versions of the same image with the press of the shutter button, each with a different Skin Tone setting. This helps you get the skin tone effect you want, even if you do not know exactly what settings to use.

1. Select “Make-up BKT” scene (page 55).

2. Touch “” (Make-up).

3. Touch the “Skin Tone”, “Smooth Skin” values and change the levels as desired.

Skin Tone	“Tan +6” to “0 (Off)” to “Light +6”
Smooth Skin	“0 (Off)” to “+12 (Max.)”

4. Touch “OK”.

5. Press the shutter button to shoot.

This will shoot and store three versions of the same image with various “Skin Tone” settings, based on the setting you selected in step 3, above.

NOTE

- After shooting an image with “Make-up BKT”, you will not be able to shoot another image until save of the previous image is complete.
- Only two versions of the image will be shot and stored if you shoot with Make-up BKT while “+6” is selected for “Skin Tone”.
- “Type 1” cannot be selected for the “Review” setting while shooting with this function. If “Type 1” is selected in another mode, selecting the “Triple Shot” scene will cause the “Review” setting to change to “Type 2”.
- Self-timer cannot be used with this function.

Shooting with High Speed Night Scene (HS Night Scene)

With High Speed Night Scene, the camera automatically detects shooting conditions. When you press the shutter button, the camera will record a burst of images and merge them in a way that minimizes image blur due to low light conditions.

1. Select “HS Night Scene” scene (page 55).

2. When you are ready to shoot, press the shutter button.

NOTE

- With this BEST SHOT scene, the LED light setting automatically becomes off.
- When holding the camera by hand while shooting with this BEST SHOT scene, make sure that the subjects remain as still as possible as the camera shoots the series of images.
- Movement of the camera while it is placed on a surface may cause erroneous judgment that it is hand held.
- If surroundings are extremely dark when shooting with “HS Night Scene”, the camera may not be able to shoot at proper brightness due to insufficient exposure.
- When shooting with this BEST SHOT scene, the ISO sensitivity setting is fixed at “Auto”.

Shooting with High Speed Night Scene and Portraits (HS Night Scene Portrait)

1. Select “HS Night Scene Portrait” scene (page 55).
2. When you are ready to shoot, press the shutter button.

NOTE

- With this BEST SHOT scene, the LED light setting automatically becomes “Auto”.
- When holding the camera by hand while shooting with this BEST SHOT scene, make sure that the subjects remain as still as possible as the camera shoots the series of images.
- Movement of the camera while it is placed on a surface may cause erroneous judgment that it is hand held.
- If surroundings are extremely dark when shooting with this BEST SHOT scene, the camera may not be able to shoot at proper brightness due to insufficient exposure.
- When shooting with this BEST SHOT scene, the ISO sensitivity setting is fixed at “Auto”.

Shooting Beautiful Food Images (Food)

1. Select “Food” scene (page 55).
2. When you are ready to shoot, press the shutter button.

Shooting Beautiful Nail Art Images (Nails)

1. Select “Nails” scene (page 55).
2. When you are ready to shoot, press the shutter button.

Digitally Correcting for Overexposure and Underexposure (HDR)

With HDR (High Dynamic Range), the camera shoots a series of CS images using different exposure settings and combines them into a final image to correct for overexposure or underexposure of subjects of different brightness levels.

- 1. Select “HDR” scene (page 55).**
 - 2. Press the shutter button to shoot.**
-

NOTE

- This function works best when the camera is made stationary by placing it on a level surface, etc.
- With this BEST SHOT scene, the LED light setting automatically becomes off.
- The desired HDR effect may not be attained if the camera or subject moves during shooting.

Shooting with Triple Shot

Triple Shot shoots a burst of three images and stores them in memory. This feature is great for making sure you don't miss those special moments when kids are around.

1. Select "Triple Shot" scene (page 55).

2. Point the camera at the subject and then half-press the shutter button.

The camera will start pre-recording images at this time.

- If you release the half-pressed shutter button before pressing it the rest of the way down, all of the images currently in the pre-record buffer will be deleted.
-

3. Press the shutter button all the way down to record.

This will record three images: one of the action before the shutter button is fully pressed plus two real-time images.

- Pressing the shutter button all the way without first half-pressing it will result in only two images being recorded.

NOTE

- The following functions cannot be used with this function.
Touch Shutter, Self-timer, LED Light
- "Type 1" cannot be selected for the "Review" setting while shooting with this function. If "Type 1" is selected in another mode, selecting the "Triple Shot" scene will cause the "Review" setting to change to "Type 2".

Advanced Recording Settings

The following are menu operations you can use to configure various camera settings.

Using the REC Menu

■ Example Menu Screen Operation


1. In the REC mode, touch “○○○○○” (Show Icons).

2. Touch “MENU”.

This will display the menu screen.

- Menu contents are different in the REC mode and PLAY mode.

3. Drag upwards and downwards until you find the item whose setting you want to change.

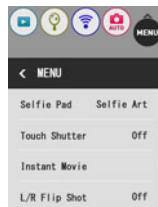

4. Touch the item.

5. Configure the setting of the item in accordance with the screen contents.

- To cancel and exit the menu, touch “MENU” or press the shutter button.

NOTE

- Depending on the recording mode, some of the items on the menu that appears may not be usable. While Premium Auto Pro is in use, only the menu items whose settings can be configured will be displayed on the menus.

■ Menu Operations in This Manual

Menu operations are represented in this manual as shown below. Touch the indicated icons and items, and perform operations as they are indicated, from left to right.

Procedure

Enter the REC Mode → MENU → Touch Shutter


Using the Selfie Pad (Selfie Pad)

Procedure

Enter the REC Mode → MENU → Selfie Pad

You can assign the REC Mode operations below to the selfie pad.

Selfie Pad

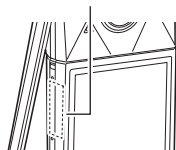

Selfie Art	With make-up functions (pages 41, 49), you can make adjustments to skin color and skin smoothness for stunning portrait images. The following image types are also available: Elegant, Foggy, Fairy, Nostalgic, Vivid, Square. You can use the steps below to select the type of image you want to shoot. ① Slide the selfie pad to select the image type. ② Double-tap to apply.
Shutter	Sliding the selfie pad starts a countdown, after which a snapshot is recorded. However, selfie pad shooting is not supported while shooting with any one of the settings below. Motion Shutter, Posing Shot, Triple Shot (BEST SHOT)
Zoom	Sliding the selfie pad performs a zoom operation.
Off	Selfie pad operation disabled.

NOTE

- To execute or cancel the assigned operation, double-tap the selfie pad. For information about selfie pad operation, see page 19.
- Movie recording is not possible while Selfie Art is assigned to the selfie pad.

■ Square Image Sizes

You can shoot a square snapshot with an aspect ratio of 1:1 by selecting "Square" for Selfie Art. See page 66 for details.



Using Touch Shutter (Touch Shutter)

Procedure

Enter the REC Mode → MENU → Touch Shutter

You can use the procedure below to shoot a snapshot.

1. Touch “On”.

2. Point the camera at the subject.

3. When you want to shoot, touch the monitor screen.

The camera automatically comes into focus and then shoots.

- You can still use the shutter button to shoot even when “On” is selected for Touch Shutter.

NOTE

- When “Auto” is selected as the recording mode, the camera will automatically focus on the point you touch.
- When “Premium Auto Pro” is selected as the recording mode, the camera will automatically determine the optimum focus point(s) and focus automatically.

Editing a Movie as You Shoot It (Instant Movie)

Procedure

Enter the REC Mode → MENU → Instant Movie

You can configure movie quality and recording time settings when shooting with Instant Movie. See page 53 for details.

Horizontally Flipping the Recording Image (L/R Flip Shot)

Procedure

Enter the REC Mode → MENU → L/R Flip Shot

Shooting a snapshot while “On” is selected for this function, an image of what is displayed on the monitor screen is saved in memory. This function can be used only when the monitor screen and lens are facing in the same direction.

NOTE



- L/R flipping is not performed during movie recording.
- Images already stored in camera memory cannot be L/R flipped.

Using the Self-timer (Self-timer)

Procedure

Enter the REC Mode → MENU → Self-timer

With the Self-timer, pressing the shutter button starts a timer. The shutter is released and the image is shot after a fixed amount of time.

Setting	REC Screen Icon Display	Description
10 sec		10-second Self-timer
2 sec		2-second Self-timer • When shooting under conditions that slow down the shutter speed, you can use this setting to prevent image blur due to camera movement.
Off	None	Self-timer is disabled.

- You can interrupt an ongoing Self-timer countdown by pressing the shutter button or touch the monitor screen.

NOTE

- The Self-timer cannot be used under the following conditions.
 - Posing Shot (page 44)
 - Triple Shot (page 61)
 - Motion Shutter (page 56)
 - Make-up BKT (page 57)
 - When the monitor screen and lens are facing in the same direction

Using the LED Light (LED)

Procedure

Enter the REC Mode → MENU → LED



See page 48 for details.

Changing the Image Size (Image Size)

Procedure

Enter the REC Mode → MENU → Image Size

This setting can be used to configure snapshot image size.

Image Size (Pixels)	REC Screen Icon Display	Suggested Print Size and Application	Description
12M (4000×3000)		Poster Print	Good detail for better clarity even for images cropped from the original on a computer, etc.
3M (2048×1536)		3.5"×5" Print	Best when preserving memory capacity is relatively more important than image quality.

- The initial factory default image size setting is 12M (12 million pixels).
- Selecting “3:2” records images with an aspect ratio of 3:2, which matches the standard aspect ratio of print paper.

■ Square Image Sizes

To shoot with a square image size (page 63), select the “Image Size” item and then select one of the images sizes below.

12M → 8M (2976×2976 pixels)


3M → 2M (1536×1536 pixels)

■ Pixels and image size

A digital camera image is a collection of small dots called “pixels”. The more pixels there are in an image, the more detail there will be. However, you generally can do with fewer pixels when printing an image (L size) through a print service, attaching an image to e-mail, when viewing the image on a computer, etc.

The size of an image indicates how many pixels it contains, and is expressed as horizontal pixels×vertical pixels.

- Note that larger images have more pixels, so they take up more memory space.
- For information about image size and number of images that can be stored, see page 149.
- For information about movie image size, see page 150.
- For information about resizing existing snapshots, see page 85.

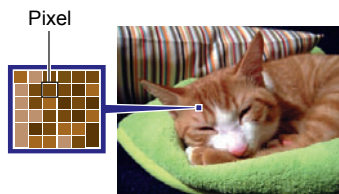

Movie Image Quality Settings (Movie Quality)

Procedure

Enter the REC Mode → MENU → Movie Quality

This setting can be used to configure movie image quality settings and to select either normal movie recording or High Speed Movie recording. For information about movie image quality settings, see page 50.

Correcting Image Brightness (Brightness)

Procedure

Enter the REC Mode → MENU → Brightness

You can manually adjust an image's exposure value (EV value) before shooting it.

- Exposure Compensation Range: -2.0 EV to +2.0 EV
- Unit: 1/3 EV


1. Touch a level you want to set.

- To cancel exposure compensation, change the EV value to 0.0.

Decreases the EV value. A lower EV value is best for dark-color subjects and for shooting outdoors on a clear day.



Increases the EV value. A higher EV value is best for light-colored subjects and backlit subjects.



2. Touch "OK".

This applies the exposure compensation value. The exposure compensation value you set remains in effect until you change it or turn off the camera (which causes it to revert to "0.0").

NOTE

- When shooting under very dark or very bright conditions, you may not be able to obtain satisfactory results even after performing exposure compensation.

Adjusting White Balance (White Balance)










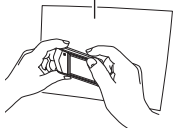
Procedure


Enter the REC Mode → MENU → White Balance

The white balance setting lets you make adjustments to match the light source being used so subject coloring is more natural. You can make adjustments to avoid the blue cast that can occur when shooting on a cloudy day, the green cast that can occur while shooting under white fluorescent lighting, etc.

1. Touch the type of white balance you want to select.

You can see the affect of the white balance setting you select on the monitor screen.

Setting	Description
 Auto WB	Configures the camera to adjust white balance automatically
 Daylight	For shooting outdoors on a clear day
 Overcast	For shooting outdoors on an overcast rainy day, in the shade, etc.
 Shade	For shooting on a clear day in the shade of trees or buildings
 Day White Fl.	For shooting under white or day white fluorescent lighting
 Daylight Fluor	For shooting under daylight fluorescent lighting
 Tungsten	For shooting under light bulb lighting
 Manual WB	<p>For configuring the camera manually to suit a particular light source.</p> <ol style="list-style-type: none">① Touch “ Manual WB”.② In the location where you plan to shoot, point the camera at a blank white piece of paper so it fills the entire monitor screen.③ Touch an area of the screen where no icon is located. <p>The white balance setting is retained even if you turn off the camera.</p> 

- When “ Auto WB” is selected for the white balance setting, the camera automatically determines the white point of the subject. Certain subject colors and light source conditions can cause problems when the camera tries to determine the white point, which makes proper white balance adjustment impossible. If this happens, select the white balance setting that matches your shooting conditions (Daylight, Overcast, etc.).

2. Touch “OK”.

Specifying ISO Sensitivity (ISO)

Procedure

Enter the REC Mode → MENU → ISO

ISO sensitivity is a measure of sensitivity to light.

Setting	Description		
Auto	Adjusts sensitivity automatically according to conditions		
ISO 80	Lower sensitivity	Slow shutter speed	Less noise
ISO 100	↑ ↓	↑ ↓	↑ ↓
ISO 200			
ISO 400			
ISO 800			
ISO 1600			
ISO 3200	Higher sensitivity	Fast shutter speed (Set for shooting in dimly lit areas.)	Some coarseness (increased digital noise)




- Since higher ISO sensitivity values tend to result in digital noise in images, the camera performs a noise filtering process. Because of this, it may take relatively longer for the camera to finish recording an image after it is shot. You will not be able to perform any operation while image recording is in progress.

Selecting a Focus Mode (Focus)

Procedure

Enter the REC Mode → MENU → Focus

Changing to a different focus mode can help to achieve better focus.

Settings	REC Screen Icon Display	Type of Shot	Focus Mode		Approximate Focus Range*1	
			Snapshot	Movies	Snapshot	Movies
AF (Auto Focus)	None	General recording	Automatic	Fixed focal point	8 cm to ∞ (infinity) (3.1" to ∞)	52 cm to ∞ (infinity) (20.5" to ∞)
Macro		Close ups			8 cm to 50 cm (3.1" to 19.7")	8 cm to 50 cm (3.1" to 19.7")*2
PF (Pan Focus)		Shooting with a relatively wide focus range	Fixed focal point		1 m to ∞ (infinity) (3.3' to ∞)	52 cm to ∞ (infinity) (20.5" to ∞)
Infinity		Scenery and other distant subjects	Fixed		Infinity (Wide Angle)	

*1 The focus range is the distance from the lens surface.


*2 Focus remains fixed at the position where it was when recording started. To focus an image, half-press the shutter button to focus before fully pressing the shutter button to start recording.

■ Using Focus Lock

“Focus lock” is a technique you can use when you want to compose an image in which the subject you want to focus on is not within the focus frame in the center of the screen.

1. Align the monitor screen’s focus frame with the subject you want to focus on and then half-press the shutter button.

Subject to be focused on

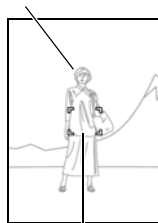

Focus frame

2. Keeping the shutter button half-pressed (which maintains the focus setting), move the camera to compose the image.

3. When you are ready to shoot the image, press the shutter button the rest of the way down.



NOTE

- Focus lock also locks exposure (AE).
- The focus frame does not appear on the display when the Touch Shutter is enabled (On).

Turning on Image Review (Review)

Procedure

Enter the REC Mode → MENU → Review

While Review is turned on, the camera will display an image immediately after it is recorded.

Type 1	Displays a full-screen view of the image for about one second.
Type 2	Displays a Review image in the upper left corner (in the case of a portrait orientation image) or the lower left corner (in the case of a landscape orientation image) of the monitor screen. Touching the Review image will enter the PLAY mode and display a full-screen view of the image.
Off	Turns off review image display

- When “Type 1” is selected, the aperture, shutter speed, and ISO sensitivity, will be red if the Auto Exposure is not correct.

Viewing Snapshots and Movies

Viewing Snapshots


See page 35 for the procedure for viewing snapshots.

Viewing a Movie

1. Touch “▶” (PLAY) to enter the PLAY mode.

2. Drag left or right across the screen image to scroll through the movies until the one you want is displayed.

- Touching “↺”, “↻” toggles between repeat playback and one-time movie playback.

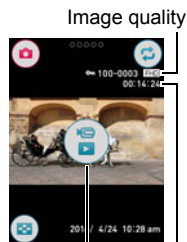


Movie icon: [play button icon]



Movie recording time

3. Touch “⏸” (Movie) to start playback.

Playback in progress

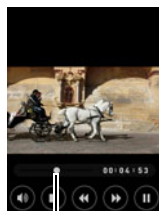

Touch “⏸”.



Touch “▶”.

Playback paused



Progress bar

Movie Playback Controls



Pause/Play	Touch “ ” (pause) or “▶” (play).
Fast forward/ Fast reverse	During playback, touch “◀◀” (fast reverse) or “▶▶” (fast forward). <ul style="list-style-type: none">• Each touch of either button increases the speed of the fast forward or fast reverse operation.• To return to normal playback speed, touch “▶”.
Stop playback	During playback, touch “■”.
Volume adjustment	During playback, touch “🔊” and then drag the volume bar to the desired level. <ul style="list-style-type: none">• Volume can be adjusted only while movie playback is in progress.
1 frame forward/ back	While playback is paused, touch “▶ ” or “◀ ”. <ul style="list-style-type: none">• Touching and holding this icon advances frames continuously.
Information display on/off	Touch the screen.
Movie editing	Pause movie play at the location where you want to cut, and then touch “✂” (page 74).

- Playback may not be possible for movies not recorded with this camera.

Editing a Movie on the Camera (Movie Editing)

The Movie Editing feature lets you cut out a specific part of a movie.

1. Enter the **PLAY** mode and then start playback of the movie you want to edit.
2. When playback reaches the location where you want to cut, touch “||” to pause.
3. Touch “✂”.
4. Touch the option that specifies what you want to cut.

 Previous Cut	Cuts everything from the beginning of the movie up to the current location.
 Next Cut	Cuts everything from the current location to the end of the movie.

5. Touch “Cut”.

The selected cut operation will take considerable time to complete. Don't try to perform any camera operation until the “Busy... Please wait...” message disappears from the monitor screen. Note that a cut operation can take a long time if the movie being edited is long.

IMPORTANT!

- When you edit a movie, only the result is saved. The original movie is not retained. An editing operation cannot be undone.

NOTE

- A movie that is shorter than five seconds cannot be edited.
- Editing of movies recorded with a different type of camera is not supported.
- You will not be able to edit a movie if the amount of remaining memory capacity is less than the size of the movie file you want to edit. If there is not enough memory available, delete files you no longer need to free up more.
- Splitting of a movie into two movies and splicing of two different movies into a single movie are not supported.

Viewing the Image Menu

The image menu shows multiple images on a single screen.

1. In the PLAY mode, touch “” or squeeze your fingers on the screen.

This displays the image menu.

- Drag upwards or downwards to scroll to the next page of images.
- To view the normal (single image) display mode, touch the image you want to view.
- In the case of a movie, the first image in the movie is displayed.
- A question mark (?) will be displayed for images that cannot be displayed for some reason.
- You can also perform the operations below using the image menu. Touch the icon of the function you want to use, touch an image, and then touch “OK”.
 - Send an image to a smartphone
 - Delete an image
 - Protect an image



Zooming an On-screen Image

Snapshots can be zoomed on the monitor screen up to 8X.

- The actual available zoom factors depend on the size of the original image.

1. In the PLAY mode, drag left or right to display the image you want to view.


2. To enlarge the image, spread your thumb and forefinger (page 18) on the display or touch twice in the area you want to enlarge.

- Dragging an enlarged screen image will change the part of the image that is displayed.
- Squeezing your thumb and forefinger (page 18) on the displayed image will reduce it in size.
- To return an enlarged image to its actual size, tap it twice.

Creating a Promotion Movie (Promotion Movie)

With this function, you can select five snapshots and combine them into a 6-second, 10-second or 15-second movie that includes effects and music.

1. In the **PLAY** mode, touch “○○○○○” (Show Icons).

2. Touch “” (Promotion Movie).

3. Drag upwards or downwards to display the snapshot you want to use in your Promotion Movie.

4. Touch the snapshot you want to use as the first image.

5. Repeat steps 3 and 4 to select a total of five snapshots.
 - The snapshots will appear in the Promotion Movie in the same sequence that you select them.
 - Touch a selected snapshot will de-select it.

6. Touch “OK”.

7. Touch “Length”, “Transition”, and “Music”, and configure settings for each item as required.

Length	Select 15 seconds, 10-second or 6 seconds.
Transition	Enable or disable the transition effect. Selecting “On” (enabled) applies a transition effect when changing from one image to the next.
Music	Select the background music you want to use. Selecting “Off” creates a movie without music.

8. Touch “Create”.

This creates a Promotion Movie in accordance with the settings you configured.

NOTE

- Movies cannot be converted to a promotion movie.
- You may experience conversion problems if you try to include snapshots recorded with a camera other than this one.
- Promotion movies are HD movie quality, with an aspect ratio of 16:9. This means that the upper and lower parts of a snapshot will be trimmed off when it is converted to a promotion movie.
- Selecting a portrait orientation snapshot with the “Transition” setting enabled (On) will trim the top and bottom of the image, with the bottom portion somewhat larger than the top. When “Transition” is disabled (Off), black bands will appear on the sides of the image.
- This function cannot be used for fewer than five images.

Other Playback Functions (PLAY)

The following are menu operations you can use to configure various camera settings.

Using the PLAY Menu

■ Example Menu Screen Operation

1. In the PLAY mode, touch “○○○○○” (Show Icons).

2. Touch “MENU”.


This will display the menu screen.

- Menu contents are different in the REC mode and PLAY mode.

3. Touch the item whose setting you want to change.

4. Configure the setting of the item in accordance with the screen contents.

- To cancel and exit the menu, touch “MENU” or press the shutter button.

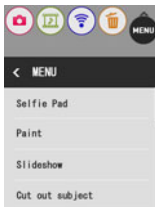

■ Menu Operations in This Manual

Menu operations are represented in this manual as shown below. Touch the indicated icons and items, and perform operations as they are indicated, from left to right.

Procedure

Enter the PLAY Mode → MENU → Protect

Using the Selfie Pad (Selfie Pad)


Procedure

Enter the PLAY Mode → MENU → Selfie Pad

You can assign the PLAY Mode operations below to the selfie pad.

Scroll	When viewing images, sliding the selfie pad scrolls forward or back.
Zoom	When viewing images, sliding the selfie pad zooms in or out on the displayed image.
Off	Selfie Pad operation disabled.

Selfie Pad

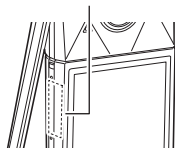

NOTE



- To execute or cancel the assigned operation, double-tap the selfie pad.
For information about selfie pad operation, see page 19.

Performing Paint Operations on an Image (Paint)

Procedure






Enter the **PLAY Mode** → **Display snapshot** → **MENU** → **Paint**

You can use this function to draw on, write on, or stamp information into a recorded snapshot. If the original image size is 3M or larger, the post-paint image is saved as a 3M size image.



1. On the monitor screen, touch “” or “”.
2. Touch the pen type or the stamp you want to use.
3. Use the pen to write text or draw figures, or use the stamp to stamp information.
 - The stamp will be located at the final position your finger is in when you remove it from the screen. Before removing your finger, you can drag the stamp to the location you want.
4. Touch “OK”.
5. Touch “Yes”.

This will save the image as a new image.

Paint Functions

	Saves the image.
	Exits paint without saving an image.
	For selecting the pen color and thickness for drawing or writing. Also can be used to select the eraser and its thickness.
	For selecting the stamp type.
	Goes back to the previous screen.

NOTE

- After selecting “”, you can change either the color (or eraser) or thickness setting only. To change the other setting, select “” again.

Playing a Slideshow on the Camera (Slideshow)

Procedure

Enter the **PLAY Mode** → **MENU** → **Slideshow**

You can use the slideshow mode to automatically scroll through all of the images in camera memory.

NOTE


- All operations are disabled while the slideshow is transitioning from one image to another.
- The time required for transition from one image to another may be longer in the case of an image that was not recorded with this camera.
- To return to normal (single image) display, touch the screen.

Extracting an Image from a Snapshot (Cut out subject)


Procedure

Enter the **PLAY Mode** → **Display snapshot** → **MENU** → **Cut out subject**


You can draw an outline around a subject (person or object) and extract it from the snapshot. You can then insert the extracted subject into another snapshot.

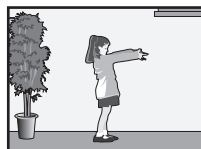

Extracted Subject

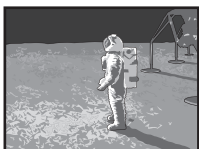

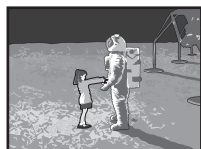


Another Snapshot



Final Combined Image

1. Touch the drawing tool you want and then draw a boundary around the subject that you want to extract.


Drawing Tool	Line Type	Description
	Thin	Draws a line for cutting out a subject.
	Thick	
	—	Erases a drawn line.

- The boundary line should be continuous, which means it starts and ends at the same point.


2. Touch “OK”.

This will cause the background of the subject you outlined to become gray.

3. Touch “ This will display the cut out subject.

- To scroll back one screen, touch the “

Extracted subject screen

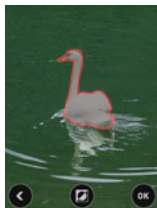

Original image with subject extracted

4. After confirming that the part of the image to be extracted is the way you want, touch “OK”.

This saves the extracted image.

NOTE

- You cannot extract from an extracted subject. Attempting to do so will cause an error.
- This function cannot be used with a square image (page 66).

Inserting a Subject into another Snapshot or Adding a Built-in Frame to a Snapshot (Paste subject)

Procedure


Enter the PLAY Mode → MENU → Paste subject

You can add the camera's built-in characters or frames to snapshots, or you can insert characters you create with "Cut out subject" (page 81) into snapshots.

- Only an image that satisfies the following conditions can be used as a background image.
 - It must be a snapshot recorded with this camera or a snapshot transferred to this camera's memory.
 - It must be an image with an aspect ratio of 4:3.

1. Drag left or right to scroll through images. Select image you want to use as the background and then touch "OK".
2. Drag left or right to scroll though subjects. Select the subject you want to insert and then touch "OK".
3. Touch "-" (zoom out), "+" (zoom in) to adjust the size of the subject. You also can drag the subject around the screen to reposition it.
4. After the subject's size and position are the way you want, touch "OK".

This inserts the subject into the background image.

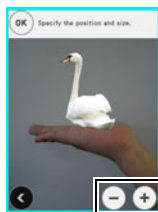

NOTE

- Performing a delete or format operation will not delete the built-in subjects.
- This function cannot be used with a square image (page 66).

Protecting a File Against Deletion (Protect)

Procedure

Enter the **PLAY Mode** → **MENU** → **Protect**

You can protect images to prevent them from being deleted.

- A protected image will be indicated by “**On**”.



All Files On	Protects all files.
All Files Off	Unprotects all files.
Select	<p>Protects and unprotects specific files.</p> <ol style="list-style-type: none">① Drag upwards or downwards to display the image you want to protect.② Touch an image to be protected, and “On” will appear on the image. You can repeat steps ① and ② as many times as necessary to select multiple images.③ Touch “OK” or “On”. <p>To unprotect an image, touch it in step ② of the above procedure to remove “On”.</p>



IMPORTANT!

- Note that even if a file is protected, it will be deleted if you perform the format operation (page 117).

NOTE

- You can also protect images using the image menu (page 75).

Rotating an Image (Rotation)

Procedure

Enter the **PLAY Mode** → **MENU** → **Rotation**

1. Drag left or right to display the image you want to rotate.

2. Touch “”.

This will rotate the image 90 degrees to the left.

3. When the image is in the orientation you want, touch “”.

NOTE

- Note that this procedure does not actually change the image data. It simply alters how the image is displayed on the camera's monitor screen.
- An image that has been protected or zoomed cannot be rotated.

Resizing a Snapshot (Resize)

Procedure

Enter the **PLAY Mode** → **MENU** → **Resize**

You can reduce the size of a snapshot and save the result as a separate snapshot. The original snapshot is also retained. You can select resize an image to one of two image sizes: 3M, VGA.

1. Drag left or right to display the image you want to resize.

2. Touch a size.

This resizes the image to the selected size and saves the result as a new photograph.

NOTE

- The recording date of the resized version of the snapshot will be the same as the recording date of the original snapshot.
- This function cannot be used with a square image (page 66).

Cropping a Snapshot (Trimming)

Procedure

Enter the PLAY Mode → MENU → Trimming

You can crop a snapshot to trim parts you do not need, and save the result in a separate file. The original snapshot is also retained.

1. Drag left or right to display the image you want to crop.

2. Touch “OK”.

3. Select the aspect ratio of the saved image and then tap “OK”.

For a 4:3 aspect ratio image, you can select either of two trimmed image aspect ratio: 4:3 or 1:1 (square).

- The aspect ratio selection screen will not appear if the aspect ratio of the original image is 1:1 (square). Trimming such an image always results in a square image. In this case, skip step 3 of this procedure and go directly to step 4.
-

4. Drag the image until the part you want to keep is displayed.

- To enlarge the image, touch the screen with your thumb and forefinger and then spread them apart. To reduce the size of the image, touch the screen with your thumb and forefinger and then squeeze them together.
-

5. Touch “OK”.

This will crop the image, leaving only the displayed part.

NOTE

- The recording date of the cropped image will be the same as the recording date of the original snapshot.



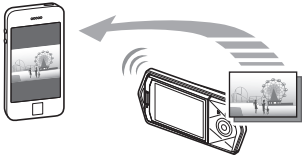
Connecting the Camera with a Smartphone (Wireless Connection)


Controlling Your Camera with a Smartphone

Your camera has both Bluetooth wireless technology and wireless LAN capabilities built in. After establishing a wireless connection with a smartphone, you can perform the operations described in the table below. Requires installation of the EXILIM Connect app on your smartphone.

- Your camera is a Bluetooth® Smart device.
- Your camera can connect using Bluetooth wireless technology with a smartphone that supports Bluetooth Smart.

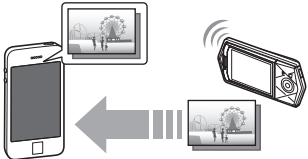

With this function:	You can do this:
<p>Auto Send</p>  A diagram showing a smartphone on the left and a camera on the right. A thick grey arrow points from the camera to the smartphone. Above the camera, there is a smaller image of the camera's display showing a landscape scene. A curved arrow with radiating lines points from the camera towards the smartphone, indicating a wireless signal.	<p>Images can be automatically sent as they are shot to a smartphone that has been Bluetooth paired with the camera (page 98).</p>
<p>Shoot with phone</p>  A diagram showing a hand holding a smartphone on the left. A speech bubble-like shape connects the phone to a camera on the right. In the background, there is an illustration of three people sitting at a table, looking at a laptop screen. The camera is shown in a perspective view, as if being held by someone.	<p>Remotely control and shoot with the camera using a smartphone (page 94).</p>
<p>Send to phone</p>  A diagram showing a smartphone on the left and a camera on the right. A thick grey arrow points from the camera to the smartphone. Above the camera, there is a smaller image of the camera's display showing a landscape scene. A curved arrow with radiating lines points from the camera towards the smartphone, indicating a wireless signal.	<p>Send snapshots and movies recorded with your camera to your smartphone. After sending an image to a smartphone, you can then upload it from the smartphone to a social networking service (page 95).</p>

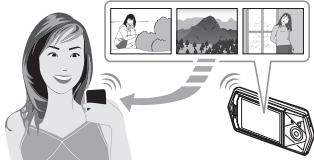With this function:	You can do this:
<p data-bbox="94 110 260 135">View on phone</p> 	<p data-bbox="456 135 936 292">View snapshots stored in camera memory on a smartphone, and copy snapshots and movies to a smartphone for viewing. You can also view snapshots and movies in camera memory on a computer, and copy them to a computer (page 96).</p>

IMPORTANT!

- Inside an aircraft or anywhere else where use of wireless communication is restricted or prohibited, put the camera into the airplane mode.
- Some smartphone models may not be able to play back movie files from your camera.
- Depending on your smartphone model, its operating system version, and/or its remaining storage capacity can cause failure of a movie or snapshot save operation. Receiving a camera file, perform the required operation on your smartphone to check if the file was stored properly.
- A movie received on an Android terminal:
 - Movies are not displayed by Gallery app. Movies are stored in a folder named “EXILIM Connect”.
 - A separate movie player is required to playback movies (whose files have the file name extension MOV).
 - Depending on your movie player, you may not be able to playback movies and/or audio.
- Images recorded on another manufacturer’s camera cannot be sent using this function.

NOTE

- Note that using wireless functions requires more battery power usage than normal. Make sure that the camera battery is sufficiently charged before starting a wireless LAN operation.
- The operating range depends on the local communication environment and on the type of smartphone you are connected to.

■ About EXILIM Connect

For detailed information about EXILIM Connect, refer to the EXILIM Connect User's Guide (which you can download at the website below).

<http://www.exilim.com/manual/>

- Note that to view the EXILIM Connect User's Guide, you will have to install Adobe Reader. Consult CASIO authorized service center if you are unable to open to display the PDF format User's Guide.
- Note that EXILIM Connect User's Guides may not be available in all languages. If you cannot find a EXILIM Connect User's Guide in your native language, please use a version in another language.

Using a Wireless Mode

Your camera has a variety of different wireless modes. Select the wireless mode that suits your specific requirements.


1. Touch “○○○○○” (Show Icons).

2. Touch the “📶” (Wireless) icon.

This displays a wireless mode screen.

3. Touch the wireless mode you want.

“📶” (Wireless)

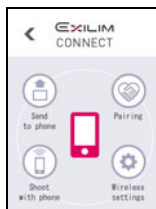

Send to phone

Select to view images you shoot with the camera on a smartphone (pages 95, 96).

Pairing

Select this mode to establish a Bluetooth wireless technology connection between the camera and a smartphone (page 92).

Shoot with phone







Select this mode for remote control of image recording from a smartphone (page 94).

Wireless settings

Select this mode to configure wireless settings (page 97).

■ Wireless Connection Icons

After you configure camera and smartphone connection settings, the icons below will appear on the camera screen to indicate the current communication status.

	Semi-transparent	Pairing is complete, but there is no Bluetooth wireless technology connection.
	Opaque	Pairing is complete, and there is a Bluetooth wireless technology connection.
	Semi-transparent	Wireless LAN is enabled, but there is no connection.
	Opaque	Wireless LAN connected.
	Opaque	Wireless LAN connected, and image data is being sent.
	Opaque	Camera is in the Airplane Mode.

Getting Ready to Establish a Connection between a Smartphone and Your Camera

Installing the EXILIM Connect Smartphone app on your smartphone makes it possible to remotely control the camera from your smartphone and to send images recorded with the camera to your smartphone. Search the EXILIM Connect app on Google Play or App Store and install it on your smartphone.

■ App operation guarantees

No guarantees are made concerning the ability to operate the EXILIM Connect app on any particular smartphone or tablet.

IMPORTANT!

- For information about operating system version supported by the app, check the information on Google Play or the App Store.
- App functions and the required operating environment are subject to change without notice.

Installing the EXILIM Connect App on Your Smartphone

■ Android terminal

1. Open “Google Play”.

2. In the search field, type “EXILIM Connect”.

3. Install EXILIM Connect.

■ iPhone (iOS)

1. Open “App Store”.

2. In the search field, type “EXILIM Connect”.

3. Install EXILIM Connect.

Establishing a Wireless Connection for the First Time

The first time you establish a wireless connection between the camera and a smartphone, you need to use the procedure below to configure wireless connection settings. This operation is required for the first connection only.

■ Smartphone that supports Bluetooth Smart

Connecting the camera to a smartphone using Bluetooth wireless technology (pairing) makes it simple to configure wireless connection settings.

IMPORTANT!

- Performing this operation automatically configures your smartphone's wireless LAN connection settings (page 93).
- Some smartphone models may not be compatible with this camera.
- If you want to re-pair the camera with the smartphone it is already paired with, first unpair them and then pair again. Re-pairing the camera and smartphone will result in all pending unsent images to remain unsent.

Camera Operation

1. Touch the “” (Wireless) icon.

This will display the wireless mode screen.

2. Touch “Pairing”.

3. Touch “Start”.

Smartphone Operation

4. Start up the EXILIM Connect app.

5. Tap “Pairing”.

6. Perform the required connection operation as instructed by the app and your smartphone.

This establishes a Bluetooth wireless technology connection between the camera and smartphone.

- For information about how to configure wireless connection settings, refer to the EXILIM Connect manual (page 89).

Camera Operation

7. Touch “Next”.

8. Touch “On” if you want to send all images recorded on the camera to the smartphone, or “Off” if you do not want to send images to the smartphone.

NOTE

- After the camera is paired, Bluetooth wireless technology operation will consume battery power even when the camera is turned off. Because of this, it is recommended that you charge the camera's battery before you plan to use it.
- Removing the camera's battery will terminate the Bluetooth wireless technology connection. However, the connection will be re-established when you load a battery into the camera and turn on the power again.

■ Smartphone that does not support Bluetooth Smart

Configure smartphone wireless LAN connection settings (input the camera SSID and password).

1. Touch the “” (Wireless) icon.

2. Touch “Shoot with phone”.

3. Touch “Start”.

This will enable connection with a smartphone and the camera will display a screen for input of an SSID and password.

4. For the smartphone Wi-Fi setting, input the camera SSID and Password.

When the message “Start up the phone app.” appears on the camera's monitor screen, it means that the smartphone has established a wireless connection with the camera.

- What you need to do to establish a wireless LAN connection depends on the type of smartphone you are using. For details about how to establish a wireless LAN connection see the user documentation that comes with your smartphone.

■ What to do if you are unable to establish a wireless LAN connection between the camera and a smartphone.

This problem may be caused when the smartphone is already wirelessly connected to one of the networks or devices below. Go to your smartphone's Wi-Fi settings and select this camera's SSID.

- Household wireless LAN
- Public wireless LAN
- Portable wireless LAN device




Using a Smartphone as a Camera Remote Controller (Shoot with phone)

This function lets you remotely shoot a snapshot or movie with the camera using a smartphone. You also can perform remote zoom, self-timer, and other operations as well.

■ Bluetooth Wireless Technology Connection

1. Perform one of the operations below.

- Turn off the camera.
- Display the wireless mode screen.
 - ① Touch “○○○○○” (Show Icons).
 - ② Touch the “” (Wireless) icon.

2. On the smartphone, start up the EXILIM Connect app.

3. On the smartphone, tap “Remote Capture”.

4. Compose the image on the smartphone’s screen as you shoot.

For information about how to use “Shoot with phone”, refer to the EXILIM Connect manual (page 89).

- For snapshots, Premium Auto Pro is automatically selected as the recording mode while shooting with Remote Capture.

■ Cannot Connect with Bluetooth Wireless Technology

1. Touch the “” (Wireless) icon.

2. Touch “Shoot with phone”.

3. Touch “Start”.

- If there is a wireless LAN connection between the smartphone and camera, advance to step 5 of this procedure.

4. For the smartphone’s Wi-Fi settings, select the SSID displayed on the camera and establish a wireless LAN connection between the camera and smartphone.

5. On the smartphone, start up the EXILIM Connect app.

6. Compose the image on the smartphone’s screen as you shoot.

For information about how to use “Shoot with phone”, refer to the EXILIM Connect manual (page 89).

- For snapshots, Premium Auto Pro is automatically selected as the recording mode while shooting with Remote Capture.

Sending a Snapshot or Movie File from Camera Memory to a Smartphone (Send Selected Image)

You can select one more snapshot and/or movie file in camera memory and send it to a smartphone. You can select up to 100 files, totaling no more than 500MB for a single send. After sending an image to a smartphone, you can then upload it to a social networking service.

1. Touch the “” (Wireless) icon.

2. Touch “Send to phone”.

3. Touch “Send Selected Image”.

4. Touch the image you want to send to the smartphone.

Selecting the image of a file causes its check box to become selected.

- To exit the Send Selected Image operation, touch “Cancel”.
-

5. After selecting the images of all of the files you want to send to the smartphone, touch “OK” or “.

For information about how to use “Send Selected Image”, refer to the EXILIM Connect manual (page 89).

Viewing Snapshots and Movies in Camera Memory on a Smartphone (View on phone)

You can connect the camera to a smartphone over wireless LAN to view and download snapshots and movies in camera memory on up to eight connected smartphones. You can also view snapshots and movies in camera memory on a computer, and copy them to a computer. A smartphone does not need to have the EXILIM Connect app installed in order to access camera images using this function.

1. Touch the “” (Wireless) icon.

2. Touch “Send to phone”.

3. Touch “View on phone”.

This establishes a connection between the smartphone and camera, and displays a URL.

- If the message “Connect your phone to the access point below.” remains on the camera’s monitor screen, change the smartphone’s Wi-Fi settings so your camera is selected for connection (page 93).
- After about 60 seconds, the camera’s monitor screen will go blank. Touching the monitor screen will cause its image to reappear.

4. On the smartphone, start up its browser app.

- Accessing the URL displayed by the camera will display an image stored in camera memory.
- To exit the wireless LAN function, touch “Exit” on the camera’s monitor screen.



IMPORTANT!

- Some smartphone models may not be able to play back movie files.

NOTE

- You can also view image in camera memory on a computer’s browser by establishing a wireless LAN connection with the computer.
- For information about how to start up EXILIM Connect and view images, refer to the EXILIM Connect manual (page 89). Note that the operation you need to perform depends on whether or not there is a Bluetooth wireless technology connection with the smartphone.

Configuring Wireless Connection Settings

This section explains wireless mode operations and setting items.

1. Touch the “” (Wireless) icon.

This will display the wireless mode screen.

- Pressing the shutter button will return to the screen that was displayed before the wireless mode screen.


2. Touch “Wireless settings”.

This will display the wireless setting screen.

3. Touch the item you want to configure.

4. Change the setting of the selected item.

5. When the settings are the way you want, touch “OK”.

- Touching “” cancels the currently displayed settings and returns to the wireless mode screen.

Entering the Camera’s Airplane Mode (Airplane Mode)

Procedure

“” (Wireless) → Wireless settings → Airplane Mode

Wireless connection with the camera is disabled while “On” is selected for the airplane mode setting. Enter the airplane mode to disable generation of radio waves from the camera while in a medical facility, on an aircraft, etc.

Sending Images from the Camera to a Smartphone as They are Recorded (Auto Send)

Procedure

“” (Wireless) → Wireless settings → Auto Send



While “On” is selected for this setting, images are automatically sent to the paired smartphone as they are shot. If there is no wireless connection between the camera and smartphone when the images are shot, they will be sent as soon as a connection is established.



IMPORTANT!

- Auto Send cannot be enabled unless the camera is paired with a smartphone (page 92).

NOTE






- Auto Send can be used only with a smartphone that supports Bluetooth Smart. Both a Bluetooth and wireless LAN connection are required between the camera and smartphone to auto send camera images.
- The icons below are displayed on the camera screen while the camera and smartphone are connected.
 - Wireless LAN connection: 
 - Bluetooth wireless technology connection: 
- You can specify the size of the image sent to the smartphone using “Resize before send” (page 99).
- You can use the smartphone apps below to view snapshots after sending them.
 - iPhone: Camera Roll
 - Android terminal: Gallery, Photo, or another photo browser app
- Auto Send is disabled while the camera’s Airplane Mode setting is “On” (page 97). Auto Send become re-enabled when the camera’s Airplane Mode setting is changed to “Off”.
- Images shot while the Auto Send setting is “On” will be sent to the smartphone, even if the Auto Send setting is changed to “Off” before they are sent.
- When “On” is selected for Auto Send, a message will appear whenever you try to delete a file or turn off the camera.
- If you try to turn off the camera while there are unsent images in memory, a message will appear to alert you. If you want the images to be sent, leave the camera on until the send operation is complete. Pressing [⏻] (Power) again will turn off the camera.
- Note that if the connection between the camera and smartphone is lost while there are unsent images in memory, the camera will turn off after about one minute. In this case, the camera will try to send the images again after it is turned back on.

Specifying Images to be Sent by Auto Send (Auto Send File Settings)

Procedure

“(📶)” (Wireless) → Wireless settings → Auto Send File Settings

Specifies the files to be sent to a smartphone by Auto Send.

 	Snapshots and movies are sent.
 	Snapshots and Instant Movies are sent.
 Only	Only snapshots are sent.

IMPORTANT!

- The maximum size movie file that can be sent by Auto Send is 100 MB.

Resizing Snapshots before Sending Them to a Smartphone (Resize before send)

Procedure

“(📶)” (Wireless) → Wireless settings → Resize before send

This feature can be used to resize snapshots before they are sent to a smartphone using “Shoot with phone” or “Send to phone”.

3M	Images are converted to 3M size before being sent. <ul style="list-style-type: none">• If an original image is 3M size or smaller, it is sent without resizing.
Off	Images are sent in the size they were originally recorded.

Changing the Camera Password for Wireless LAN Connection (WLAN password)

Procedure

“(📶)” (Wireless) → Wireless settings → WLAN password

Use procedure to change the password you used when establishing a wireless LAN connection between the camera and a smartphone.

IMPORTANT!

- Before changing the wireless LAN password, unpair the camera from its paired smartphone (page 100).

1. Touch the password digit you want to change.

2. Touch “(⬇)” or “(⬆)” to change the currently selected digit.

3. When the password is the way you want, touch “OK”.

NOTE

- Changing the wireless LAN password will terminate the connection with the smartphone. To reconnect with the smartphone, configure wireless connection settings (page 92). If your smartphone does not support Bluetooth Smart, perform the operations below to change your smartphone’s Wi-Fi settings.
 - iPhone:
Tap the right arrow of the field where the SSID of the camera is displayed in the Wi-Fi settings to delete network settings. After deleting, select the camera SSID again and input the new password.
 - Android terminal:
Tap the field where the SSID of the camera is displayed in the Wi-Fi settings and select Forget. Select the camera SSID again and input the new password.

Unpairing the Camera from a Smartphone (Unpairing)

Procedure

“(📶)” (Wireless) → Wireless settings → Unpairing

Unpairs the camera from a smartphone.

To use the camera with a different smartphone, first unpair it from the current smartphone.

NOTE

- When unpairing, be sure also to perform the unpairing operation on the smartphone as well. For details, refer to the EXILIM Connect User’s Guide (page 89).
- Unpairing the camera from a smartphone will result in all pending unsent images to remain unsent.

Printing

Professional Print Service

You can take a memory card that contains the images you want to print to a professional print service and have them printed.




Printing on a Home Printer

You can use a printer equipped with a memory card slot to print images directly from a memory card. For details, see the user documentation that comes with your printer.



Printing with a Computer

After transferring the images to your computer, use commercially available software to print.



Printing with a Computer

There are a variety of different ways to print images stored on a computer. This section shows one standard printing example.

■ Printing on a Windows Computer

1. Use the procedure under “Viewing and Storing Images on a Computer” (page 103) to store the image you want to print, and then display the image on your computer screen.
2. Click “Print” and then “Print”.
3. Configure the desired print settings and then click “Print”.



■ Printing on a Macintosh

1. Use the procedure under “Connecting the Camera to Your Computer and Saving Files” (page 106) to store the image you want to print, and then display the image on your Macintosh screen.
2. Click “File” and then “Print”.
3. Configure print settings and then click “Print”.
This will print the selected image.

Using the Camera with a Computer

Things you can do using a computer...

You can perform the operations described below while the camera is connected to a computer.

Save images to a computer and view them there 	<ul style="list-style-type: none">• Save images and view them manually (USB connection) (pages 103, 106).
Play back and edit movies 	<ul style="list-style-type: none">• You can play back movies (pages 105, 108).• To edit movies, use commercially available software as required.

The procedures you need to perform are different for Windows and the Macintosh.

<ul style="list-style-type: none">• Windows users should refer to “Using the Camera with a Windows Computer” on page 102.• Macintosh users should refer to “Using the Camera with a Macintosh” on page 106.
--

Using the Camera with a Windows Computer

When you want to do this:	Operating System Version	Required Software:	See page:
Save images to a computer and view them there manually	Windows 10, Windows 8.1, Windows 8, Windows 7, Windows Vista	Installation not required.	103
Play movies	Windows 10, Windows 8.1, Windows 8, Windows 7, Windows Vista	QuickTime 7 or higher <ul style="list-style-type: none">• You need to download QuickTime 7 or higher on the Web if you want to use it.	105

Viewing and Storing Images on a Computer

You can connect the camera to your computer in order to view and store images (snapshot and movie files).

Never use your computer to modify, delete, move, or rename any image files that are in the camera's built-in memory or on its memory card.

Doing so can cause problems with the camera's image management data, which will make it impossible to play back images on the camera and can drastically alter remaining memory capacity. Whenever you want to modify, delete, move, or rename an image, do so only on images that are stored on your computer.

IMPORTANT!

- Never unplug the USB cable, or operate the camera while viewing or storing images. Doing so can cause data to become corrupted.


NOTE

- You also can use your computer's card slot (if it has one) or a commercially available card reader to access image files directly from the camera's memory card. For details, see the user documentation that comes with your computer.

■ To connect the camera to your computer and save files

1. Turn off the camera and then use the micro USB cable that comes with the camera to connect it to your computer.

- For details about connecting to the camera and precautions when connecting, see page 24.

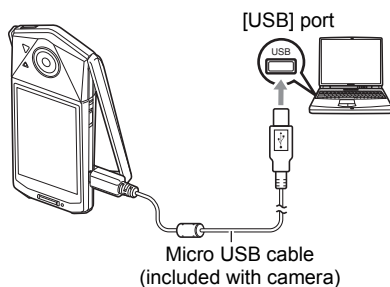

2. Press [⏻] (Power) to turn on the camera.

When you turn on the camera, check to make sure that the color of its operation lamp changes from red to green or amber (page 25). Note that in this case the monitor screen will remain blank.

- The first time you connect the camera to your computer with the USB cable, an error message may appear on your computer. If this happens, disconnect and then reconnect the USB cable.

3. Windows 10 users: Click “Start” and then “Explorer”. Next, in the sidebar, click “PC”.

Windows 8.1, Windows 8 users: Click “Desktop” and then “Explorer”.

Windows 7, Windows Vista users: Click “Start” and then “Computer”.

4. Double-click “Removable Disk”.

- Your computer recognizes the memory card loaded in the camera (or built-in memory if there is no card) as a removable disk.

5. Right-click the “DCIM” folder.

6. On the shortcut menu that appears, click “Copy”.

**7. Windows 10, Windows 8.1, Windows 8 users: Click “Documents”.
Windows 7, Windows Vista users: Click “Start” and then “Documents”.**

- If you already have a “DCIM” folder in “Documents”, the next step will overwrite it. If you want to keep the existing “DCIM” folder, you need to change its name or move it to a different location before performing the next step.

**8. Windows 10, Windows 8.1, Windows 8 users: On the “Documents”
menus, click “Home” and then “Paste”.**

**Windows 7, Windows Vista users: On the “Documents” menu, click
“Organize” or “Edit”, and then “Paste”.**

This will paste the “DCIM” folder (and all the image files it contains) into your “Documents” folder. You now have a copy of the files that are in camera memory on your computer.

- After copying images, it is recommended that you right-click the DCIM folder and change its name to something else.

**9. After you finish copying images, disconnect the camera from the
computer.**

On the camera, press [⏻] (Power) to turn off the camera. After checking to make sure that the operation lamp is unlit or lit red, disconnect the USB cable.

■ To view images you copied to your computer**1. Double-click the copied “DCIM” folder to open it.**

2. Double-click the folder that contains the images you want to view.

3. Double-click the image file you want to view.

- For information about file names, see “Memory Folder Structure” on page 110.

Playing Movies

To play back a movie, first copy it to your computer and then double-click the movie file. Some operating systems may not be able to play back movies. If this happens, you need to install separately available software.

- With Windows 10, Windows 8.1, Windows 8 and Windows 7, playback is supported by Windows Media Player 12.
- If you are unable to play back movies, go to the URL below to download QuickTime 7 or higher and install it on your computer.
<https://www.apple.com/quicktime/>

■ Minimum Computer System Requirements for Movie Playback

The minimum system requirements described below are necessary to play back movies recorded with this camera on a computer.

Operating System : Windows 10, Windows 8.1, Windows 8, Windows 7,
Windows Vista

CPU : Image Quality "Full HD", "HD":
Core 2 Duo 3.0GHz or higher
Image Quality "HS240":
Pentium 4 3.2GHz or higher

Required Software: QuickTime 7 or higher (Not required with Windows 10,
Windows 8.1, Windows 8 and Windows 7.)

- The above are recommended system environments. Configuring one of these environments does not guarantee proper operation.
- Certain settings and other installed software may interfere with proper playback of movies.

■ Movie Playback Precautions

- Be sure to move the movie data to the hard disk of your computer before trying to play it. Proper movie playback may not be possible for data accessed over a network, from a memory card, etc.
- Proper movie playback may not be possible on some computers. If you experience problems, try the following.
 - Quit any other applications you have running, and stop resident applications.

Using the Camera with a Macintosh

When you want to do this:	Operating System Version	Required Software:	See page:
Save images to your Macintosh and view them there manually	OS X	Installation not required.	106
Save images to your Macintosh automatically/Manage images	OS X	iPhoto, which comes bundled with some Macintosh products.	–
Play movies	OS X 10.5 or higher	QuickTime Player (installed on computer)	108

Connecting the Camera to Your Computer and Saving Files

Never use your computer to modify, delete, move, or rename any image files that are in the camera's built-in memory or on its memory card.

Doing so can cause problems with the camera's image management data, which will make it impossible to play back images on the camera and can drastically alter remaining memory capacity. Whenever you want to modify, delete, move, or rename an image, do so only on images that are stored on your computer.



IMPORTANT!

- Never unplug the USB cable, or operate the camera while viewing or storing images. Doing so can cause data to become corrupted.
- The camera does not support operation with Mac OS X 10.0 to 10.4. Operation is supported with Mac OS 10.5 to 10.10 (using the OS standard USB driver) only.


NOTE

- You also can use your computer's card slot (if it has one) or a commercially available card reader to access image files directly from the camera's memory card. For details, see the user documentation that comes with your computer.

■ To connect the camera to your computer and save files

1. Turn off the camera and then use the micro USB cable that comes with the camera to connect it to your Macintosh.

- For details about connecting to the camera and precautions when connecting, see page 24.

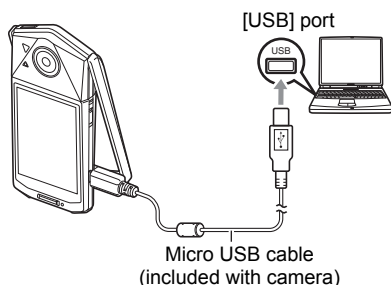

2. Press [⏻] (Power) to turn on the camera.

- When you turn on the camera, check to make sure that the color of its operation lamp changes from red to green or amber (page 25). In this mode, your Macintosh recognizes the memory card loaded in the camera (or the camera's built-in memory if it does not have a memory card loaded) as a drive. The appearance of the drive icon depends on the Mac OS version you are using.
- The first time you connect the camera to your Macintosh with the USB cable, an error message may appear on your computer. If this happens, disconnect and then reconnect the USB cable.

3. Double-click the camera's drive icon.

The camera's operation lamp will light green at this time. In this mode, your Macintosh recognizes the memory card loaded in the camera (or the camera's built-in memory if it does not have a memory card loaded) as a drive. The appearance of the drive icon depends on the Mac OS version you are using.

4. Drag the "DCIM" folder to the folder to which you want to copy it.

5. After the copy operation is complete, drag the drive icon to Trash.

6. Disconnect the camera from the computer.

On the camera, press [⏻] (Power) to turn off the camera. After checking to make sure that the operation lamp is unlit or lit red, disconnect the USB cable.

■ To view copied images

1. Double-click the camera's drive icon.

2. Double-click the "DCIM" folder to open it.

3. Double-click the folder that contains the images you want to view.

4. Double-click the image file you want to view.

- For information about file names, see "Memory Folder Structure" on page 110.
- An image that was rotated on the camera will be displayed on your Macintosh screen in its original (unrotated) orientation.

■ Playing a Movie

To play back a movie, first copy it to your Macintosh and then double-click the movie file.

■ Minimum Computer System Requirements for Movie Playback

The minimum system requirements described below are necessary to play back movies recorded with this camera on a computer.

Operating System : Mac OS X 10.5 or higher

Required Software : QuickTime Player (installed on computer)

- The above are recommended system environments. Configuring one of these environments does not guarantee proper operation.
- Certain settings and other installed software may interfere with proper playback of movies.

■ Movie Playback Precautions

Proper movie playback may not be possible on some Macintosh models. If you experience problems, try the following.

- Shut down other applications that are running.



IMPORTANT!

- Be sure to move the movie data to the hard disk of your Macintosh before trying to play it. Proper movie playback may not be possible for data accessed over a network, from a memory card, etc.

Files and Folders

The camera creates a file each time you shoot a snapshot, record a movie, or perform any other operation that stores data. Files are grouped by storing them in folders. Each file and folder has its own unique name.

- For details about how folders are organized in memory, see “Memory Folder Structure” (page 110).

Name and Maximum Number Allowed	Example
File	
Each folder can contain up to 9999 files named CIMG0001 through CIMG9999. The extension on the file name depends on the file type.	26th file name: CIMG0026.JPG Extension Serial number (4 digits)
Folders	
Folders are named from 100CASIO to 999CASIO. There can be up to 900 folders in memory.	100th folder name: 100CASIO Serial number (3 digits)

- You can view folder and file names on your computer. For details about how file names are displayed on the camera’s monitor screen, see page 10.
- The total number of folders and files allowed depends on the image size and quality, and capacity of the memory card being used for storage.

Memory Card Data


The camera stores images you shoot in accordance with the Design Rule for Camera File System (DCF).

■ About DCF

The following operations are supported for DCF-compliant images. Note, however, that CASIO makes no performance guarantees concerning these operations.

- Transferring this camera's DCF-compliant images to another manufacturer's camera and view them.
- Printing this camera's DCF-compliant images on another manufacturer's printer.
- Transferring another camera's DCF-compliant images to this camera and view them.

■ Memory Folder Structure

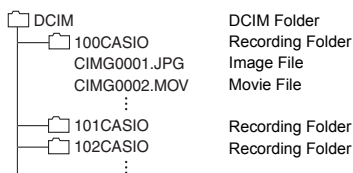

■ Supported Image Files

- Image files shot with this camera
- DCF-compliant image files

This camera may not be able to display an image, even if it is DCF-compliant. When displaying an image recorded on another camera, it may take a long time for the image to appear on this camera's monitor screen.

■ Built-in Memory and Memory Card Data Handling Precautions

- Whenever copying memory contents to your computer, you should copy the DCIM folder and all of its contents. A good way to keep track of multiple DCIM folders is to change their names to dates or something similar after you copy them to your computer. If you later decided to return a DCIM folder to the camera, however, be sure to change its name back to DCIM. The camera is designed to recognize only a root file with the name DCIM. Note the camera also will not be able to recognize the folders inside the DCIM folder unless they have the names they originally had when you copied them from the camera to your computer.
- Folders and files must be stored in accordance with the "Memory Folder Structure" shown on page 110 in order for the camera to be able to recognize them correctly.

Other Settings (Set Up)

This section explains menu items that you can use to configure settings and perform other operations in both the REC mode and PLAY mode.

For information about menu operations, see page 62.

Adjusting Monitor Screen Brightness (Screen)

Procedure

MENU → **Setup** → **Screen**

You can use the following procedure to change the brightness of the monitor screen.

Auto	With this setting, the camera detects available light levels and automatically adjusts the brightness of the monitor screen accordingly.
+2	Brightness that is greater than +1, which makes the screen easier to view. This setting consumes more power.
+1	Bright setting for outdoor use, etc. Brightness that is greater than 0.
0	Normal monitor screen brightness for indoor use, etc.
-1	Screen brightness for viewing in a dark environment without disturbing others around you.

Selecting Display Information (Info)

Procedure

MENU → **Setup** → **Info**

Selecting "On" displays setup status and other information.

NOTE

- When "Info" is enabled (On) in the PLAY mode, the exposure, shutter speed, and ISO sensitivity setting values of the currently displayed image are displayed in red when the current image's Auto Exposure (AE) is not correct.

Locking the Screen (Screen Lock)

Procedure

MENU → Setup → Screen Lock

Normally, the arrangement of icons and the images displayed on the camera monitor screen change automatically in accordance with the camera's orientation. Selecting "On" for the "Screen Lock" setting will lock the screen so its contents do not readjust to match the camera orientation.

Configuring Camera Sound Settings (Sounds)

Procedure

MENU → Setup → Sounds

Startup		Toggles the operation tone between on and off.
Half Shutter		
Shutter		
Operation		
Volume	Operation Vol	Specifies the sound volume.
	Playback Vol	Specifies the volume of movie audio output.
	Posing Vol	Specifies the volume of Posing Shot voice guidance. Voice guidance is output in accordance with this setting even if "Off" is selected for the "Shutter" operation tone setting.

- Setting a volume level of 0 mutes output.

Time Stamping Snapshots (Timestamp)

Procedure

MENU → **Setup** → **Timestamp**

You can configure the camera to stamp the recording date only, or date and time in the lower right corner of each snapshot.

- Once date and time information is stamped into a snapshot, it cannot be edited or deleted.

Example: July 10, 2016, 1:25 p.m.

Date	2016/7/10
Date & Time	2016/7/10 1:25pm
Off	No stamping of date and/or time

- Even if you do not stamp the date and/or time with Timestamp, you can do so later using some printing application.
- Stamping is performed in accordance with the date and time settings (page 115) and the display style settings (page 115).

Configuring World Time Settings (World Time)

Procedure

MENU → **Setup** → **World Time**

Setting a Travel Destination

You can use the World Time screen to view the current time in a zone that is different from your Home City when you go on a trip, etc. World Time displays the current time in 162 cities in 32 time zones around the globe.

1. Touch “Destination”.

- To change the geographic area and city for the time where you normally use the camera, select “Home”.

2. Touch “City”.

- To specify summer time for the destination city, select “DST” and then select the “On” setting (Summer time is used in some geographical areas to advance the current time setting by one hour during the summer months).

3. Drag upwards and downwards to display the area of the destination city and then touch the area.

4. Drag upwards and downwards until you find the city you want, and then touch to select it.

IMPORTANT!

- Before configuring World Time settings, make sure that the Home City setting is the place where you live or normally use the camera. If it isn't, select “Home” on the screen in step 1 and configure the Home City, date, and time settings as required (page 115).

Selecting the Time Display

Use this procedure to specify the time displayed by the camera for your home city and destination.

1. Touch “Time”.

2. Touch “Home” or “Destination”.



This will configure the time setting of the location you touched in the previous step.



Setting the Camera's Clock (Adjust)


Procedure

MENU → Setup → Adjust

1. Touch the value you want to change (year, month, day, hour, minute).

2. Touch “” or “” to change the currently selected value.

- You can specify a date from 2001 to 2049.
- Be sure to select your Home City (page 114) before setting the time and date. If you set the time and date while the wrong city is selected for your Home City, the times and dates of all of the World Time cities (page 114) will be wrong.
- To switch between 12-hour and 24-hour format, touch the 12/24 hour switch icon.
- Touching and holding “” or “” scrolls at high speed.

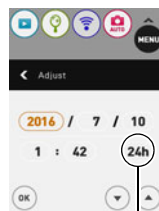

12/24 hour
switch icon

3. Touch “OK”.

Specifying the Date Style (Date Style)

Procedure

MENU → Setup → Date Style

You can select from among three different styles for the date.

Example: July 10, 2016

YY/MM/DD	16/7/10
DD/MM/YY	10/7/16
MM/DD/YY	7/10/16

Specifying the Display Language (Language)

Procedure

MENU → Setup → Language

■ Specify the display language you want.

1. On the menu screen, touch “Setup”.

2. Touch “Language”.

3. Drag upwards and downwards until you find the language you want, and then touch to select it.

- Camera models sold in certain geographic areas may not support display language selection.



Displaying a Startup Screen at Power On (Startup)

Procedure

MENU → **Setup** → **Startup**

Selecting "On" for Startup causes a built-in startup screen to appear on the monitor screen whenever the camera is turned on.

Formatting Built-in Memory or a Memory Card (Format)

Procedure

MENU → **Setup** → **Format**

If a memory card is loaded in the camera, this operation will format the memory card. It will format built-in memory if no memory card is loaded.

- The format operation will delete all contents on the memory card or in built-in memory. It cannot be undone. Make sure you do not need any data currently on the card or in built-in memory before you format it.
- Formatting built-in memory or a memory card will delete all protected images stored there.
- Check the battery level before starting a format operation and make sure it is not too low. Formatting may not be performed correctly and the camera may stop operating normally if the camera powers down while formatting is in progress.

Resetting the Camera to Factory Defaults (Reset)

Procedure

MENU → **Setup** → **Reset**

See page 142 for details about the camera's factory default settings.

The settings below are not reset.

World Time settings, clock settings, date style, screen language, WLAN password

NOTE

- Resetting the camera does not unpair it from a smartphone (page 92).
- Resetting the camera causes the Airplane Mode setting (page 97) to become "Off".

Checking the Current Camera Firmware Version (Version)

Procedure

MENU → **Setup** → **Version**

Selecting this menu item displays the camera model name, the version of firmware installed on the camera, and the camera's MAC address.

- Note that the MAC address is fixed number that functions as the camera's network device identifier.
- Check this screen after updating the camera's firmware to confirm that updating was actually performed.

Safety Precautions

DANGER

This symbol indicates information that, if ignored or applied incorrectly, creates the danger of death or serious personal injury.

WARNING

This indication stipulates matters that have the risk of causing death or serious injury if the product is operated incorrectly while ignoring this indication.

CAUTION

This indication stipulates matters that have the risk of causing injury as well as matters for which there is the likelihood of occurrence of physical damage only if the product is operated incorrectly while ignoring this indication.

Symbol Examples



This circle with a line through it (⊘) means that the indicated action must not be performed. Indications within or nearby this symbol are specifically prohibited. (The example at left indicates that disassembly is prohibited.)






The black dot (●) means that the indicated action must be performed.





Indications within this symbol are actions that are specifically instructed to be performed. (The example at left indicates that the power plug must be unplugged from the electrical socket.)

DANGER

■ Rechargeable Battery


- To charge the battery, use only the method specifically described in this manual. Attempting to charge the battery by an unauthorized means creates the risk of battery overheating, fire, and explosion. 
- Do not expose or immerse the battery in fresh water or salt water. Doing so can damage the battery, and cause deterioration of its performance and loss of service life. 
- The battery is intended for use with a CASIO Digital Camera only. Use with any other device creates the risk of the battery damage, or deterioration of battery performance and service life. 

 **DANGER**


- Failure to observe any of the following precautions creates the risk of battery overheating, fire, and explosion.
 - Never use or leave the battery near open flame. 
 - Do not expose the battery to heat or fire.
 - Make sure the battery is oriented correctly when charging it.
 - Never carry or store the battery together with items that can conduct electricity (necklaces, pencil lead, etc.).
 - Never disassemble the battery, pierce it with a needle, or expose it to strong impact (hit it with a hammer, step on it, etc.), and never apply solder to it. Never place the battery into a microwave oven, dehumidifier, high-pressure generating device, etc.
 - Never remove the outer sticker from the battery.
- Should you ever notice leakage, strange odor, heat generation, discoloration, deformation, or any other abnormal condition while using, charging, or storing a battery, immediately remove it from the camera and keep it away from open flame. Also, do not use the affected battery after the abnormal symptoms disappear. 
- Do not use or leave the battery under direct sunlight, in an automobile parked in the sun, or in any other area subject to high temperatures. Doing so can damage the battery, and cause deterioration of its performance and loss of service life. Also, these conditions can cause the battery to swell to the point that you may not be able to remove it. 
- Battery fluid can damage your eyes. Should battery fluid get into your eyes accidentally, immediately rinse them with clean tap water and then consult a physician. 

 **WARNING**


■ **Smoke, abnormal odor, overheating, and other abnormalities**

- Continued use of the camera while it is emitting smoke or strange odor, or while it is overheating creates the risk of fire and electric shock. Immediately perform the following steps whenever any of the above symptoms are present. 
- 1. Turn off the camera.
- 2. If you are using the USB-AC adapter to power the camera, unplug the power plug from the power outlet. Also, remove the battery from the camera, taking care to protect yourself against burn injury.
- 3. Contact your retailer or nearest CASIO authorized service center.


■ **Keep Away From Fire**

- Never expose the camera to fire, which can cause it to explode and creates the risk of fire and personal injury. 



■ **Avoid Use While In Motion**

- Never use the camera to record or play back images while operating an automobile or other vehicle, or while walking. Looking at the monitor while in motion creates the risk of serious accident. 






■ **LED Light**

- Never use the LED light while it is pointed in the direction of a person operating a motor vehicle. Doing so can interfere with the driver's vision and create the risk of accident. 



■ **USB-AC Adapter**

- Misuse of USB-AC adapter creates the risk of fire and electric shock. Be sure to observe the following precautions. 
 - Use only the specified USB-AC adapter.
 - Never use the USB-AC adapter with another device.
 - Use a power outlet that matches the power supply specified for the USB-AC adapter.
 - Never plug the USB-AC adapter or power cord into a wall outlet that is shared by other devices, or into a shared extension cord.
 - Never locate the USB-AC adapter near a stove or other heating device.
- Misuse of the USB-AC adapter can cause them to become damaged, creating the risk of fire and electric shock. Be sure to observe the following precautions. 
 - Never place heavy objects on the USB-AC adapter or subject it to direct heat.
 - Do not modify the USB-AC adapter, allow it to become damaged, or forcibly bend it.
 - Do not twist or pull on the power cord.
 - When in use, locate the cord where it will not be tripped over.


WARNING

- Never touch the power plug while your hands are wet. Doing so creates the risk of electric shock. 
- Should the power cord or power plug become damaged, contact your retailer or nearest CASIO authorized service center. 
- Do not use the USB-AC adapter in areas where liquids* might spill on them. Liquids create the risk of fire and electric shock. 
 - * Liquids: Water, sports drinks, seawater, animal or pet urine, etc.
- Do not place a flower vase or any other liquid container on top of the USB-AC adapter. Water creates the risk of fire and electric shock. 
- Do not touch the camera or USB-AC adapter during lightning storms. 


If a power cord was included with your camera

- The power cord that comes with the camera is designed for use in the country where the camera was purchased. If you use the camera in another country, be sure to use a power cord that conforms to that country's ratings and power supply voltage. Use of an improper power cord creates the risk of fire and electric shock. 
- Before going out, be sure to unplug the USB-AC adapter from the power outlet and put in a place away from objects used by animals and pets. An animal or pet chewing on the power cord can cause it short, leading to the risk of fire. 

■ Water and Foreign Matter


- Water, other liquids, or foreign matter (especially metal) getting inside the camera creates the risk of fire and electric shock. Immediately perform the following steps whenever any of the above symptoms are present. Particular care is required when using the camera where it is raining or snowing, near the ocean or other body of water, or in a bathroom. 
 1. Turn off the camera.
 2. If you are using the USB-AC adapter to power the camera, unplug the power plug from the power outlet. Also, remove the battery from the camera, taking care to protect yourself against burn injury.
 3. Contact your retailer or nearest CASIO authorized service center.

■ Disassembly and Modification


- Never try to take it apart or modify it in any way. Doing so creates the risk of electric shock, burn injury, and other personal injury. Be sure to leave all internal inspection, maintenance, and repair up to your retailer or nearest CASIO authorized service center. 

 **WARNING**


■ **Dropping and Rough Treatment**

- Continued use of the camera after it is damaged by dropping or other rough treatment creates the risk of fire and electric shock. Immediately perform the following steps whenever any of the above symptoms are present. 
 1. Turn off the camera.
 2. If you are using the USB-AC adapter to power the camera, unplug the power plug from the power outlet. Also, remove the battery from the camera, taking care to protect yourself against burn injury.
 3. Contact your retailer or nearest CASIO authorized service center.






■ **Memory Cards**

- Memory cards are small and present a risk of accidentally being swallowed by infants and young children. Keep memory cards out of the reach of infants and young children. If a memory card is ever swallowed accidentally, contact a physician immediately. 

■ **Precaution when Camera is On**



- Do not touch the camera for long periods while it is on. The camera becomes warm when on, and long term contact creates the risk of low-temperature burns. 

■ **Interference with other digital devices**






- Should you notice radio interference or other problems on other devices is being caused while using this camera, stop using the wireless functions (Remote Capture, image transfer, wireless image viewing, etc.) of this camera, or turn off the camera. Use of wireless functions creates the risk of radio interference and abnormal operation of other devices. 
- When in a medical facility or aircraft, comply with instructions of personnel in charge. Electromagnetic waves and other signals emitted by the camera's wireless function create the risk of accident. 
- Do not use the camera's wireless function while in the vicinity of high precision digital devices or digital devices that use weak signals. Doing so can interfere with proper operation of such digital devices and create the risk of accident. 
- When using the camera's wireless function, keep it away from any person wearing a pacemaker. Magnetism emitted by the camera may affect cardiac pacemakers and other medical devices. Should you ever notice any abnormality, immediately move away from the product and contact a physician. 
- On a crowded train or any other crowded location where there is the possibility of being in the vicinity of a person wearing a cardiac pacemaker, stop using the wireless functions (Remote Capture, image transfer, wireless image viewing, etc.) of this camera, or turn off the camera. Radio waves emitted by the camera's wireless function may affect pacemaker operation. 

 **CAUTION**


■ **USB-AC Adapter**

- Misuse of the USB-AC adapter creates the risk of fire and electric shock. Make sure you observe the following precautions.
 - Never cover the USB-AC adapter or power cord with a quilt, blanket, or other cover while it is in use, and do not use it near a heater. Doing so can interfere with heat radiation and cause the area around them to become hot. 
 - Do not use detergent when cleaning the power cord, the USB-AC adapter, or the USB cable (especially the plugs and jacks).
 - Insert the power plug into the wall outlet as far as it will go.
 - Unplug the power plug from the wall outlet before leaving the camera unattended for long periods, such as when leaving on a trip, etc. 
 - At least once a year, use a cloth or vacuum cleaner to clean any dust build up on the prongs of the power plug and in the area around them.
 - (Power cord included with your camera) When unplugging from the wall outlet, never pull on the power cord. Grasp the power plug and pull.


■ **Rechargeable Battery**

- If battery charging does not end normally within the specified charging time, stop charging anyway and contact your local CASIO authorized service center. Continued charging creates the risk of battery overheating, fire, and explosion. 
- Be sure to read the user documentation that comes with the camera before using or charging the battery. 
- Store batteries in a location that cannot be reached by infants and young children. When using a battery where infants and young children are present, be on guard to ensure that they do not have the chance to remove the battery from the camera. 
- Do not leave batteries near areas used by pets. A pet chewing on a battery can lead to accidents caused by the battery leaking, overheating, or exploding. 
- Should fluid from a battery accidentally get onto clothing or your skin, immediately rinse it off with clean tap water. Prolonged contact with battery fluid can cause skin irritation. 

■ **Connections**

- Never plug any devices that are not specified for use with this camera into connectors. Connecting a non-specified device creates the risk of fire and electric shock. 

■ **Unstable Locations**

- Never place the camera on an unstable surface, on a high shelf, etc. Doing so can cause the camera to fall, creating the risk of personal injury. 

 **CAUTION**

■ **Locations To Be Avoided**

- Never leave the camera in any of the following types of locations. Doing so creates the risk of fire and electric shock.
 - Areas subject to large amounts of humidity or dust
 - Food preparation areas or other locations where oil smoke is present
 - Near heaters, on a heated carpet, in areas exposed to direct sunlight, in a closed vehicle parked in the sun, or other areas subject to very high temperatures



■ **Monitor Screen**

- Do not apply strong pressure to the LCD panel surface or subject it to strong impact. Doing so can cause the display panel glass to crack and lead to personal injury.
- Should the monitor screen ever become cracked, never touch any of the liquid inside the monitor screen. Doing so creates the risk of skin inflammation.
- Should monitor screen liquid ever get into your mouth, immediately rinse your mouth out and contact your physician.
- Should monitor screen liquid ever get into your eyes or onto your skin, immediately rinse with clean water for at least 15 minutes and contact your physician.



■ **Backing Up Important Data**

- Always keep backup copies of important data in camera memory by transferring it to a computer or other storage device. Note that data can be deleted in the case of camera malfunction, repair, etc.



■ **Memory Protection**

- Whenever replacing the battery, be sure to follow the correct procedure as described in the documentation that comes with the camera. Incorrectly replacing the battery can result in corruption or loss of data in camera memory.



■ **LED Light**

- Do not fire the LED light or use other light emitting functions while the light is pointed in the direction of and too close to a person's face. Doing so creates the risk of momentary loss of eyesight.



Precautions During Use

■ Data Error Precautions

Your digital camera is manufactured using precision digital components. Any of the following creates the risk of corruption of data in camera memory.

- Removing the battery or memory card while the camera is performing some operation
- Removing the battery or memory card while the operation lamp is flashing green after turning off the camera
- Disconnecting the USB cable while communication is in progress
- Shooting with a battery that quickly goes low right after it is charged
 - Shooting with a battery that quickly goes low right after it is charged can also cause camera malfunction. Replace the battery with a new one immediately.
- Other abnormal operations

Any of the above conditions can cause an error message to appear on the monitor screen (page 148). Perform the action indicated by the message that appears.

■ Operating Environment

- Operating Temperature Requirements: 0 to 40°C (32 to 104°F)
- Operating Humidity: 10 to 85% (non condensation)
- Do not place the camera in any of the following locations.
 - In an area exposed to direct sunlight, or large amounts of moisture, dust, or sand
 - Near heating or cooling devices, or in other areas subjected to extreme changes in temperature or humidity
 - Inside of a motor vehicle on a hot day, or in an area subjected to strong vibration

■ Condensation

Sudden and extreme temperature changes, such as when the camera is moved from the outdoors on a cold winter day into a warm room, can cause water droplets called “condensation” to form on the interior and the exterior of the camera, which creates the risk of malfunction. To prevent condensation from forming seal the camera in a plastic bag before changing locations. Then leave the bag sealed to allow the air inside to naturally change to the same temperature as the air in the new location. After that, remove the camera from the bag and open the battery cover for a few hours.

■ Lens

- Never apply too much force when cleaning the surface of the lens. Doing so can scratch the lens surface and cause malfunction.
- You may sometimes notice some distortion in certain types of images, such as a slight bend in lines that should be straight. This is due to the characteristics of lenses, and does not indicate malfunction of the camera.

■ Caring for your camera

- Never touch the lens with your fingers. Finger smudges, dirt, and other foreign matter on the lens can interfere with proper operation of the camera. Use a blower or other means to keep the lens and flash window free of dirt and dust, and wipe gently with a soft, dry cloth.
- To clean the camera, wipe it with a soft, dry cloth.

■ Old Rechargeable Battery Handling Precautions

- Insulate the positive and negative terminals with tape, etc.
- Do not peel the covering off of the battery.
- Do not try to take the battery apart.

■ Discarding or Transferring Ownership of a Memory Card or the Camera

The format and delete functions of the camera do not actually delete files from the memory card. The original data remains on the card. Note that responsibility for the data on a memory card lies with you. The following procedures are recommended whenever you discard a memory card or the camera, or if you transfer ownership to another party.

- When discarding a memory card, either physically destroy the memory card or use commercially available data delete software to completely delete the data on the memory card.
- When transferring ownership of a memory card to another party, use commercially available data deletion software to completely delete the data on it.
- Use the format function (page 117) to completely delete the data in built-in memory before discarding or transferring ownership of the camera.

■ Precautions During Wireless Function (Wireless LAN, Bluetooth Wireless Technology) Use

Operation of this product may affect or may be affected by nearby devices that use wireless functionality.

Radio transmission interception

The radio waves that are used to send and receive data can be intercepted by third parties.

Unauthorized access

CASIO COMPUTER CO., LTD. shall be held in no way liable for any unauthorized access and/or use of the access point equipped on this product if the product is ever lost or stolen.

Use as a wireless device

Use the wireless function of this product only as specifically described in this manual. Any other use is unintended use, and CASIO COMPUTER CO., LTD. shall be held in no way liable for any damages arising out of unintended use.

Magnetism, electrostatic charge, and radio interference

Do not use this product near a microwave oven or any other area where magnetism, electrostatic charge, or radio interference is generated. Radio wave reception may be poor in certain environments.

Also note that other devices using the same 2.4GHz band used by this product may cause reduced processing speeds in both devices.

Connection to a public LAN

This product does not support wireless LAN connection over a public wireless LAN environment.

Intended Areas of Use

This camera is intended for use in countries or areas listed at the website linked below.

<http://world.casio.com/r-law/dc/>

Even if you are in a country or area whose name is included in the list at the website linked above and even if your camera model is the same as the one described in this manual, your camera may not comply with radio laws and other laws in your area or country if you purchased a model intended for another country or area on the Internet, etc. In this case, it is up to you to determine if your camera can be used legally in your country or area.

Use of this camera in a country or area other than where it was originally purchased runs the risk of being in violation of local radio laws and other laws. Note that CASIO COMPUTER CO., LTD. shall not be held in any way liable for any such violations.

■ Other Precautions

The camera becomes slightly warm during use. This is normal and does not indicate malfunction.

■ Copyrights

Except for your own personal enjoyment, unauthorized use of snapshots or movies of images whose rights belong to others, without the permission of the right holder, is forbidden by copyright laws. In some cases, shooting of public performances, shows, exhibitions, etc. may be restricted entirely, even if it is for your own personal enjoyment. Regardless of whether such files are purchased by you or obtained for free, posting them on a website, a file sharing site, or any other Internet site, or otherwise distributing them to third parties without the permission of the copyright holder is strictly prohibited by copyright laws and international treaties. For example, uploading or distributing on the Internet images of TV programs, live concerts, music videos, etc. that were photographed or recorded by you may infringe upon the rights of others. Note that CASIO COMPUTER CO., LTD. shall not be held liable for use of this product in any way that infringes on the copyrights of others or that violates copyright laws.

The following terms, which are used in this manual, are registered trademarks or trademarks of their respective owners.

Note that trademark [™] and registered trademark [®] are not used within the text of this manual.

- microSDXC Logo is a trademark of SD-3C, LLC.
- Windows, Windows Vista, Windows 7, Windows 8, Windows 8.1, and Windows 10 are registered trademarks or trademarks of Microsoft Corporation in the United States and other countries.
- Macintosh, Mac OS, QuickTime, iPhoto, and iPhone are trademarks of Apple Inc.
- Adobe and Reader are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.
- Android and Google Play are trademarks or registered trademarks of Google Inc.
- App Store is a service mark of Apple Inc.
- iOS is a trademark or registered trademark of Cisco Systems, Inc. of the United States.
- Wi-Fi is a registered trademark of the Wi-Fi Alliance.
- The Bluetooth[®] word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by CASIO COMPUTER CO., LTD. is under license. Other trademarks and trade names are those of their respective owners.
- EXILIM and EXILIM Connect are registered trademarks or trademarks of CASIO COMPUTER CO., LTD.
- All other company or product names mentioned herein are registered trademarks or trademarks of their respective companies.

Any and all unauthorized copying, distribution, and transfer for commercial purposes of the software provided by CASIO for this product are prohibited.

■ Open Source Software

This product includes software that is licensed under the license conditions below.

OpenVG 1.1 Reference Implementation

Copyright (c) 2007 The Khronos Group Inc.

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and /or associated documentation files (the "Materials "), to deal in the Materials without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Materials, and to permit persons to whom the Materials are furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Materials.

THE MATERIALS ARE PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE MATERIALS OR THE USE OR OTHER DEALINGS IN THE MATERIALS.

bluedroid 5.0.0_r2

Copyright (c) 2014 The Android Open Source Project
Copyright (C) 1998-2014 Broadcom Corporation

Licensed under the Apache License, Version 2.0 (the "License");
you may not use this file except in compliance with the License.
You may obtain a copy of the License at

<http://www.apache.org/licenses/LICENSE-2.0>

Unless required by applicable law or agreed to in writing, software distributed under the License is distributed on an "AS IS" BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied. See the License for the specific language governing permissions and limitations under the License.

Apache License
Version 2.0, January 2004
<http://www.apache.org/licenses/>

TERMS AND CONDITIONS FOR USE, REPRODUCTION, AND DISTRIBUTION

1. Definitions.

"License" shall mean the terms and conditions for use, reproduction,

and distribution as defined by Sections 1 through 9 of this document.

"Licensor" shall mean the copyright owner or entity authorized by the copyright owner that is granting the License.

"Legal Entity" shall mean the union of the acting entity and all other entities that control, are controlled by, or are under common control with that entity. For the purposes of this definition, "control" means (i) the power, direct or indirect, to cause the direction or management of such entity, whether by contract or otherwise, or (ii) ownership of fifty percent (50%) or more of the outstanding shares, or (iii) beneficial ownership of such entity.

"You" (or "Your") shall mean an individual or Legal Entity exercising permissions granted by this License.

"Source" form shall mean the preferred form for making modifications, including but not limited to software source code, documentation source, and configuration files.

"Object" form shall mean any form resulting from mechanical transformation or translation of a Source form, including but not limited to compiled object code, generated documentation, and conversions to other media types.

"Work" shall mean the work of authorship, whether in Source or Object form, made available under the License, as indicated by a copyright notice that is included in or attached to the work (an example is provided in the Appendix below).

"Derivative Works" shall mean any work, whether in Source or Object form, that is based on (or derived from) the Work and for which the editorial revisions, annotations, elaborations, or other modifications represent, as a whole, an original work of authorship. For the purposes of this License, Derivative Works shall not include works that remain separable from, or merely link (or bind by name) to the interfaces of, the Work and Derivative Works thereof.

"Contribution" shall mean any work of authorship, including the original version of the Work and any modifications or additions to that Work or Derivative Works thereof, that is intentionally submitted to Licensor for inclusion in the Work by the copyright owner or by an individual or Legal Entity authorized to submit on behalf of the copyright owner. For the purposes of this definition, "submitted" means any form of electronic, verbal, or written communication sent to the Licensor or its representatives, including but not limited to communication on electronic mailing lists, source code control systems, and issue tracking systems that are managed by, or on behalf of, the Licensor for the purpose of discussing and improving the Work, but excluding communication that is conspicuously marked or otherwise designated in writing by the copyright owner as "Not a Contribution."

"Contributor" shall mean Licensor and any individual or Legal Entity on behalf of whom a Contribution has been received by Licensor and subsequently incorporated within the Work.

2. Grant of Copyright License. Subject to the terms and conditions of this License, each Contributor hereby grants to You a perpetual, worldwide, non-exclusive, no-charge, royalty-free, irrevocable copyright license to reproduce, prepare Derivative Works of, publicly display, publicly perform, sublicense, and distribute the Work and such Derivative Works in Source or Object form.
3. Grant of Patent License. Subject to the terms and conditions of this License, each Contributor hereby grants to You a perpetual, worldwide, non-exclusive, no-charge, royalty-free, irrevocable (except as stated in this section) patent license to make, have made, use, offer to sell, sell, import, and otherwise transfer the Work, where such license applies only to those patent claims licensable by such Contributor that are necessarily infringed by their Contribution(s) alone or by combination of their Contribution(s) with the Work to which such Contribution(s) was submitted. If You institute patent litigation against any entity (including a cross-claim or counterclaim in a lawsuit) alleging that the Work or a Contribution incorporated within the Work constitutes direct or contributory patent infringement, then any patent licenses granted to You under this License for that Work shall terminate as of the date such litigation is filed.
4. Redistribution. You may reproduce and distribute copies of the Work or Derivative Works thereof in any medium, with or without modifications, and in Source or Object form, provided that You meet the following conditions:
 - (a) You must give any other recipients of the Work or Derivative Works a copy of this License; and
 - (b) You must cause any modified files to carry prominent notices stating that You changed the files; and
 - (c) You must retain, in the Source form of any Derivative Works that You distribute, all copyright, patent, trademark, and attribution notices from the Source form of the Work, excluding those notices that do not pertain to any part of the Derivative Works; and
 - (d) If the Work includes a "NOTICE" text file as part of its distribution, then any Derivative Works that You distribute must include a readable copy of the attribution notices contained within such NOTICE file, excluding those notices that do not pertain to any part of the Derivative Works, in at least one of the following places: within a NOTICE text file distributed as part of the Derivative Works; within the Source form or documentation, if provided along with the Derivative Works; or,

within a display generated by the Derivative Works, if and wherever such third-party notices normally appear. The contents of the NOTICE file are for informational purposes only and do not modify the License. You may add Your own attribution notices within Derivative Works that You distribute, alongside or as an addendum to the NOTICE text from the Work, provided that such additional attribution notices cannot be construed as modifying the License.

You may add Your own copyright statement to Your modifications and may provide additional or different license terms and conditions for use, reproduction, or distribution of Your modifications, or for any such Derivative Works as a whole, provided Your use, reproduction, and distribution of the Work otherwise complies with the conditions stated in this License.

5. **Submission of Contributions.** Unless You explicitly state otherwise, any Contribution intentionally submitted for inclusion in the Work by You to the Licensor shall be under the terms and conditions of this License, without any additional terms or conditions.
Notwithstanding the above, nothing herein shall supersede or modify the terms of any separate license agreement you may have executed with Licensor regarding such Contributions.
6. **Trademarks.** This License does not grant permission to use the trade names, trademarks, service marks, or product names of the Licensor, except as required for reasonable and customary use in describing the origin of the Work and reproducing the content of the NOTICE file.
7. **Disclaimer of Warranty.** Unless required by applicable law or agreed to in writing, Licensor provides the Work (and each Contributor provides its Contributions) on an "AS IS" BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied, including, without limitation, any warranties or conditions of TITLE, NON-INFRINGEMENT, MERCHANTABILITY, or FITNESS FOR A PARTICULAR PURPOSE. You are solely responsible for determining the appropriateness of using or redistributing the Work and assume any risks associated with Your exercise of permissions under this License.
8. **Limitation of Liability.** In no event and under no legal theory, whether in tort (including negligence), contract, or otherwise, unless required by applicable law (such as deliberate and grossly negligent acts) or agreed to in writing, shall any Contributor be liable to You for damages, including any direct, indirect, special, incidental, or consequential damages of any character arising as a result of this License or out of the use or inability to use the Work (including but not limited to damages for loss of goodwill, work stoppage, computer failure or malfunction, or any and all other commercial damages or losses), even if such Contributor has been advised of the possibility of such damages.

9. Accepting Warranty or Additional Liability. While redistributing the Work or Derivative Works thereof, You may choose to offer, and charge a fee for, acceptance of support, warranty, indemnity, or other liability obligations and/or rights consistent with this License. However, in accepting such obligations, You may act only on Your own behalf and on Your sole responsibility, not on behalf of any other Contributor, and only if You agree to indemnify, defend, and hold each Contributor harmless for any liability incurred by, or claims asserted against, such Contributor by reason of your accepting any such warranty or additional liability.

END OF TERMS AND CONDITIONS

bluedroid 5.0.0_r2

Copyright (c) 1998-2008, Brian Gladman, Worcester, UK. All rights reserved.

LICENSE TERMS

The redistribution and use of this software (with or without changes) is allowed without the payment of fees or royalties provided that:

1. source code distributions include the above copyright notice, this list of conditions and the following disclaimer;
2. binary distributions include the above copyright notice, this list of conditions and the following disclaimer in their documentation;
3. the name of the copyright holder is not used to endorse products built using this software without specific written permission.

DISCLAIMER

This software is provided 'as is' with no explicit or implied warranties in respect of its properties, including, but not limited to, correctness and/or fitness for purpose.

libhardware 5.0.0_r2

Copyright (c) 2005-2014, The Android Open Source Project

Licensed under the Apache License, Version 2.0 (the "License"); you may not use this file except in compliance with the License. You may obtain a copy of the License at

<http://www.apache.org/licenses/LICENSE-2.0>

Unless required by applicable law or agreed to in writing, software distributed under the License is distributed on an "AS IS" BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied.

See the License for the specific language governing permissions and limitations under the License.

Apache License
Version 2.0, January 2004
<http://www.apache.org/licenses/>

TERMS AND CONDITIONS FOR USE, REPRODUCTION, AND DISTRIBUTION

1. Definitions.

"License" shall mean the terms and conditions for use, reproduction, and distribution as defined by Sections 1 through 9 of this document.

"Licensor" shall mean the copyright owner or entity authorized by the copyright owner that is granting the License.

"Legal Entity" shall mean the union of the acting entity and all other entities that control, are controlled by, or are under common control with that entity. For the purposes of this definition, "control" means (i) the power, direct or indirect, to cause the direction or management of such entity, whether by contract or otherwise, or (ii) ownership of fifty percent (50%) or more of the outstanding shares, or (iii) beneficial ownership of such entity.

"You" (or "Your") shall mean an individual or Legal Entity exercising permissions granted by this License.

"Source" form shall mean the preferred form for making modifications, including but not limited to software source code, documentation source, and configuration files.

"Object" form shall mean any form resulting from mechanical transformation or translation of a Source form, including but not limited to compiled object code, generated documentation, and conversions to other media types.

"Work" shall mean the work of authorship, whether in Source or Object form, made available under the License, as indicated by a copyright notice that is included in or attached to the work (an example is provided in the Appendix below).

"Derivative Works" shall mean any work, whether in Source or Object form, that is based on (or derived from) the Work and for which the editorial revisions, annotations, elaborations, or other modifications represent, as a whole, an original work of authorship. For the purposes of this License, Derivative Works shall not include works that remain separable from, or merely link (or bind by name) to the interfaces of, the Work and Derivative Works thereof.

"Contribution" shall mean any work of authorship, including the original version of the Work and any modifications or additions

to that Work or Derivative Works thereof, that is intentionally submitted to Licensor for inclusion in the Work by the copyright owner or by an individual or Legal Entity authorized to submit on behalf of the copyright owner. For the purposes of this definition, "submitted" means any form of electronic, verbal, or written communication sent to the Licensor or its representatives, including but not limited to communication on electronic mailing lists, source code control systems, and issue tracking systems that are managed by, or on behalf of, the Licensor for the purpose of discussing and improving the Work, but excluding communication that is conspicuously marked or otherwise designated in writing by the copyright owner as "Not a Contribution."

"Contributor" shall mean Licensor and any individual or Legal Entity on behalf of whom a Contribution has been received by Licensor and subsequently incorporated within the Work.

2. **Grant of Copyright License.** Subject to the terms and conditions of this License, each Contributor hereby grants to You a perpetual, worldwide, non-exclusive, no-charge, royalty-free, irrevocable copyright license to reproduce, prepare Derivative Works of, publicly display, publicly perform, sublicense, and distribute the Work and such Derivative Works in Source or Object form.
3. **Grant of Patent License.** Subject to the terms and conditions of this License, each Contributor hereby grants to You a perpetual, worldwide, non-exclusive, no-charge, royalty-free, irrevocable (except as stated in this section) patent license to make, have made, use, offer to sell, sell, import, and otherwise transfer the Work, where such license applies only to those patent claims licensable by such Contributor that are necessarily infringed by their Contribution(s) alone or by combination of their Contribution(s) with the Work to which such Contribution(s) was submitted. If You institute patent litigation against any entity (including a cross-claim or counterclaim in a lawsuit) alleging that the Work or a Contribution incorporated within the Work constitutes direct or contributory patent infringement, then any patent licenses granted to You under this License for that Work shall terminate as of the date such litigation is filed.
4. **Redistribution.** You may reproduce and distribute copies of the Work or Derivative Works thereof in any medium, with or without modifications, and in Source or Object form, provided that You meet the following conditions:
 - (a) You must give any other recipients of the Work or Derivative Works a copy of this License; and
 - (b) You must cause any modified files to carry prominent notices stating that You changed the files; and
 - (c) You must retain, in the Source form of any Derivative Works that You distribute, all copyright, patent, trademark, and

attribution notices from the Source form of the Work, excluding those notices that do not pertain to any part of the Derivative Works; and

- (d) If the Work includes a "NOTICE" text file as part of its distribution, then any Derivative Works that You distribute must include a readable copy of the attribution notices contained within such NOTICE file, excluding those notices that do not pertain to any part of the Derivative Works, in at least one of the following places: within a NOTICE text file distributed as part of the Derivative Works; within the Source form or documentation, if provided along with the Derivative Works; or, within a display generated by the Derivative Works, if and wherever such third-party notices normally appear. The contents of the NOTICE file are for informational purposes only and do not modify the License. You may add Your own attribution notices within Derivative Works that You distribute, alongside or as an addendum to the NOTICE text from the Work, provided that such additional attribution notices cannot be construed as modifying the License.

You may add Your own copyright statement to Your modifications and may provide additional or different license terms and conditions for use, reproduction, or distribution of Your modifications, or for any such Derivative Works as a whole, provided Your use, reproduction, and distribution of the Work otherwise complies with the conditions stated in this License.

5. **Submission of Contributions.** Unless You explicitly state otherwise, any Contribution intentionally submitted for inclusion in the Work by You to the Licensor shall be under the terms and conditions of this License, without any additional terms or conditions. Notwithstanding the above, nothing herein shall supersede or modify the terms of any separate license agreement you may have executed with Licensor regarding such Contributions.
6. **Trademarks.** This License does not grant permission to use the trade names, trademarks, service marks, or product names of the Licensor, except as required for reasonable and customary use in describing the origin of the Work and reproducing the content of the NOTICE file.
7. **Disclaimer of Warranty.** Unless required by applicable law or agreed to in writing, Licensor provides the Work (and each Contributor provides its Contributions) on an "AS IS" BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied, including, without limitation, any warranties or conditions of TITLE, NON-INFRINGEMENT, MERCHANTABILITY, or FITNESS FOR A PARTICULAR PURPOSE. You are solely responsible for determining the appropriateness of using or redistributing the Work and assume any risks associated with Your exercise of permissions under this License.

8. **Limitation of Liability.** In no event and under no legal theory, whether in tort (including negligence), contract, or otherwise, unless required by applicable law (such as deliberate and grossly negligent acts) or agreed to in writing, shall any Contributor be liable to You for damages, including any direct, indirect, special, incidental, or consequential damages of any character arising as a result of this License or out of the use or inability to use the Work (including but not limited to damages for loss of goodwill, work stoppage, computer failure or malfunction, or any and all other commercial damages or losses), even if such Contributor has been advised of the possibility of such damages.
9. **Accepting Warranty or Additional Liability.** While redistributing the Work or Derivative Works thereof, You may choose to offer, and charge a fee for, acceptance of support, warranty, indemnity, or other liability obligations and/or rights consistent with this License. However, in accepting such obligations, You may act only on Your own behalf and on Your sole responsibility, not on behalf of any other Contributor, and only if You agree to indemnify, defend, and hold each Contributor harmless for any liability incurred by, or claims asserted against, such Contributor by reason of your accepting any such warranty or additional liability.

END OF TERMS AND CONDITIONS

Charging

■ If the camera's operation lamp starts flashing red...

If the operation lamp starts flashing red during charging, it means that further charging is not possible for one of the reasons below. Perform the actions described below to correct the problem and then try charging again.

Ambient temperature or the temperature of the battery is abnormally high or low

Unplug the USB cable from the camera and wait for a while until the camera is within the temperature range of 15°C to 35°C (59°F to 95°F), and then try charging again.

Safety timer activated

A battery that has not been used for a long time, certain types of computers, and connection conditions can cause charging to take longer than normal. If charging takes longer than about five hours, a safety timer will terminate it automatically, even if the battery is not fully charged. If the battery has not been used for a very long time, charging may terminate automatically after only about 60 minutes.

- 1) Using a battery that has not been used for a long time.
Disconnect and then reconnect the USB cable to resume charging.
- 2) Insufficient power supply when connected to computer
The camera can be charged only via a USB 2.0 standard USB port. Connect directly to a USB port what supplies a current of 500mA.

For details about the power supply capacity of a computer's USB port, contact the manufacturer of the computer. Though disconnecting and then reconnecting the USB cable will resume charging, you may need to do so repeatedly if the power supply capacity of the computer is low.

If problems persist after you perform the above steps or if the battery fails to charge after 5 hours, it could mean that the battery is faulty. Contact your nearest CASIO authorized service center.

Battery Precautions

■ Precautions during Use

- Operation provided by a battery under cold conditions is always less than operation under normal temperatures. This is due to the characteristics of the battery, not the camera.
- Charge the battery in an area where the temperature is within the range of 15°C to 35°C (59°F to 95°F). Outside this temperature range charging can take longer than normal or even fail.
- Do not tear or remove the battery outer label.
- If a battery provides only very limited operation following a full charge, it probably means the battery has reached the end of its service life. Replace the battery with a new one.

■ Storage Precautions

- Storing the battery for a long time while it is charged can cause deterioration of battery characteristics. If you do not plan to use a battery for some time, fully use up its charge before storing it.
- Always remove the battery from the camera when you are not using it. A battery left in the camera can discharge and go dead, which will require some time to charge when you need to use the camera.
- Store batteries in a cool, dry place (20°C (68°F) or lower).
- To prevent over discharging of an unused battery, fully charge it, and then load it in the camera and fully use up the charge about once every six months.

Using the Camera in another Country

■ Precautions during Use

- The bundled USB-AC adaptor is designed for operation with any power supply in the range of 100V to 240V AC, 50/60Hz. Note, however, that the shape of the power plug depends on each country or geographic area. Before taking the camera and USB-AC adaptor along on a trip, check with travel agent about the power supply requirements in your destination(s).
- Do not connect the USB-AC adaptor to a power supply through a voltage converter or similar device. Doing so can lead to malfunction.

■ Extra Batteries

- Taking along extra fully charged batteries (NP-150) is recommended while on a trip in order to avoid not being able to shoot images due to the battery going dead.

Using a Memory Card

See page 28 for information about supported memory cards and how to load a memory card.

■ Using a Memory Card

- If a memory card starts to behave abnormally during image playback, you can restore normal operation by reformatting it (page 117). However, it is recommended that you always take along multiple memory cards whenever using the camera far away from the home or office.
- As you record data to and delete data from a memory card a number of times, it loses its ability to retain data. Because of this, periodic re-formatting of a memory card is recommended.
- Electrostatic charge, electrical noise, and other phenomena can cause data to become corrupted or even lost. Make sure that you always back up important data on other media (CD-R, CD-RW, hard disk, etc.).

■ Memory Card Handling Precautions

Certain types of memory cards can slow down processing speed. Whenever possible use an Ultra High-Speed Type memory card. Note, however, that not all operations can be guaranteed even if an Ultra High-Speed Type memory card is used. Certain movie quality settings can result in too much time being required to record data, which can result in breaks in the image and/or audio during playback. If this happens, the movie icon will turn yellow on the monitor screen.

Reset Initial Default Settings

The tables in this section show the initial default settings on menus that appear in the REC mode and PLAY mode when you reset the camera (page 117).

- A dash (–) indicates an item whose setting is not reset or an item for which there is no reset setting.



IMPORTANT!

- Some menu items may not be available, depending on the recording mode being use.

■ REC Menu

Selfie Pad	Selfie Art
Touch Shutter	Off
Instant Movie	Movie Quality: STD Length: 10 sec
L/R Flip Shot	Off
Self-timer	Off
LED	Off
Image Size	12M

Movie Quality	Full HD
Brightness	0.0
White Balance	Auto WB
ISO	Auto
Focus	AF
Review	Type 2
Setup	→ See below.

* Default setting depends on country or geographic region.

■ PLAY Menu

Selfie Pad	Scroll
Paint	–
Slideshow	–
Cut out subject	–
Paste subject	–
Protect	–

Rotation	–
Resize	–
Trimming	–
Setup	→ See below.

■ Setup Menu

Screen	Auto
Info	Off
Screen Lock	Off
Sounds	Startup: On / Half Shutter: On / Shutter: On / Operation: On / Operation Vol: 3 / Playback Vol: 3 / Posing Vol: 3
Timestamp	Off

World Time	–
Adjust	–
Date Style	–
Language	–
Startup	Off
Format	–
Reset	–
Version	–


■ Wireless settings

Airplane Mode	Off
Auto Send	Off
Auto Send File Settings	<input checked="" type="checkbox"/> Only
Resize before send	3M
WLAN password	–
Unpairing	–

When things don't go right...

Troubleshooting

Problem	Possible Cause and Recommended Action
Power Supply	
Power does not turn on.	<ol style="list-style-type: none">1)The battery of new camera is not charged. Charge the battery before using the camera.2)The camera battery may be dead. Charge the battery (page 19). If the battery goes dead soon after being charged, it means the battery has reached the end of its life and needs to be replaced. Purchase a separately available CASIO NP-150 rechargeable lithium ion battery.
The camera suddenly powers down.	<ol style="list-style-type: none">1)The camera is designed to turn off automatically after no operation is performed for about five minutes. Turn power back on.2)The battery may be dead. Charge the battery (page 19).3)The camera's protection function may have activated because camera temperature is too high. Turn off the camera and wait until it cools down before trying to use it again.
Power will not turn off. Nothing happens when a button is pressed.	Remove the battery from the camera and then reload them.
Charging	
The operation lamp does not light red and the battery won't charge.	<ol style="list-style-type: none">1)Unplug the USB cable from the camera and then plug it back in again.2)Remove the battery from the camera and then reload it (page 20).
Image Recording	
Image is not recorded when the shutter button is pressed.	<ol style="list-style-type: none">1)If the camera is in the PLAY mode, touch "Ⓜ" (REC) to enter the REC mode.2)If the message "Memory Full" appears, transfer images to your computer, delete images you no longer need, or use a different memory card.
Auto Focus does not focus properly.	<ol style="list-style-type: none">1)If the lens is dirty, clean it off.2)The subject may not be in the center of the focus frame when you compose the image.3)You may be moving the camera when shooting. Place the camera on a tabletop or some other stable surface, or find some way to fix the camera in place.4)You may be pressing the shutter button all the way without waiting for Auto Focus. Half-press the shutter button and allow enough time for Auto Focus to focus.


Problem	Possible Cause and Recommended Action
The subject is out of focus in the recorded image.	The image may not be focused properly. When composing the image, make sure the subject is located inside the focus frame.
The LED light does not light.	1) If the battery is dead, charge it (page 19). 2) LED light operation is disabled automatically whenever you are shooting with a BEST SHOT scene or HDR Art. Select a different recording mode (page 40).
Camera powers down during Self-timer countdown.	The battery may be dead. Charge the battery (page 19).
The monitor screen image is out of focus.	1) You may be using "Macro" for scenery or portraits. Use Auto Focus for scenery and portrait shots (page 70). 2) You may be trying to use Auto Focus or "Infinity" when shooting a close-up shot. Use the "Macro" for close ups (page 70).
There is digital noise in images.	1) Sensitivity may have been increased automatically for a dark subject, which increases the chance of digital noise. Use a light or some other means to illuminate the subject. 2) Shooting with a snapshot with a high ISO sensitivity setting can increase digital noise in the image. If digital noise becomes a problem, try changing the ISO sensitivity setting to a lower value.
A recorded image was not saved.	1) Camera power may have been turned off before the save operation was complete, which will result in the image not being saved. If the battery indicator shows  , charge the battery as soon as possible (page 19). 2) You may have removed the memory card from the camera before the save operation was complete, which will result in the image not being saved. Do not remove the memory card before the save operation is complete.
Though available lighting is bright, the faces of people in the image are dark.	Not enough light is reaching the subjects. Adjust "Brightness" to the + side (page 67).
Night shots come out bad.	Use the "HS Night Scene" BEST SHOT scene (page 55) when shooting at night.
Subjects are too dark when shooting images in a seashore or ski area.	Sunlight reflected by water, sand, or snow, can cause underexposure of images. Adjust "Brightness" to the + side (page 67).

Problem	Possible Cause and Recommended Action
The image is out of focus during movie recording.	1) Focusing may not be possible because the subject is outside the focus range. Shoot within the allowable range. 2) The lens may be dirty. Clean the lens (page 127). 3) During High Speed Movie recording, focus is fixed at the position where it was when recording started. To focus an image, half-press the shutter button for Auto Focus before you touch "Ⓜ" (Movie) to start recording.
I can't change the settings of menu items. Menu items for some settings are not displayed on the menu.	Some menu items may not be available, depending on the recording mode in use. While Premium Auto Pro is in use, only the menu items whose settings can be configured will be displayed on the menus.
Playback	
The color of the playback image is different from what appears on the monitor screen when shooting.	Sunlight or light from another source may be shining directly into the lens when you are shooting. Position the camera so sunlight does not shine directly into the lens.
Images are not displayed.	This camera cannot display non-DCF images recorded onto a memory card using another digital camera.
Images cannot be rotated.	Note that you cannot edit the following types of snapshots. <ul style="list-style-type: none"> • Snapshots recorded with another camera • Extracted subjects
File Deletion	
A file cannot be deleted.	The file may be protected. Unprotect the file (page 84).

Problem	Possible Cause and Recommended Action
Wireless Connection	
I can't establish a wireless connection. The wireless connection is broken.	<ol style="list-style-type: none"> 1)The camera cannot connect with a smartphone if they are too far apart from each other. 2)The smartphone may be connected with another wireless device. Check the smartphone's Wi-Fi settings and confirm that the camera is selected for wireless connection (page 92). 3)Connection may have been lost due to interference caused by a nearby microwave oven, cordless phone, or other wireless device. Move the camera away from the device causing the problem.
Other	
The wrong date and time are displayed, or the wrong date and time are being stored along with image data.	The date and time setting is off. Set the correct date and time (page 115).
The messages on the display are in the wrong language.	The wrong display language is selected. Change the display language setting (page 116).
Images cannot be transferred over a USB connection.	<ol style="list-style-type: none"> 1)The USB cable may not be connected securely. Check all connections. 2)If the camera is not turned on, turn it on. 3)Your computer may not be able to recognize the camera if you connect via a USB hub. Always connect directly to the computer's USB port.
Language selection screen appears when the camera is turned on.	<ol style="list-style-type: none"> 1)You did not configure initial settings after purchasing the camera or the camera may have been left with a dead battery. Check the camera setup (pages 26, 115). 2)There may be a problem with the camera's memory data. If this is the case, perform the reset operation to initialize the camera's setup (page 117). After that, configure each setting. If the language selection screen does not re-appear when you turn the camera on, it means that the camera's memory management data has been restored. If the same message appears after you turn power back on, contact your retailer or a CASIO authorized service center.
There are various indicators and values on the monitor screen.	The monitor screen shows indicators and other information about shooting conditions and the image you are recording. You can disable display of indicators and values by selecting "Off" for "Info" on the Setup menu.

Problem	Possible Cause and Recommended Action
The time and date settings configured the first time after purchasing the camera are reset to their factory defaults when I remove the camera's battery.	Load the camera's battery and reconfigure the time and date settings (page 26). Do not remove the battery from the camera for at least 24 hours after configuring time and date settings. After that, the settings will not be reset if you remove the battery. <ul style="list-style-type: none"> If the time and date are reset to their factory default settings when you remove the battery after it has been loaded for more than 24 hours, it could mean that the camera's setting memory is defective. Contact your retailer or a CASIO authorized service center.
Buttons are not responsive right after the power has been turned on.	With large capacity memory cards there is a delay after the power has been turned on before the buttons become responsive.

Display Messages

Battery is low.	Battery power is low.
Card ERROR	<p>There is something wrong with the memory card. Turn off the camera, remove the memory card and then reload it into the camera. If this message re-appears when you turn the camera back on, format the memory card (page 117).</p> <p> IMPORTANT!</p> <ul style="list-style-type: none"> Formatting a memory card deletes all its files. Before formatting, try transferring recoverable files to a computer or some other storage device.
Communication stopped.	This message appears when the wireless LAN connection is broken for some reason during data communication between the camera and smartphone.
File could not be saved because battery is low.	Battery power is low, so an image file could not be saved.
Folder cannot be created.	You are trying to record a file while there are already 9999 files stored in the 999th folder. If you want to record more, delete files you no longer need (page 36).
LENS ERROR	This message appears and the camera turns off whenever lens performs some unexpected operation. If the same message appears after you turn power back on, contact a CASIO authorized service center or your original retailer.
Memory Full	Memory is full with images you recorded and/or files saved by editing operations. Delete files you no longer need (page 36).

Overheating. Power will turn off.	The camera's protection function may have activated because camera temperature is too high. Turn off the camera and wait until it cools down before trying to use it again.
Record Error	Image compression could not be performed for some reason during image data storage. Shoot the image again.
There are no files.	There are no files in built-in memory or on the memory card.
This card is not formatted.	The memory card loaded in the camera is not formatted. Format the memory card (page 117).
This function cannot be used.	This message will appear part way through an operation when you attempt to use a function that is not allowed in combination with another function.

Number of Snapshots/Movie Recording Time

Snapshot

Image Size (Pixels)	Approximate File Size	Built-in Memory* ¹ Recording Capacity	microSD Memory Card* ² Recording Capacity
12M (4000×3000)	4.13 MB	7	2286
3M (2048×1536)	1.25 MB	21	6533
8M (2976×2976)* ³	2.97 MB	9	3048
2M (1536×1536)* ³	0.99 MB	26	8184

Movies

Image Size / Pixels (Audio)	Approximate Data Rate (Frame Rate)	Maximum File Size	Built-in Memory* ¹ Recording Capacity	Maximum Recording Time with microSD Memory Card* ²	File Size of 1-minute Movie	Continuous Recording Time per Movie* ⁴
Full HD 1920×1080 (Monaural)	14.2 Megabits/ second (30 frames/ second)	4 GB or 29 minutes	26 seconds * ⁵	2 hours 14 minutes 55 seconds	106.5 MB	29 minutes
HD 1280×720 (Monaural)	10.9 Megabits/ second (30 frames/ second)		34 seconds	2 hours 56 minutes 25 seconds	81.8 MB	29 minutes
HS240 512×384 (No audio)	40.0 Megabits/ second (240 frames/ second)		9 seconds * ⁶	48 minutes 5 seconds * ⁶	300.0 MB * ⁶	12 minutes 58 seconds * ⁶

*1 Built-in memory capacity after formatting (Approx. 49.9MB)

*2 When using a 16GB microSDHC memory card (SanDisk Corporation). Number of image and recording time values depend on the memory card you are using.

*3 Values when shooting a square image size.

*4 The allowable recording time will be shorter if the capacity of the microSD memory card you are using is smaller than the maximum size of one file.

*5 The data transfer rate of built-in memory is not sufficient for Full HD movies. Whenever possible use an Ultra High-Speed Type memory card (pages 28, 52).

*6 Recordable time when the entire movie is recorded at 30 fps. Recording time is shorter if the 30 fps frame rate is switched to 240 fps during recording.

- Snapshot and movie recording capacity values are approximate and intended for reference only. Actual capacity depends on image contents.
- File size and data rate values are approximate and intended for reference only. Actual values depend on the type of image being shot.
- When using a memory card with a different capacity, calculate the number of images as a percentage of 16GB.
- The time it takes to play back a high speed movie will be different from the time it takes to record it. If you record a high speed movie for 10 seconds, for example, it will take 80 seconds to play it back.
- Each movie can be up to 29 minutes long. Movie recording stops automatically after 29 minutes of recording.

Specifications

File Format	Snapshots: JPEG (Exif Version 2.3; DCF 2.0 standard) Movies: MOV format, H.264/AVC standard, IMA-ADPCM (monaural)
Recording Media	Built-in Memory (Image Storage Area: 49.9MB*) microSD/microSDHC/microSDXC * Built-in memory capacity after formatting
Recorded Image Sizes	Snapshots: 12M (4000×3000), 3M (2048×1536) 8M (2976×2976)*, 2M (1536×1536)* * Values when shooting a square image size. Movies: Full HD (1920×1080 30 fps), HD (1280×720 30 fps), HS240 (512×384 240 fps)
Effective Pixels	11.1 Megapixels
Imaging Element	Size: 1/1.7-inch square pixel high-speed CMOS Total Pixels: 12.76 Megapixels
Lens/Focal Distance	F2.8 f = 4.58 mm (equivalent to 21 mm in 35 mm format)
Zoom	Up to 4.0X when SR zoom and Digital zoom are used in combination Up to 7.8X when SR Zoom, HD Zoom and Digital zoom are used in combination (3M size)
Focusing	Contrast Detection Auto Focus • Focus Modes: Auto Focus, Macro Focus, Pan Focus, Infinity • AF Area: Spot * Intelligent AF area used when Premium Auto Pro is selected.
Approximate Focus Range (Snapshot) (From Lens Surface)	Auto Focus: 8 cm to ∞ (3.1" to ∞) Macro Focus: 8 cm to 50 cm (3.1" to 19.7") Infinity: ∞ Pan Focus : 1 m to ∞ (3.3' to ∞)
Metering	Multi-pattern
Exposure Control	Program AE
Exposure Compensation	-2.0 EV to +2.0 EV (in 1/3EV steps)
Shutter	CMOS electronic shutter
Shutter Speed	Snapshot (Auto): 1/20 to 1/16000 second Snapshot (Premium Auto Pro): 1 to 1/16000 second
Aperture Value	F2.8

White Balance	Auto, Daylight, Overcast, Shade, Daywhite Fluorescent, Daylight Fluorescent, Tungsten, Manual WB
ISO Sensitivity (Standard Output Sensitivity)	Snapshots: Auto, ISO 80, ISO 100, ISO 200, ISO 400, ISO 800, ISO 1600, ISO 3200 Movies: Auto
LED Light	Auto, On, Off
Communication function	Bluetooth: • Communication standard: Bluetooth® Smart Wi-Fi: • Standard: IEEE 802.11b/g/n • Operation frequency range: 1 to 11ch • Encryption: WPA2
Monitor Screen	3.0-inch TFT color LCD 921,600 dots Capacitive type touch panel
External connection terminal	Micro USB port (Hi-Speed USB compliance, USB charging)
Microphones	Monaural
Speaker	Monaural
Power Requirements	Rechargeable lithium ion battery (NP-150) ×1

Approximate Battery Life

All of the values provided below represent the approximate amount of time under normal temperature (23°C (73°F)) before the camera turns off. These values are not guaranteed. Low temperatures shorten battery life.

Number of snapshots (Operating Time)*¹	220 shots
Actual movie recording time (Full HD movie)*¹	50 minutes
Approximate continuous movie recording time (Full HD Movie)*²	1 hour 10 minutes
Approximate continuous movie recording time (High speed movie HS240)*²	1 hour 20 minutes
Continuous Playback (Snapshots)*³	4 hours

- Temperature: 23°C (73°F)
- Battery: NP-150 (Rated Capacity: 950 mAh)
- Recording Medium: 16GB microSDHC memory card (SanDisk Corporation UHS-I series)

*¹ In accordance with CIPA (Camera and Imaging Products Association) standards

*² In accordance with CASIO standards

*³ One-image scroll approximately every 10 seconds

- The above values are based a new battery, starting from a full charge. Repeated charging shortens battery life.
- The above values are for reference only. They do not guarantee that the specified battery life will be attained under actual operating conditions.
- Frequency of Auto Focus and High Speed CS usage, configured settings, the amount of time the camera is left turned on, and ambient temperature in the area where the camera is used all greatly affect recording time and number of shots values.

Power Consumption	3.7 V DC, Approximately 4.3 W
Dimensions	128.5 (W) × 60.9 (H) × 16.3 (D) mm (5.06" (W) × 2.4" (H) × 0.64" (D))
Weight	Approximately 149 g (5.3 oz) (including battery and memory card*) Approximately 128 g (4.5 oz) (excluding battery and memory card) * 16GB microSDHC memory card (SanDisk Corporation)

■ Rechargeable lithium ion battery (NP-150)

Rated Voltage	3.7 V
Rated Capacitance	950 mAh
Operating Temperature Requirements	0 to 40°C (32 to 104°F)
Dimensions	34.2 (W) × 39.8 (H) × 6.9 (D) mm (1.35" (W) × 1.57" (H) × 0.27" (D)) (excluding projections)
Weight	Approximately 20 g (0.7 oz)

■ USB-AC adaptor (AD-C53U)

Input	100 to 240 V AC, 50/60 Hz, 100 mA
Output	5.0 V DC, 650 mA
Operating Temperature Requirements	5 to 35°C (41 to 95°F)
Dimensions	53 (W) × 21 (H) × 45 (D) mm (2.1" (W) × 0.83" (H) × 1.8" (D)) (excluding projections)
Weight	Approximately 37 g (1.3 oz)

- Power cord precautions for use in Singapore
The power cord set is not supplied. The power cord used must comply with relevant national and/or international standards.

CASIO®

CASIO COMPUTER CO., LTD.
6-2, Hon-machi 1-chome
Shibuya-ku, Tokyo 151-8543, Japan