

# CDP-S150

EN

## USER'S GUIDE



Preparing a Power Supply



Turning Power On or Off



Connecting a Pedal



Using Headphones




Selecting a Tone



Splitting the Keyboard for  
Duet Play



Changing the Pitch in  
Semitone Steps (Transpose)

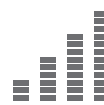

Fine Tuning a Pitch (Tuning)



Listening to Demo Play



Using Effects



Linking with a Smart Device  
(APP Function)

# Contents

## Overview and Setup **EN-2**

General Guide . . . . .	EN-2
Preparing a Power Supply . . . . .	EN-3
Turning Power On or Off . . . . .	EN-5
Returning the Digital Piano to Its Factory Default Settings . . . . .	EN-6
Connecting a Pedal . . . . .	EN-6
Using Headphones . . . . .	EN-7

## Digital Piano Operation **EN-8**

Listening to Demo Play . . . . .	EN-8
Demo Song List . . . . .	EN-8
Selecting a Tone . . . . .	EN-8
Using Effects . . . . .	EN-10
Using the Metronome . . . . .	EN-11
Splitting the Keyboard for Duet Play . . . . .	EN-12
Recording and Play Back . . . . .	EN-14
Linking with a Smart Device (APP Function) . . . . .	EN-16

## Configuring Settings **EN-16**

Changing the Keyboard Touch Response . . . . .	EN-16
Changing the Pitch in Semitone Steps (Transpose) . . . . .	EN-17
Fine Tuning a Pitch (Tuning) . . . . .	EN-18
Selecting a Scale . . . . .	EN-19
Changing the Beep Setting . . . . .	EN-20
Configuring MIDI Settings . . . . .	EN-21

## Connecting External Devices **EN-22**

Connecting to Audio Equipment . . . . .	EN-22
Connecting a Computer . . . . .	EN-23

## Reference **EN-24**

Troubleshooting . . . . .	EN-24
Product Specifications . . . . .	EN-26
Tone List . . . . .	EN-27
Keyboard Function List . . . . .	EN-28

## MIDI Implementation Chart

### Included and Optional Accessories

Use only accessories that are specified for use with this Digital Piano.

Use of unauthorized accessories creates the risk of fire, electric shock, and personal injury.

#### **NOTE**


- You can get information about accessories that are sold separately for this product from the CASIO catalog available from your retailer, and from the CASIO website at the URL or QR code below.  
<https://support.casio.com/global/en/emi/manual/CDP-S150/>





- Any reproduction of the contents of this manual, either in part or its entirety, is prohibited. Except for your own, personal use, any other use of the contents of this manual without the consent of CASIO is prohibited under copyright laws.
- IN NO EVENT SHALL CASIO BE LIABLE FOR ANY DAMAGES WHATSOEVER (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF PROFITS, BUSINESS INTERRUPTION, LOSS OF INFORMATION) ARISING OUT OF THE USE OF OR INABILITY TO USE THIS MANUAL OR PRODUCT, EVEN IF CASIO HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.
- The contents of this manual are subject to change without notice.
- The actual appearance of the product may be different from that shown in the illustrations in this User's Guide.
- Company and product names used in this manual may be registered trademarks of others.

# Overview and Setup
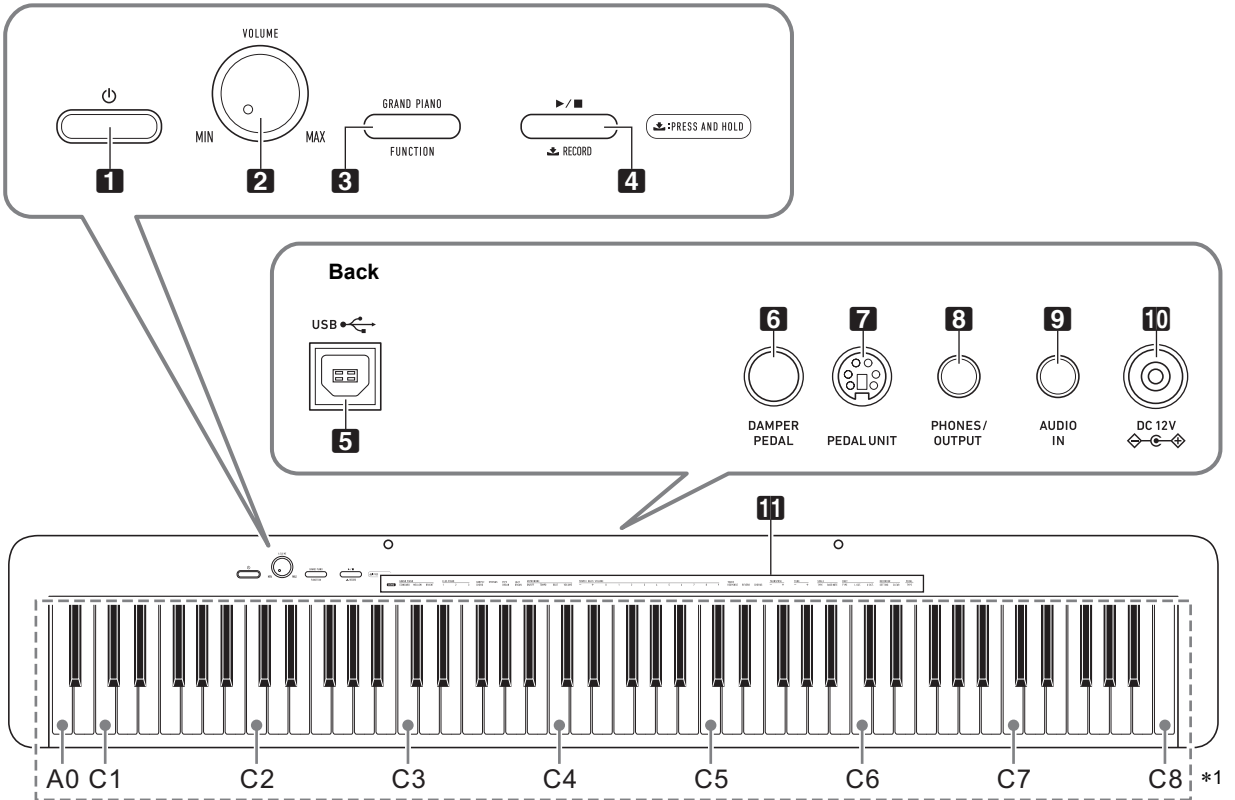
## General Guide



• Some of the button names shown here include the  mark. This indicates that you need to long-press the button to perform its operation.

**1**  (Power) button

**2** **VOLUME** knob

**3** **GRAND PIANO, FUNCTION** button

**4** ,  **RECORD** button

**5** **USB** port

**6** **DAMPER PEDAL** jack

**7** **PEDAL UNIT** jack

**8** **PHONES/OUTPUT** jack


**9** **AUDIO IN** jack

**10** **DC 12V** terminal

**11** Functions assigned to keys\*2


### \*1 Keyboard note names and pitches

The keyboard note names and pitches used in this manual follow the international standard. Middle C is C4, the lowest C is C1, and the highest C is C8. The illustration below (C4 through C5) shows keyboard key note names.

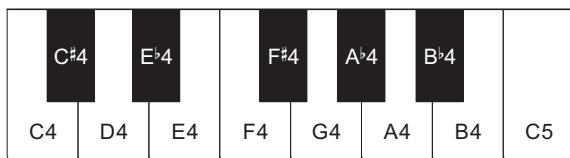

### \*2 Functions assigned to keys


While holding down the **FUNCTION** button, you can use these keys to change settings, such as the currently selected tone, etc. Most of the functions that can be changed using keyboard keys are marked above the keyboard. For example, tone names assigned to the TONE setting keys (C3 to A3) are marked above the keys.

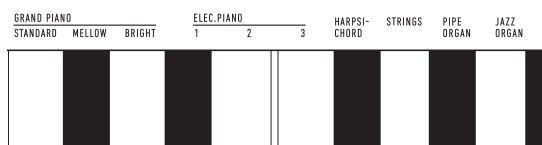

### NOTE

- Note that some assigned functions are not marked above the keys. For information about all of the functions that are assigned to keyboard keys, refer to the "Keyboard Function List" (page EN-28).

### ■ Preparing the Music Stand

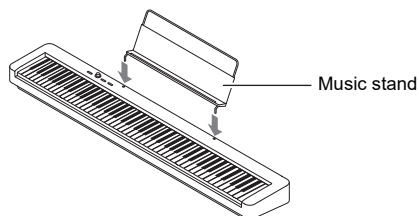

## Preparing a Power Supply

Your Digital Piano uses an AC adaptor for power.


### NOTE

- Though this Digital Piano supports battery operation, use of an AC adaptor is generally recommended.

### ■ Using the AC Adaptor

Make sure that you use only the AC adaptor specified for this Digital Piano. Use of a different type of AC adaptor can cause malfunction.

**Specified AC Adaptor: AD-A12150LW**  
(JEITA Standard plug)

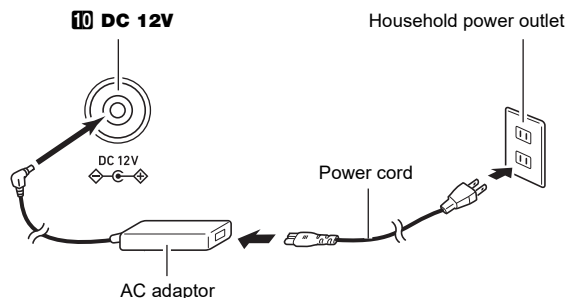

### IMPORTANT!

- Never connect the AC adaptor (JEITA Standard, with unified polarity plug) that comes with this Digital Piano to any other device besides this Digital Piano. Doing so creates the risk of malfunction.
- Be sure to turn off Digital Piano power before connecting or disconnecting the AC adaptor.
- The AC adaptor will become warm to the touch after very long use. This is normal and does not indicate malfunction.

- **Note the important precautions below to avoid damage to the power cord.**

**During Use**

- Never pull on the cord with excessive force.
- Never repeatedly pull on the cord.
- Never twist the cord at the base of the plug or connector.

**During Movement**

- Before moving the Digital Piano, be sure to unplug the AC adaptor from the power outlet.

**During Storage**


- Loop and bundle the power cord, but never wind it around the AC adaptor.
- **Never insert metal, pencils, or any other objects into the product's DC12V terminal. Doing so creates the risk of accident.**
- **Do not try to use the power cord that comes with the product with another device.**
- **Plug the AC adaptor into a power outlet that is close to the Digital Piano. This lets you immediately unplug from the power outlet should any problem occur.**
- **The AC adaptor is intended for indoor use only. Do not leave it in a location where it can become wet. Also, do not place a vase or any other container of liquid on the AC adaptor.**
- **Make sure that the AC adaptor does not become covered with a newspaper, table cloth, curtain, or any other type of fabric.**
- **If you do not plan to use the Digital Piano for a long time, unplug the AC adaptor from the power outlet.**
- **The AC adaptor cannot be repaired. If your AC adaptor malfunctions or becomes damaged, you need to purchase a new one.**
- **AC Adaptor Usage Environment**
  - Temperature: 0 to 40°C
  - Humidity: 10% to 90%RH
- **Output Polarity:** ⚡—C—⚡

■ **Using Batteries**

**! IMPORTANT!**

- **Be sure to turn off power before loading batteries.**
- **It is up to you to prepare six commercially available alkaline batteries.**
- **Note the precautions below while the Digital Piano is turned upside down to load batteries.**
  - **Take care to avoid injury due to pinching your fingers under the Digital Piano.**
  - **Do not allow the Digital Piano to tip over or otherwise be subjected to strong impact. Impact can damage the volume knob and keyboard keys.**


- 1. Open the battery cover on the bottom of the Digital Piano.**

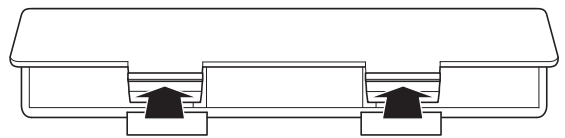


- 2. Load six AA-size batteries into the battery compartment.**

Make sure the positive ⊕ and negative ⊖ ends of the batteries are facing as marked on the Digital Piano.

- 3. Insert the tabs of the battery cover into the holes along the side of the battery compartment, and close the cover.**

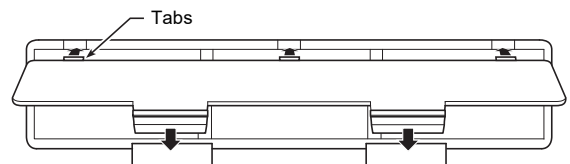


## ■ Low Battery Indication


Low batteries are indicated by the **1**  (Power) button lamp flashing. When this happens, replace batteries.

## ! IMPORTANT!


- Using the Digital Piano while batteries are very low can cause it to turn off suddenly. This can cause data stored in Digital Piano memory to be corrupted or lost.

## Turning Power On or Off

1. Press the **1**  (Power) button to turn on Digital Piano power.

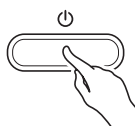


- The power lamp lights and the Digital Piano powers up. The power up operation takes a few seconds.
- Use **2** **VOLUME** to adjust volume.

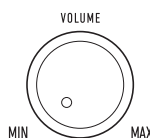

2. To turn off the Digital Piano, hold down the **1**  (Power) button until the power lamp goes out.

## NOTE

- Pressing the **1**  (Power) button to turn off power actually puts the Digital Piano into a standby state. Minute amounts of current continue to flow within the Digital Piano in the standby state. If you do not plan to use the Digital Piano for a long time or if there is a lightning storm in your area, be sure to unplug the AC adaptor from the power outlet.
- Turning off power causes the Digital Piano settings to return to their initial defaults. The tuning setting (page [EN-19](#)) and recorded data (page [EN-14](#)), however, is retained.


## Auto Power Off

This Digital Piano is designed to turn off automatically to avoid wasting power after no operation is performed for a preset amount of time. The Auto Power Off trigger time is about four hours when power is being supplied by the AC adaptor, or six minutes under battery power.

- You can use the procedure below to enable or disable Auto Power Off.

### ■ To enable or disable Auto Power Off

1. While holding down **3** **FUNCTION**, press the **B6** (Auto Power Off) keyboard key.

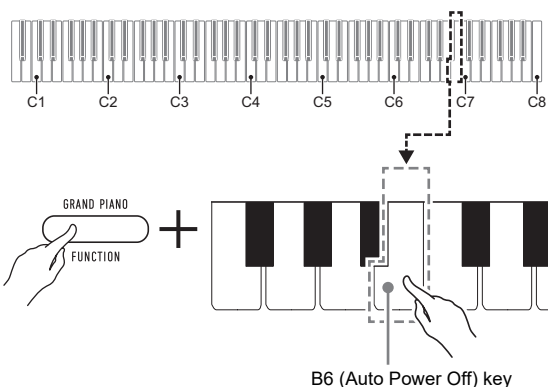


- Each press of the B6 keyboard key causes a short beep to sound. A low beep sounds when Auto Power Off is disabled, and a high beep sounds when it is enabled.

2. After the setting is the way you want, release **3** **FUNCTION**.

## Returning the Digital Piano to Its Factory Default Settings

Perform the procedure below when you want to return the Digital Piano's stored data and settings to their initial factory defaults.

- 1. While holding down **F** FUNCTION, perform steps (1) and (2) below.**

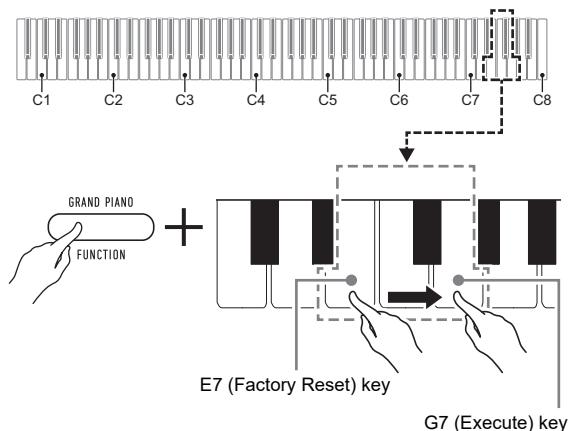

- (1) Press the E7 (Factory Reset) keyboard key.
  - This will cause a short beep to sound.
  - Performing step (2) below will initialize the Digital Piano and return it to its factory default settings. If you want to cancel initialization at this point, release **F** FUNCTION.
- (2) Press the G7 (Execute) keyboard key.
  - This causes a short and then long beep to sound, indicating that the operation is complete and that initialization has started.
  - The initialization operations takes some time to complete.
  - After settings are returned to their initial factory defaults, Digital Piano power will turn off automatically.

- 2. Release **F** FUNCTION.**


## Connecting a Pedal

### DAMPER PEDAL Jack

Connect the supplied pedal (SP-3) to the **6 DAMPER PEDAL** jack.

Back

**6 DAMPER PEDAL** jack (Standard jack (6.3mm))

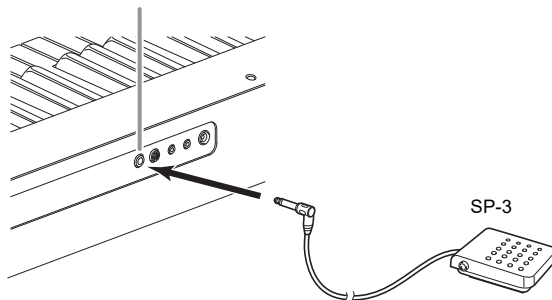

This pedal functions as a damper pedal under initial Digital Piano default settings. To change it to a different function, see ["To change the functions assigned to pedals"](#) (page EN-7).

### PEDAL UNIT Jack

You can connect the optionally available 3-Pedal Unit (SP-34) to the **7 PEDAL UNIT** jack on the back of the Digital Piano. You can then use the pedals for expression that is similar to that available on an acoustic piano.

#### ■ SP-34 Pedal Functions

##### ● Damper Pedal


Pressing the damper pedal while playing will cause the notes you play to reverberate. The SP-34 pedal also supports half-pedal operation, so pressing the pedal part way applies only a partial damper effect.

##### ● Soft Pedal

Pressing this pedal suppresses notes played on the keyboard after the pedal was pressed, and makes them sound softer.

##### ● Sostenuto Pedal

Only the notes of the keys that are depressed when this pedal is pressed are sustained, even if the keyboard keys are released, until the pedal is released.

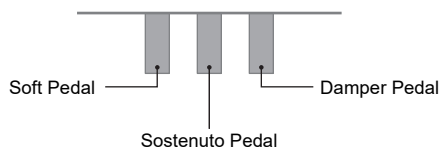


#### NOTE

- A separately available pedal unit can be used at the same time as the pedal that comes with the Digital Piano.

## ■ To change the functions assigned to pedals

### 1. While holding down **FUNCTION**, perform procedure (A) or (B) below.

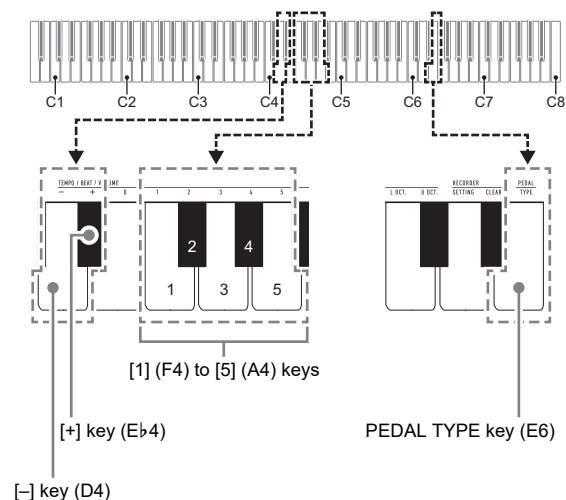

(A) Press the PEDAL TYPE (E6) keyboard key.

- Each press changes the setting. The setting that is selected by a key press will be indicated by the number of beeps that sound.

Beeps/Setting	Provided Pedal Function	Pedal Unit Functions
1	Damper	Left: Soft Center: Sostenuto Right: Damper
2	Metronome start/stop	
3	<b>FUNCTION</b> button operation	
4	Recording standby enter/exit	
5	<b>FUNCTION</b> button operation	Left: Recording standby enter/exit Center: Metronome start/stop Right: Damper

- You can also cycle back or forward through the above settings using the [-] (D4) and [+] (Eb4) keyboard keys.
- To return to the initial default setting (1), hold down the [-] (D4) and [+] (Eb4) keyboard keys at the same time until a long beep sounds.


(B) Press the PEDAL TYPE keyboard key (E6), and then press a keyboard key in the range of [1] (F4) through [5] (A4).

- This will cause a short and then long beep to sound, indicating that the operation is complete and that the pedal setting (1 to 5 as shown in the table above) corresponding to the key you pressed is now enabled.
- Pressing a keyboard key outside the range of setting keys will cause a high and then low beep to sound, indicating that the setting was not changed.

## Using Headphones

Using headphones cuts off output from the built-in speakers, which means you can practice playing even late at night without disturbing others.

- Be sure to turn down the volume level before connecting headphones.

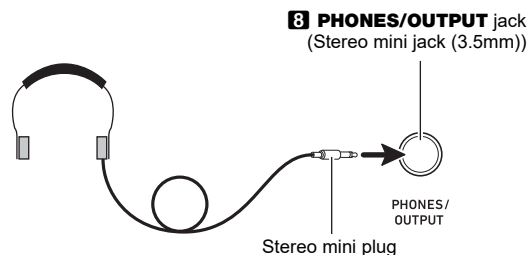

### NOTE

- Headphones do not come with the Digital Piano.
- Use commercially available headphones. See page [EN-1](#) for information about options.

### IMPORTANT!


- Do not listen to very high volume output over headphones for long period. Doing so creates the risk of hearing damage.
- If you are using headphones that require an adaptor plug, make sure you do not leave the adaptor plugged in when you unplug the headphones. If you do, nothing will sound from the speakers when you play.

## 2. Release **FUNCTION**.




# Digital Piano Operation

## Listening to Demo Play

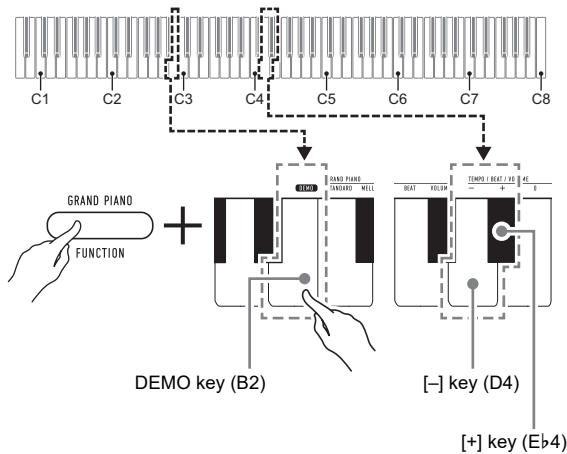

## Selecting a Tone

The Digital Piano has 10 built-in tones. In addition to using a single tone, you can also select two different tones and sound them together. Use the Tone keyboard keys (C3 through A3) to select a tone.

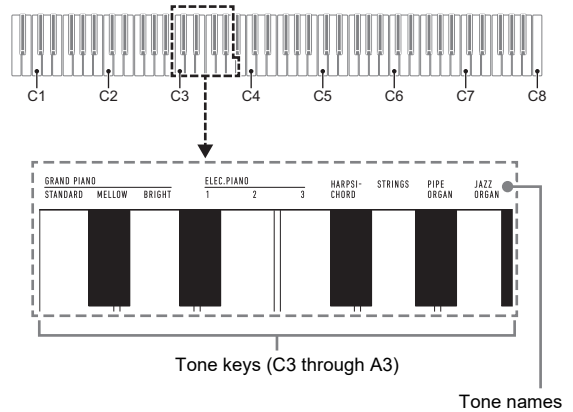

### NOTE

- For information about tone names, refer to the [“Tone List”](#) (page EN-27) and [“Keyboard Function List”](#) (page EN-28).

### 1. While holding down **3** FUNCTION, press the DEMO (B2) keyboard key.

This starts playback of the two demo songs.

- For demo song play, the Digital Piano setup is changed automatically to optimize it for the demo song being played.
- To toggle between demo songs during playback, hold down **3** FUNCTION and press the [-] (D4) or [+]  
(Eb4) keyboard key.
- Demo song play will repeat until you perform the operation in step 2 below.


### 2. To stop demo song play, press **3** FUNCTION or **4** ▶/■.

### NOTE

- If Auto Power Off is enabled, power will turn off automatically at the applicable trigger time after a period of non-use, even if demo play is being performed. You can disable Auto Power Off, if you want, by performing the operation under [“To enable or disable Auto Power Off”](#) (page EN-5).

## Selecting the GRAND PIANO STANDARD Tone

Press **3** GRAND PIANO. You can also select the GRAND PIANO STANDARD tone using the operation under [“To select a single tone”](#) (page EN-9).



### NOTE


- The GRAND PIANO STANDARD tone is the default tone when the Digital Piano is turned on.

## Demo Song List

Song No.	Song Name	Tone Name
1	Prélude [Suite bergamasque]	GRAND PIANO STANDARD
2	Original	ELEC.PIANO 1

## To select a single tone


1. While holding down **FUNCTION**, press one of the Tone keyboard keys (C3 through A3).
  - To select HARPSICHORD, for example, hold down **FUNCTION** and press the HARPSICHORD keyboard key (F#3). A short beep will sound to confirm the setting.

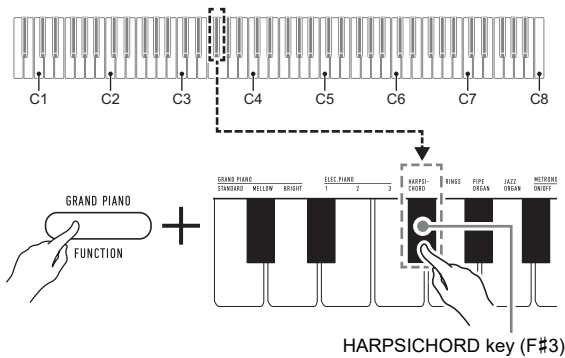

2. Release **FUNCTION**.

## To layer two tones

1. While holding down **FUNCTION**, press the Tone keyboard keys (C3 through A3) of the first tone and then the second tone you want to layer.
  - To layer HARPSICHORD and STRINGS, for example, hold down **FUNCTION** and press the HARPSICHORD keyboard key (F#3), and then the STRINGS key (G3).
  - Pressing the first keyboard key for the first tone will cause a short beep to sound, and press the key for the second tone will cause a short and then long beep to sound, indicating that the tones whose keys you pressed have been layered.

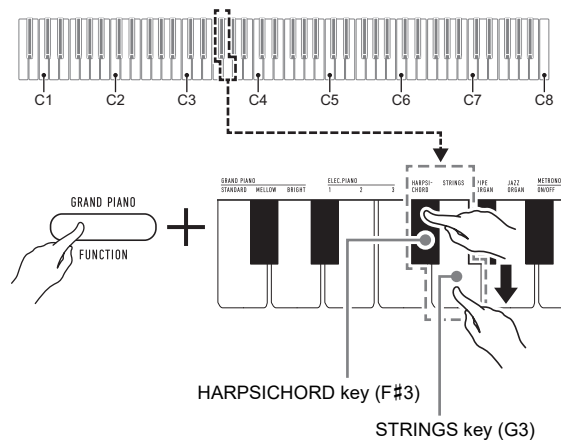

2. Release **FUNCTION**.


- Now pressing a single keyboard key will sound both the HARPSICHORD and STRINGS tones at the same time.

### NOTE

- To cancel tone layering, perform the procedure under “[To select a single tone](#)” (page EN-9). Or you could press **FUNCTION GRAND PIANO**, which changes the keyboard tone to GRAND PIANO STANDARD only.

## Using Effects

Your Digital Piano has a number of effects that change the reverberation of notes (reverb), and effects that make note deeper and more expansive (chorus).

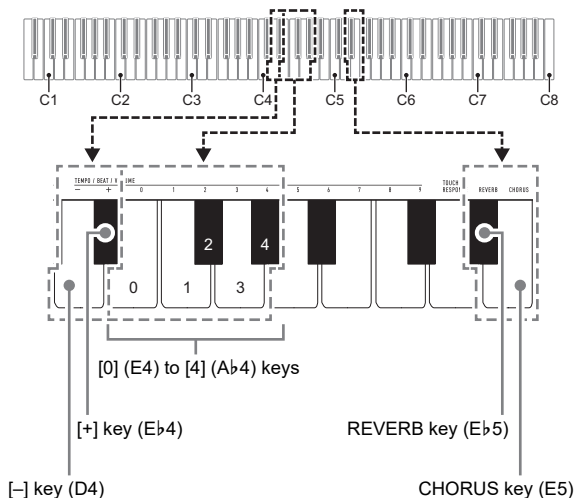

### ■ To add reverb to notes

#### 1. While holding down **3** FUNCTION button, perform procedure (A) or (B) below.

- (A) Press the REVERB keyboard key (E $\flat$ 5) to cycle through available settings.
- Each press changes the setting. Beeps will sound indicating the setting selected by a key press, as described below.
    - 1 time low: Reverb off.
    - 1 to 4 times high: Number of beeps indicates the reverb type selected. Four high beeps indicate that Virtual Hall\* is selected.
  - \* Acoustic effect that creates the feel of playing in a classic concert hall.
  - You can also change the setting by pressing the keyboard [+] key (E $\flat$ 4) or [-] key (D4).
  - To return to the initial default setting, hold down the keyboard [+] (E $\flat$ 4) and [-] (D4) keys at the same time until a long beep sounds.
- (B) Press the REVERB keyboard key (E $\flat$ 5), and then press a keyboard key within the range of [0] (E4: OFF) to [4] (A $\flat$ 4: Virtual Hall).
- This will cause a short and then long beep to sound, indicating that the operation is complete and that the reverb setting that corresponds to the key you pressed is now enabled.
  - Pressing a keyboard key outside the range of setting keys will cause a high and then low beep to sound, indicating that the setting was not changed.

#### 2. Release **3** FUNCTION.

### ■ To add the chorus effect to notes


#### 1. While holding down the **3** FUNCTION button, perform procedure (A) or (B) below.

- (A) Press the CHORUS keyboard key (E5) to cycle through available settings.
- Each press changes the setting. Beeps will sound indicating the setting selected by a key press, as described below.
    - 1 time low: Chorus off.
    - 1 to 4 times high: Number of beeps indicates the chorus type selected.
  - You can also change the setting by pressing the keyboard [+] key (E $\flat$ 4) or [-] key (D4).
  - To return to the initial default setting, hold down the keyboard [+] (E $\flat$ 4) and [-] (D4) keys at the same time until a long beep sounds.
- (B) Press the CHORUS keyboard key (E5), and then press a keyboard key within the range of [0] (E4: OFF) to [4] (A $\flat$ 4: Chorus 4).
- This will cause a short and then long beep to sound, indicating that the operation is complete and that the chorus setting that corresponds to the key you pressed is now enabled.
  - Pressing a keyboard key outside the range of setting keys will cause a high and then low beep to sound, indicating that the setting was not changed.

#### 2. Release **3** FUNCTION.

## Using the Metronome

The metronome sounds a regular tone to mark time. Use the metronome when you want to practice playing at a regular tempo.

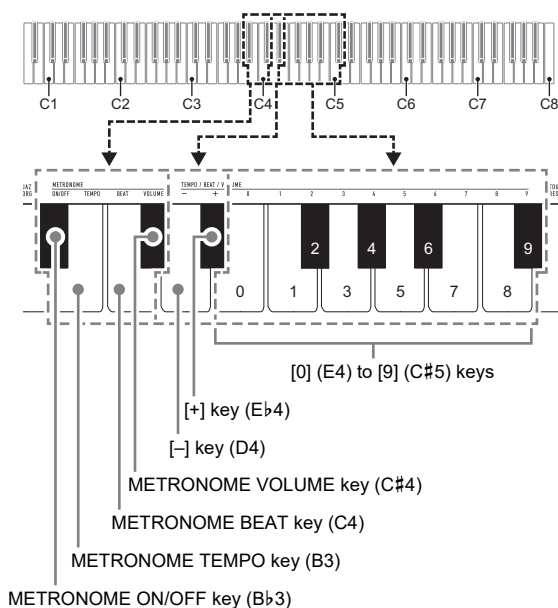

### ■ To change the metronome beat

#### 1. While holding down **3** FUNCTION, perform steps (1) and (2) below.

- (1) Press the METRONOME BEAT keyboard key (C4).
- (2) Press a keyboard key within the range of [0] (E4) to [9] (C#5) to specify the beat you want.

Setting	Description
0	All beats unaccented.
1	All beats accented.
2-9 (Default: 4)	Specifies beats per measure value from 2 to 9. An accent sounds on the first beat only.

- You can also raise or lower the beat by pressing the keyboard [+ ] key (E♭4) or [- ] key (D4). If a key operation would cause the setting to exceed its upper or lower maximum limit, a high and then low beep will sound to indicate that the setting cannot be changed further.
- To return to the initial default setting, hold down the keyboard [+ ] (E♭4) and [- ] (D4) keys at the same time until a long beep sounds.

#### 2. Release **3** FUNCTION.

### ■ To change the metronome tempo

#### **NOTE**

- You can specify a metronome tempo in the range of 20 to 255 beats per minute (bpm). Always input three digits. To specify a two-digit value, input zero (0) for the unused leading digit.

#### 1. While holding down **3** FUNCTION, perform steps (1) and (2) below.

- (1) Press the METRONOME TEMPO keyboard key (B3).
- (2) Use the [0] (E4) through [9] (C#5) keyboard keys to input the three-digit tempo value.  
For example, to specify a tempo of 80 bpm, press keyboard keys in the following sequence: [0] (E4) → [8] (C5) → [0] (E4). Inputting the third and final digit will cause a short and then long beep to sound, indicating that the value you input was applied.
  - You can also raise or lower the tempo by pressing the keyboard [+ ] key (E♭4) or [- ] key (D4).
  - To return to the initial default setting (120 bpm), hold down the keyboard [+ ] (E♭4) and [- ] (D4) keys at the same time until a long beep sounds.

#### 2. Release **3** FUNCTION.

#### **NOTE**

- Metronome settings (beat, tempo, volume) can be changed while the metronome is sounding or stopped.

### ■ To start or stop the metronome

#### 1. While holding down **3** FUNCTION, press the METRONOME ON/OFF keyboard key (B♭3).

■ To adjust the metronome volume

**NOTE**

- You can adjust the metronome value within the range of 0 (muted) and 42 (maximum). Always input two digits. To specify a one-digit value, input zero (0) for the unused leading digit.

**1. While holding down **F** FUNCTION, perform steps (1) and (2) below.**


- Press the METRONOME VOLUME keyboard key (C#4).
- Use the [0] (E4) through [9] (C#5) keyboard keys to input a two-digit volume value.  
For example, to specify a volume value of 8, press keyboard keys in the following sequence: [0] (E4) → [8] (C5). Inputting the second and final digit will cause a short and then long beep to sound, indicating that the value you input was applied.
  - You can also raise or lower the volume by pressing the keyboard [+] key (E♭4) or [-] key (D4).
  - To return to the initial default setting (36), hold down the keyboard [+] (E♭4) and [-] (D4) keys at the same time until a long beep sounds.

**2. Release **F** FUNCTION.**

## Splitting the Keyboard for Duet Play

You can split the keyboard in the center for duet play so the left and right sides have the same ranges. The Duet Mode is the perfect way to conduct lessons, with the teacher playing on the left side as the student playing the same song on the right side.


**Keyboard**

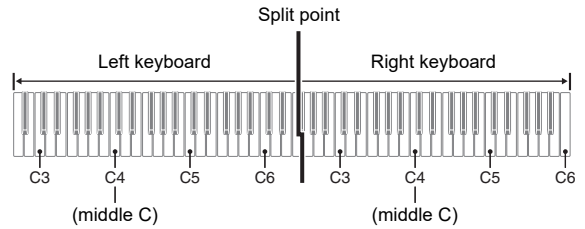

**Pedal Operation when Playing a Duet**

● **Optional SP-34 Pedal Unit**

The left pedal operates as the left side damper pedal, while the right pedal is the right side damper pedal.

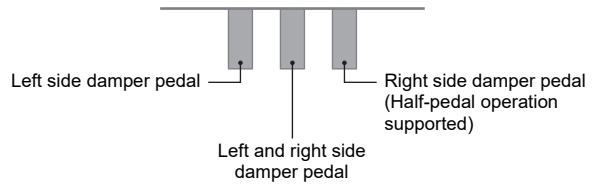

**NOTE**

- Only the damper pedal for the right side keyboard supports half-pedal operations.


● **Supplied SP-3 Pedal**

To use the SP-3 Pedal as the right keyboard damper pedal, connect it to the **F** DAMPER PEDAL jack.

- Half-pedal operation is not supported in this case.

■ To play a duet

1. While holding down **3 FUNCTION**, press the **DUET TYPE (B5)** keyboard key.

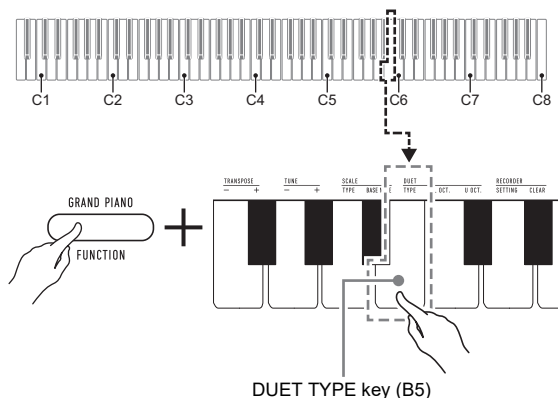

- Each press changes the setting. A beep will sound indicating the setting selected by a key press.

Beeps	Duet Mode	Description
1 low	Off (default)	Duet Mode off.
1 high	On	Duet Mode on.
2 high	Pan	You can configure the piano to output the left side keyboard notes from the left speaker and the right side keyboard notes from the right speaker while in the Duet Mode.

2. After confirming that the Duet Mode setting is the way you want, release **3 FUNCTION**.

3. Select a tone and perform the song you want.

**NOTE**

- Entering the Duet Mode causes the Digital Piano to be configured automatically with settings that are optimal for duet play.
- Some settings become fixed and cannot be changed while in the Duet Mode.

■ Changing the Octaves of the duet keyboards


You can change the ranges of the left and right keyboards in octave units from their initial default settings. This comes in handy, for example, if the initial default range is not enough when one person is playing the left hand part and another person is playing the right hand part.

1. While holding down the **3 FUNCTION** button, perform steps (1) and (2) below.

- (1) To change the register of the left keyboard, press the **DUET L OCT.** keyboard key (C6).
- (2) Within the range of the left keyboard, press the C key where you want middle C (C4) to be located.
  - This will cause a short and then long beep to sound, indicating that the operation is complete.
  - Pressing a keyboard key outside the applicable will cause two low beeps to sound, indicating that the setting was not changed.

**Example**

Pressing the leftmost C key of the keyboard will configure the range shown below.

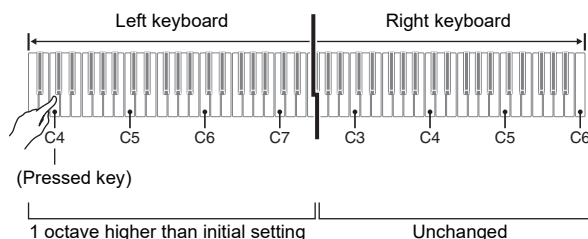

2. Release **3 FUNCTION**.

**NOTE**

- To change the register of the right keyboard, perform the same operation as in steps 1-(1) and 1-(2), above.
  - (1) Press the **DUET R OCT.** (C#6) keyboard key.
  - (2) Within the range of the right keyboard, press the C key where you want middle C (C4) to be located.

## Recording and Play Back

You can store the notes you play in Digital Piano memory for later playback.

### ● Memory Capacity

- You can record approximately 2,500 notes in Digital Piano memory.
- The **4 RECORD** button lamp will flash at high speed when memory runs low.
- Recording stops automatically if the number of notes in memory exceeds the maximum.

### ● Recorded Data

- Keyboard play
- Keyboard tone (including layered tone)
- Pedal operations
- Reverb and chorus settings
- Tempo setting
- Transpose setting
- Duet Mode setting (Off, On, Pan), duet keyboard registers

### NOTE

- Digital Piano settings cannot be changed while recording is in progress.

### ● Recording Data Storage


- Starting a new recording deletes any data that was previously recorded in memory.
- If power to the Digital Piano is cut off while recording is in progress, everything you recorded up to that point will be deleted. Take care so power is not turned off accidentally during recording operations.

### IMPORTANT!

- **CASIO COMPUTER CO., LTD. takes no responsibility for any damages, lost profits, or claims by third parties arising from the deletion of recorded data due to malfunction, repair, or for any other reason.**

### ■ To record keyboard play

1. Long-press **4 RECORD** until the button's LED starts to flash.



- The flashing **4 RECORD** button LED indicates that the Digital Piano is in record standby.
- To exit record standby, long-press **4 RECORD** again until the LED goes out.

2. To start recording, play something on the keyboard, press the pedal, or press **4 ▶/■**.

- During recording, the LED stops flashing and remains lit.

3. To finish recording, press **4 ▶/■**.

The LED will turn off after the recording save operation is complete (which may take a little time).

### ■ To play back a recorded performance

1. Press **4 ▶/■**.

This starts playback of what you recorded.

### NOTE

- During playback of a recorded song the **4 RECORD** button LED flashes at the tempo of the recording.

2. To stop playback, press **4 ▶/■** again.

- Playback will stop automatically when the end of the recording is reached.


■ To change the reverb and chorus settings of a recorded performance

1. Perform one of the operations below to select the reverb or chorus effect you want to apply to the recorded performance.

“To add reverb to notes” (page EN-10)

“To add the chorus effect to notes” (page EN-10)

2. While holding down the **3** FUNCTION button, perform steps (1) and (2) below.

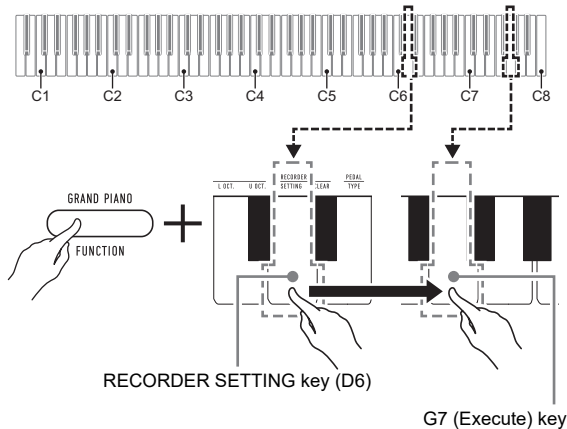


- (1) Press the RECORDER SETTING (D6) keyboard key.
  - This causes a short beep to sound.
  - Note that performing step (2) below will change the setting of the previously recorded data. If you want to cancel the setting change operation at this point, release **3** FUNCTION.
- (2) Press the G7 (Execute) keyboard key
  - This will cause a short and then long beep to sound, indicating that the clear operation is complete.

3. Release **3** FUNCTION.

■ To delete a recorded performance

1. While holding down the **3** FUNCTION button, perform steps (1) and (2) below.

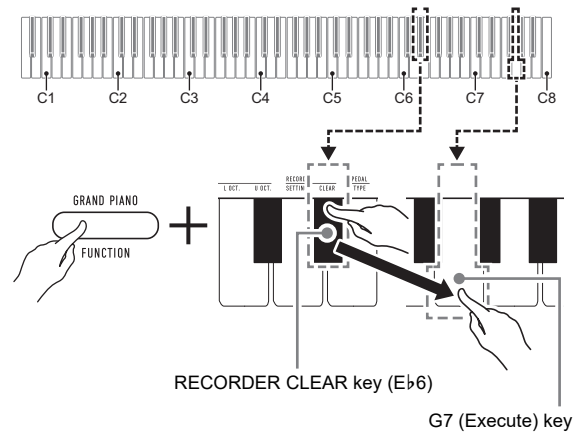

- (1) Press the RECORDER CLEAR (E♭6) keyboard key.
  - This causes a short beep to sound.
  - Note that performing step (2) below will delete the previously recorded data. If you want to cancel the delete operation at this point, release **3** FUNCTION.
- (2) Press the G7 (Execute) keyboard key
  - This will cause a short and then long beep to sound, indicating that the operation is complete.

2. Release **3** FUNCTION.



## Linking with a Smart Device (APP Function)

After you link the Digital Piano with a smartphone, tablet, or other smart device, you can control the Digital Piano with the linked smart device (Piano Remote Controller).

### ■ To download the smart device app

Download the Chordana Play for Piano app from the CASIO website and install it on the smart device.

<https://support.casio.com/global/en/emi/manual/CDP-S150/>




### ■ To link to a smart device

After installing the Chordana Play for Piano app on a smart device, use a commercially available USB cable to connect the smart device's USB port with the Digital Piano's USB port. After connecting the smart device to the Digital Piano, use the smart device app to perform operations. For details about operations, refer to the user documentation of the app.

## Configuring Settings

### Changing the Keyboard Touch Response

You can select from among four Touch Response settings, which determine how Digital Piano volume changes in accordance with how strongly keyboard keys are pressed.

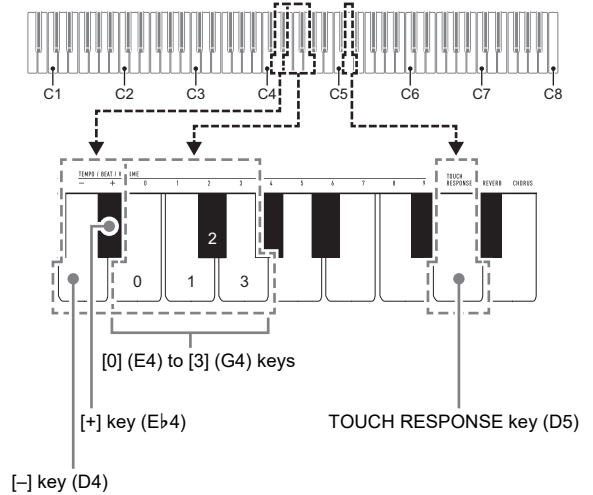

## ■ To change the Touch Response setting

### 1. While holding down **3** FUNCTION, perform procedure (A) or (B) below.

- (A) Press the TOUCH RESPONSE keyboard key (D5).
- Each press changes the setting. A beep will sound indicating the setting selected by a key press.


Beep	Setting	Description
Once low	Off	Touch Response is turned off. Sound volume is fixed, regardless of key press speed.
Once high	Light	Strong sound, even with light pressure
Twice high	Normal (Default)	Normal Touch Response
Three times high	Heavy	Normal sound, even with strong pressure

- You can also change the setting by pressing the keyboard [+] key (E♭4) or [-] key (D4).
  - To return to the initial default setting, hold down the keyboard [+] (E♭4) and [-] (D4) keys at the same time until a long beep sounds.
- (B) Press the TOUCH RESPONSE keyboard key (D5), and then press a keyboard key within the range of [0] (E4: OFF) to [9] (C#5: Heavy).
- This will cause a short and then long beep to sound, indicating that the operation is complete and that the touch response setting that corresponds to the key you pressed is now enabled.
  - Pressing a keyboard key outside the range of setting keys will cause a high and then low beep to sound, indicating that the setting was not changed.

### 2. Release **3** FUNCTION.

## Changing the Pitch in Semitone Steps (Transpose)

The transpose feature lets you raise or lower the overall pitch of the Digital Piano in semitone steps. You can use this feature to raise or lower the keyboard key and to play a piece in a key that is more comfortable for you, or to adjust to a key that better matches a vocalist, etc. You can change the transpose setting within the range of -12 semitones to 0 to +12 semitones.

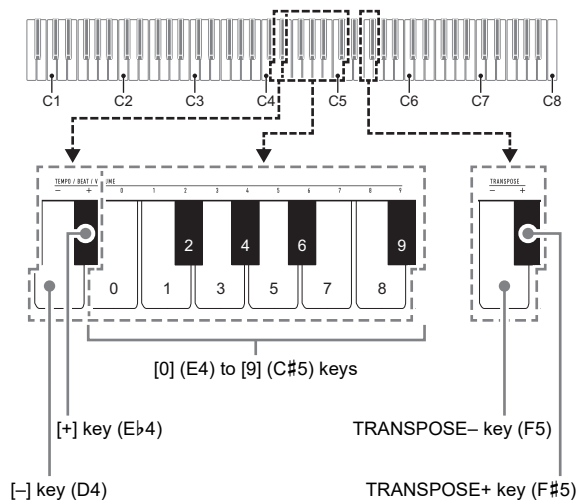

## ■ To change the transpose setting in semitone steps

### 1. While holding down **3** FUNCTION, press the TRANSPOSE- keyboard key (F5) to lower the pitch by one semitone or the TRANSPOSE+ keyboard key (F#5) to raise it by one semitone.

- Each press of the keyboard key causes a short high tone to sound. A low tone will sound when a key press causes the transpose setting to become zero (0).
- If a key operation would cause the setting to exceed its upper or lower maximum limit, a high and then low beep will sound to indicate that the setting cannot be changed further.
- You can also raise or lower the setting value by pressing the keyboard [+] key (E♭4) or [-] key (D4).
- To return to zero (0), hold down the keyboard TRANSPOSE- (F5) and TRANSPOSE+ (F#5) keys at the same time until a long beep sounds.

### 2. Release **3** FUNCTION.

■ To use a value to specify the transpose setting

**NOTE**

- While the setting value is within the range of 0 to +12 semitones, you can use the procedure below to directly input a desired setting value.


**1. While holding down **[F]** FUNCTION, perform steps (1) and (2) below.**

- (1) Press the TRANSPOSE– keyboard key (F5) or the TRANSPOSE+ keyboard key (F#5).
- (2) Use the [0] (E4) through [9] (C#5) keyboard keys to input a two-digit transpose value.  
For example, to specify a setting 8 semitones, press keyboard keys in the following sequence: [0] (E4) → [8] (C5). Inputting the second and final digit will cause a short and then long beep to sound, indicating that the value you input was applied.

**2. Release **[F]** FUNCTION.**

## Fine Tuning a Pitch (Tuning)

The tuning feature specifies the frequency of the A4 note. You can set a frequency within the range of 415.5 to 465.9 Hz. The initial default setting is 440.0 Hz. The setting you configure is retained even if you turn off the Digital Piano.

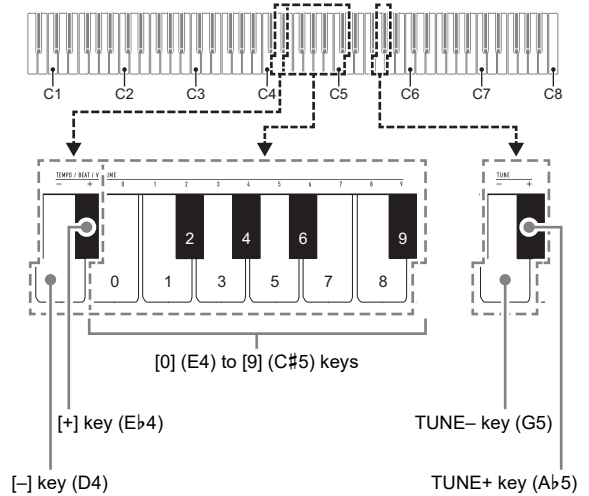

■ To change the tuning setting

1. While holding down **FUNCTION**, perform steps (1) through (3) below.

**NOTE**

- If a key operation during steps (1) through (3) would cause the setting to exceed its upper or lower maximum limit, a high and then low beep will sound to indicate that the setting cannot be changed further.


- (1) Press the TUNE– keyboard key (G5) or the TUNE+ keyboard key (Ab5).
  - Pressing the TUNE– key (G5) will lower the current pitch setting by 0.1 Hz, while pressing TUNE+ (Ab5) will raise it by 0.1 Hz.
  - If you just want to fine tune the current pitch setting, go directly to step (3) below.
- (2) To input a pitch value, use the [0] (E4) through [9] (C#5) keyboard keys to input an integer that specifies the frequency (Hz) of the A4 note.
  - For example, to specify a frequency of 442 Hz, press keyboard keys in the following sequence: [4] (Ab4) → [4] (Ab4) → [2] (F#4). Inputting the third and final digit will cause a short and then long beep to sound, indicating that the value you input was applied.
  - You can specify a value in the range of 416 through 465 Hz.
- (3) To fine tune by 0.1 Hz increments, press the TUNE– keyboard key (G5) to lower the pitch by 0.1 Hz or the TUNE+ keyboard key (Ab5) to raise the pitch by 0.1 Hz.
  - Each press of the keyboard key causes a beep to sound. The beep becomes higher whenever a key operation causes the setting value to become an integer.
  - You can specify a value in the range of 415.5 through 465.9 Hz.
  - To return to the initial default setting, hold down the keyboard TUNE– (G5) and TUNE+ (Ab5) keys at the same time until a long beep sounds.

2. Release **FUNCTION**.

Selecting a Scale

You can change the scale (tuning system) of the keyboard from standard equal temperament to another tuning that is more suitable for playing Indian music, Arabic music, classical pieces, etc.

- When you select any temperament other than “Equal”, you must also configure a base note setting.
- For details about temperament, refer to a book that covers music theory.

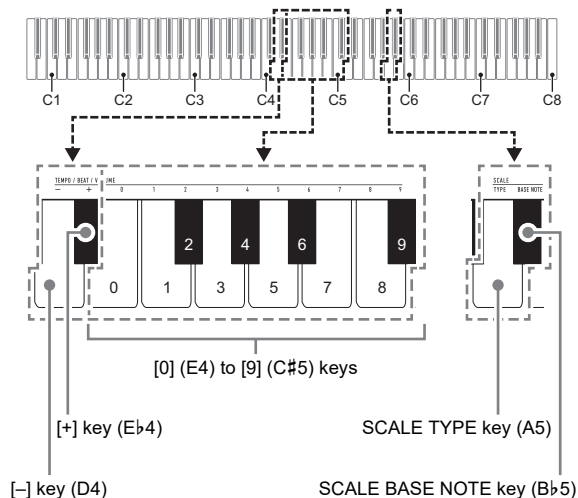

■ To select the temperament of keyboard play

1. While holding down the **FUNCTION** button, perform steps (1) and (2) below.

- (1) Press the SCALE TYPE (A5) keyboard key.
- (2) Use the [0] (E4) through [9] (C#5) keyboard keys to input a two-digit scale number.

No.	Scale Name
01	Equal
02	Pure Major
03	Pure Minor
04	Pythagorean
05	Kirnberger 3
06	Werckmeister
07	Mean-Tone
08	Rast
09	Bayati
10	Hijaz
11	Saba
12	Dashti
13	Chahargah
14	Segah
15	Gurjari Todi
16	Chandrakauns
17	Charukeshi

For example, to select the “Bayati” scale, press [0] (E4) and then [9] (C#5). Inputting the second and final digit will cause a short and then long beep to sound, indicating that the value you input was applied.

- You can also raise or lower the scale number using the [-] (D4) and [+] (E♭4) keyboard keys.
- To return to the initial default setting (equal temperament), hold down the keyboard [-] (D4) and [+] (E♭4) keys at the same time until a long beep sounds.

## 2. Release **3** FUNCTION.

### ■ To specify the base note of the scale

#### 1. While holding down the **3** FUNCTION button, perform steps (1) and (2) below.


- (1) Press the SCALE BASE NOTE (B♭5) keyboard key.
- (2) Play the keyboard key of the note you want to specify as the base note.
  - For example, to specify F as the base note, you would press keyboard key F5 (or F4 or F6).
  - Specifying a base note will cause a short and then long beep to sound, indicating that your setting was applied.

## 2. Release **3** FUNCTION.

## Changing the Beep Setting

You can use the **3** FUNCTION button operation below to toggle the beep tone between enabled and disabled.

#### 1. While holding down **3** FUNCTION, press the B7 (Beep) keyboard key.

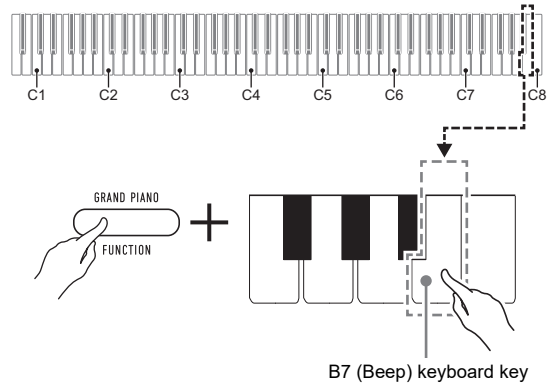

- Each press of the B7 keyboard key will cause a short beep to sound. A low beep sounds when the key operation disables the beep, while a high beep sounds when the key operation enables the beep.

#### 2. After the setting is the way you want, press **3** FUNCTION.


## Configuring MIDI Settings

### Keyboard Channel

This setting specifies a channel from 1 through 16 as the MIDI channel that can be used for sending data to an external device (Default: Ch 1).

### Local Control

When this setting is turned off, performance information (MIDI data) is sent from the Digital Piano, but no Digital Piano sound is output. This setting is for when you only want to send MIDI data to an external device (Default: On).

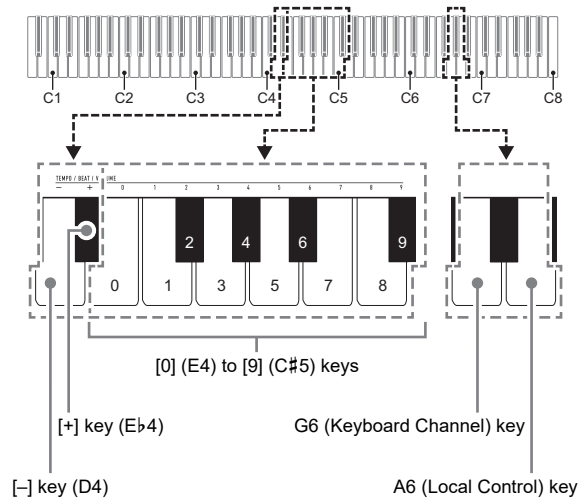

### ■ To toggle Local Control between on and off

1. While holding down **FUNCTION**, press the **A6 (Local Control)** keyboard key.
  - Each press of the A6 keyboard key will cause a short beep to sound. A low beep sounds when the key operation turns off Local Control, while a high beep sounds when the key operation turns on Local Control.
2. After the setting is the way you want, press **FUNCTION**.

### ■ To change the Keyboard Channel

1. While holding down **FUNCTION**, perform steps (1) and (2) below.
  - (1) Press the G6 (Keyboard Channel) keyboard key.
  - (2) Use the [0] (E4) through [9] (C#5) keyboard keys to input a two-digit keyboard channel number.
 

For example, to specify a keyboard channel 8, press keyboard keys in the following sequence: [0] (E4) → [8] (C5). Inputting the second and final digit will cause a short and then long beep to sound, indicating that the value you input was applied.

    - You can also raise or lower the channel number by pressing the keyboard [+] key (Eb4) or [-] key (D4).
    - To return to the initial default setting, hold down the keyboard [+] (Eb4) and [-] (D4) keys at the same time until a long beep sounds.
2. Release **FUNCTION**.

# Connecting External Devices

## Connecting to Audio Equipment

This Digital Piano can be connected to commercially available stereo, amplifier, or recording equipment, to a portable audio player or other equipment.

### ■ Outputting Keyboard Notes to Audio Equipment


Connection requires commercially available connecting cords, supplied by you.

- The connecting cords should have a stereo mini plug on one end and a plug that matches the configuration of the external device on the other end.

### ! IMPORTANT!

- **Turn off the external device when making connections. After connecting, turn down the Digital Piano and external device volume levels whenever turning power on or off.**
- **After connecting, turn on the Digital Piano and then the external device.**
- **If keyboard notes are distorted when they are sounded from external audio equipment, lower the Digital Piano's volume setting.**

Digital Piano **8** PHONES/OUTPUT jack (Stereo mini jack (3.5mm))

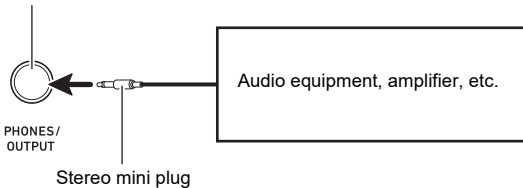

### ■ Playing an External Device from the Digital Piano


Connection requires commercially available connecting cords, supplied by you.

- The connecting cords should have a 3-pole stereo mini plug on one end and a plug that matches the configuration of the external device on the other end.
- When sounding audio on the Digital Piano that is input from an external device, use the external device to adjust the volume level. You cannot adjust the volume level on the Digital Piano.

### ! IMPORTANT!

- **Turn off the Digital Piano when making connections. After connecting, turn down the Digital Piano and external device volume levels whenever turning power on or off.**
- **After connecting, turn on the external device and then the Digital Piano.**
- **If external device notes that sound through the Digital Piano speakers are distorted, lower the external device's volume level setting.**

Digital Piano **9** AUDIO IN jack (Stereo mini jack (3.5mm))

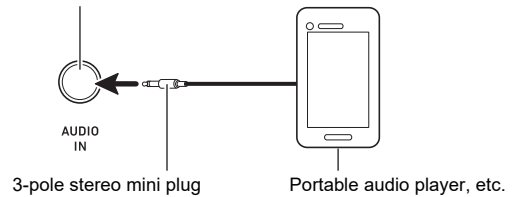

## Connecting a Computer

You can connect the Digital Piano to a computer and exchange MIDI data between them. You can send play data from the Digital Piano to music software running on your computer, or you can send MIDI data from your computer to the Digital Piano for playback.

### Minimum Computer System Requirements

The minimum computer system requirements for sending and receiving MIDI data are shown below. Check to make sure that your computer complies with these requirements before connecting the Digital Piano to it.

#### Operating System

Windows 7 \*1

Windows 8.1 \*2

Windows 10 \*3

macOS (OS X/Mac OS X) 10.7, 10.8, 10.9, 10.10, 10.11, 10.12, 10.13

\*1 Windows 7 (32-bit, 64-bit)

\*2 Windows 8.1 (32-bit, 64-bit)

\*3 Windows 10 (32-bit, 64-bit)

#### USB port

### IMPORTANT!

- **Never connect to a computer that does not conform to the above requirements. Doing so can cause problems with your computer.**

### NOTE

- For the latest news about supported operating systems, visit the website at the URL or QR code below.  
<https://support.casio.com/global/en/emi/manual/CDP-S150/>



### To connect the Digital Piano to your computer

### IMPORTANT!

- **Make sure you follow the steps of the procedure below exactly. Connecting incorrectly can make data send and receive impossible.**

1. **Turn off the Digital Piano and then start up your computer.**
  - Do not start up the music software on your computer yet!
2. **After starting up your computer, use a commercially available USB cable to connect it to the Digital Piano.**
  - Use a USB 2.0 or 1.1 A-B connector type USB cable.
3. **Turn on the Digital Piano.**
  - If this is the first time you are connecting the Digital Piano to your computer, the driver software required to send and receive data will be installed on your computer automatically.
4. **Start up commercially available music software on your computer.**
5. **Configure the music software settings to select “CASIO USB-MIDI” as the MIDI device.**
  - For information about how to select the MIDI device, see the user documentation that comes with the music software you are using.

### IMPORTANT!

- **Be sure to turn on the Digital Piano first before starting up your computer’s music software.**

### NOTE

- Once you are able to connect successfully, there is no problem with leaving the USB cable connected when you turn off or turn on your computer and/or Digital Piano.
- For detailed specifications and connections that apply to MIDI data send and receive by this Digital Piano, see the latest support information provided by the website at the URL or QR code below.  
<https://support.casio.com/global/en/emi/manual/CDP-S150/>



- For information about MIDI settings, see “Configuring MIDI Settings” (page EN-21).



## Troubleshooting

Symptom	Action
<b>Included Accessories</b>	
I can't find something that should be here.	Carefully check inside all of the packing materials.
<b>Power Requirements</b>	
Power will not turned on.	<ul style="list-style-type: none"> <li>• Check the AC adaptor or make sure that the batteries are facing correctly (page <a href="#">EN-3</a>).</li> <li>• Replace the batteries with new ones or switch over to AC adaptor power (page <a href="#">EN-3</a>).</li> </ul>
Power does not turn on when I press the <b>F1</b> ⏻ (Power) button.	Press <b>F1</b> ⏻ (Power) firmly and completely to turn on power.
The Digital Piano outputs a loud sound and then suddenly powers down.	Replace the batteries with new ones or switch over to AC adaptor power (page <a href="#">EN-3</a> ).
The Digital Piano suddenly turns off after some time when power is left on.	Auto Power off (page <a href="#">EN-5</a> ) may have been triggered. Press the <b>F1</b> ⏻ (Power) button to turn power back on.
<b>Sound</b>	
Nothing happens when I press any keyboard key.	<ul style="list-style-type: none"> <li>• Adjust the volume setting (page <a href="#">EN-5</a>).</li> <li>• Check if something is plugged into <b>B PHONES/OUTPUT</b> jack on the back of the Digital Piano.</li> <li>• Turn power off and then back on to initialize all Digital Piano settings (page <a href="#">EN-5</a>).</li> </ul>
The metronome does not sound.	<ul style="list-style-type: none"> <li>• Check and adjust the metronome volume setting (page <a href="#">EN-12</a>).</li> <li>• Turn power off and then back on to initialize all Digital Piano settings (page <a href="#">EN-5</a>).</li> </ul>
Notes keep sounding, without stopping.	<ul style="list-style-type: none"> <li>• Turn power off and then back on to initialize all Digital Piano settings (page <a href="#">EN-5</a>).</li> <li>• Replace the batteries with new ones or switch over to AC adaptor power (page <a href="#">EN-3</a>).</li> </ul>
Some notes are cut off while they are playing.	Notes are cut off whenever the number of notes being sounded exceeds the maximum polyphony value of 64 (32 for some tones). This does not indicate malfunction.
The volume or tone setting I made has changed.	<ul style="list-style-type: none"> <li>• Adjust the volume setting (page <a href="#">EN-5</a>).</li> <li>• Turn power off and then back on to initialize all Digital Piano settings (page <a href="#">EN-5</a>).</li> <li>• Replace the batteries with new ones or switch over to AC adaptor power (page <a href="#">EN-3</a>).</li> </ul>
Output volume does not change even though I change my keyboard touch.	<ul style="list-style-type: none"> <li>• Change the Touch Response setting (page <a href="#">EN-16</a>).</li> <li>• Turn power off and then back on to initialize all Digital Piano settings (page <a href="#">EN-5</a>).</li> </ul>
In certain keyboard ranges, the volume and tone quality sound are slightly different from those in other keyboard ranges.	This is due to system limitations. It does not indicate malfunction.
The pitch of the notes does not match other accompanying instruments or sounds strange when played along with other instruments.	<ul style="list-style-type: none"> <li>• Check and adjust the transpose (page <a href="#">EN-17</a>) and tuning settings (page <a href="#">EN-18</a>).</li> <li>• Turn power off and then back on to initialize all Digital Piano settings (page <a href="#">EN-5</a>).</li> </ul>
The reverb of notes seems to change suddenly.	<ul style="list-style-type: none"> <li>• Check and adjust the reverb setting (page <a href="#">EN-10</a>).</li> <li>• Turn power off and then back on to initialize all Digital Piano settings (page <a href="#">EN-5</a>).</li> </ul>

Symptom	Action
<b>Computer Connection</b>	
I can't exchange data between the Digital Piano and a computer.	<ul style="list-style-type: none"><li>• Check to make sure that the USB cable is connected to the Digital Piano and computer, and that the device is selected correctly with your computer's music software settings (page <a href="#">EN-23</a>).</li><li>• Turn off the Digital Piano and then exit the music software on your computer. Next, turn the Digital Piano back on and then restart the music software on your computer.</li></ul>

## Product Specifications

<b>Model</b>	CDP-S150BK
<b>Keyboard</b>	88-key piano keyboard, with Touch Response
<b>Maximum Polyphony</b>	64 notes
<b>Tones</b>	10, Layer
<b>Effects</b>	Reverb (4 types), Chorus (4 types)
<b>Metronome</b>	<ul style="list-style-type: none"> <li>• Beat bell: 0 (Off), 1 to 9 (beats)</li> <li>• Tempo Range: 20 to 255</li> </ul>
<b>Duet</b>	Adjustable tone range (-2 to +1 octaves)
<b>Demo Songs</b>	2
<b>Recorder</b>	<ul style="list-style-type: none"> <li>• Functions: Real-time recording, playback</li> <li>• Number of Song: 1</li> <li>• Capacity: Approximately 2,500 notes total</li> <li>• Recorded Data Protection: Built-in flash memory</li> </ul>
<b>Pedals</b>	Damper (Soft and sostenuto pedal operations enabled by the optional SP-34 Pedal Unit.)
<b>Other Functions</b>	<ul style="list-style-type: none"> <li>• Touch Response: 3 types, Off</li> <li>• Transpose: -12 to 0 to 12 semitones</li> <li>• Tuning: A4 = 415.5 Hz to 465.9 Hz (Initial Default: 440.0 Hz), variable in 0.1 Hz steps</li> <li>• Scale Tuning (Temperament): Equal + 16 other types</li> </ul>
<b>MIDI</b>	16-channel multi-timbre receive
<b>Inputs/Outputs</b>	<ul style="list-style-type: none"> <li>• PHONES/OUTPUT jack: Stereo mini jack (3.5mm) Output Voltage: 1.2V (RMS) MAX</li> <li>• Power: 12V DC</li> <li>• AUDIO IN jack: Stereo mini jack (3.5mm) Input impedance: 10k<math>\Omega</math> Input voltage: 200mV</li> <li>• USB port: TYPE B</li> <li>• DAMPER PEDAL jack: Standard jack (6.3mm)</li> <li>• PEDAL UNIT jack: Special jack</li> </ul>
<b>Speakers</b>	12cm $\times$ 6cm (Oval) $\times$ 2 (Output 8W + 8W)
<b>Power Supply</b>	2-way
Batteries	6 AA-size alkaline batteries
Battery Life	Approximately 13 hours continuous operation on alkaline batteries
AC Adaptor	AD-A12150LW
Auto Power Off	Approximately 4 hours (AC Adaptor) / 6 minutes (batteries) after last operation; can be disabled.
<b>Power Consumption</b>	12V --- 8W
<b>Dimensions</b>	132.2 (W) $\times$ 23.2 (D) $\times$ 9.9 (H) cm (52 1/16 $\times$ 9 1/8 $\times$ 3 7/8 inch)
<b>Weight</b>	Approximately 10.5kg (23.1 lbs) (without batteries)

- Specifications and designs are subject to change without notice.

## Tone List

Tone Name	Program Change	Bank Select MSB
GRAND PIANO STANDARD	0	0
GRAND PIANO MELLOW	1	0
GRAND PIANO BRIGHT	2	0
ELEC.PIANO 1	3	0
ELEC.PIANO 2	4	0
ELEC.PIANO 3	5	0
HARPSICHORD	6	0
STRINGS	7	0
PIPE ORGAN	8	0
JAZZ ORGAN	9	0

## Keyboard Function List

Note name	Assigned function (marked above the keyboard key)		
A0	B2	Demo (DEMO)	
C1	C3	Grand Piano (GRAND PIANO) Standard (STANDARD)	
	C#3	Grand Piano (GRAND PIANO) Mellow (MELLOW)	
	D3	Grand Piano (GRAND PIANO) Bright (BRIGHT)	
C2	E♭3	Elec. Piano (ELEC. PIANO) 1	
	E3	Elec. Piano (ELEC. PIANO) 2	
	F3	Elec. Piano (ELEC. PIANO) 3	
	F#3	Harpichord (HARPSICHORD)	
	G3	Strings (STRINGS)	
	A♭3	Pipe Organ (PIPE ORGAN)	
	A3	Jazz Organ (JAZZ ORGAN)	
C3	B♭3	Metronome (METRONOME) On/Off (ON/OFF)	
	B3	Tempo (TEMPO)	
	C4	Beat (BEAT)	
	C#4	Volume (VOLUME)	
C4	D4	Tempo/Beat/Volume (TEMPO/BEAT/VOLUME) –	
	E♭4	+	
	E4	0	
	F4	1	
	F#4	2	
	G4	3	
	A♭4	4	
	A4	5	
	B♭4	6	
	B4	7	
C5	C5	8	
	C#5	9	
	D5	Touch Response (TOUCH RESPONSE)	
	E♭5	Reverb (REVERB)	
	E5	Chorus (CHORUS)	
C6	F5	Transpose (TRANSPOSE) –	
	F#5	+	
	G5	Tune (TUNE) –	
	A♭5	+	
	A5	Scale (SCALE) Type (TYPE)	
C7	B♭5	Base Note (BASE NOTE)	
	B5	Duet (DUET) Type (TYPE)	
	C6	Left keyboard octave (L OCT.)	
	C#6	Right keyboard octave (R OCT.)	
C8	D6	Recorder (RECORDER) Setting (SETTING)	
	E♭6	Clear (CLEAR)	
	E6	Pedal (PEDAL) Type (TYPE)	
The functions below are not marked above the keyboard keys.			
C7	G6	Keyboard Channel	
	A6	Local Control	
	B6	Auto Power Off	
	E7	Factory Reset	
	G7	Execute	
	C8	B7	Beep

## MIDI Implementation Chart

Function	Transmitted	Recognized	Remarks
<b>Basic Channel</b> Default Changed	1 1 - 16	1 - 16 1 - 16	
<b>Mode</b> Default Messages Altered	Mode 3 X * * * * * * * * * *	Mode 3 X * * * * * * * * * *	
<b>Note Number</b> True voice	21 - 108 * * * * * * * * * *	0 - 127 0 - 127 *1	
<b>Velocity</b> Note ON Note OFF	0 9nH v = 1 - 127 0 8nH v = 64	0 9nH v = 1 - 127 0 9nH v = 0, 8nH v = **	***: no relation
<b>After Touch</b> Key's Ch's	X X	X O	
<b>Pitch Bender</b>	X	O	
<b>Control Change</b> 0 1 5 6, 38 7 10 11 64 65 66	O X X X *2 *4 X X X X O X X *3	O O O *2 O O O O O O	Bank select Modulation Portamento Time Data entry LSB/MSB Volume Pan Expression Hold 1 Portamento Switch Sostenuto

67 71 72 73 74 84 91 93 100, 101	X *3 X X X X X X X *4 X *2 *4		Soft pedal Filter resonance Release time Attack time Brightness Portamento Control Reverb send level Chorus send level RPN LSB/MSB
<b>Program Change</b>	O * * * * * * * * * * * * * * *	O 0 - 127	
<b>Exclusive</b>	O *2	O *2	
<b>System Common</b>	X X X	X X X	
<b>System Real Time</b>	X X	X X	
<b>Aux Messages</b>	X X X X X X	O O X O O X	
<b>Remarks</b>	*1: Depends on tone. *2: For details about RPN and system exclusive messages, see MIDI Implementation at <a href="https://support.casio.com/global/en/m/manual/CDP-S15U/">https://support.casio.com/global/en/m/manual/CDP-S15U/</a> *3: <input type="radio"/> when the optionally available pedal unit is connected. *4: Output along with certain operations.		

Mode 1 : OMNI ON, POLY  
Mode 3 : OMNI OFF, POLY

Mode 2 : OMNI ON, MONO  
Mode 4 : OMNI OFF, MONO

O : Yes  
X : No

**CASIO®**

**CASIO COMPUTER CO., LTD.**  
6-2, Hon-machi 1-chome  
Shibuya-ku, Tokyo 151-8543, Japan

MA1812-A  
© 2018 CASIO COMPUTER CO., LTD.