

Iron-On Fabric Tape User's Guide

CASIO®

MO1503-A Printed in China
© 2015 CASIO COMPUTER CO., LTD.

Precautions for Use



Warning

Failure to handle the tape as explained by information marked with this symbol creates the risk of death or serious personal injury.




Caution

Failure to handle the tape as explained by information marked with this symbol creates the risk of personal injury or material damage.

Symbol Examples



The  symbol indicates something you should not do.



Warning



Do not allow children to apply the iron-on fabric tape while unsupervised.
Doing so creates the risk of fire, burn injury, and other accidents.



Caution



Do not touch the iron-on fabric tape immediately after applying it.
Doing so creates the risk of burn injury. Also, carefully read the user documentation that comes with the iron you are using.

IMPORTANT!

This iron-on fabric tape is intended for application to a handkerchief or other similar material using an iron.

CASIO COMPUTER CO., LTD. shall not be held liable for any damage to or soiling of the material being applied to due to improper use of this iron-on fabric tape. Before using this iron-on fabric tape, be sure to read the contents of the instructions and ensure that you use the tape correctly.

Before Applying the Iron-On Fabric Tape

- Keep the points below in mind when selecting material for application of this iron-on fabric tape.
 - (1) For iron-on fabric tape application, the maximum setting of your iron should be from 160 to 180°C (320 to 356°F).
 - Carefully read the user documentation that comes with the iron you are using.
 - (2) The iron-on fabric tape will not adhere to a highly elastic material, to a material with a rough surface, to a raised fabric material, or to a waterproof material.
 - **Acceptable Material for Application**
100% cotton, 100% linen, 100% polyester, cotton and polyester blend
 - Above materials must have a smooth surface.
 - **Unacceptable Material for Application**
Synthetics, wool, silk, denim, pile, material with a rough surface, waterproofing treated material, material that cannot withstand ironing at a heat setting of 160 to 180°C (320 to 356°F).
- If the material being applied to is creased or wrinkled, smooth it out before applying the iron-on fabric tape.
- Once applied, iron-on fabric tape cannot be removed. To avoid mistakes, practice by applying the tape to unneeded material is recommended.

After Applying the Iron-On Fabric Tape


- Soaking in a bleaching agent for long periods can cause the fabric-tape to become discolored.
- When ironing material that has iron-on fabric tape applied, use an ironing cloth.
- Do not use a drier to dry material that has iron-on fabric tape applied.
- Frequent washing or dry cleaning of material that has iron-on fabric tape applied can cause the tape to come off. In this case, sewing the fabric tape onto the material is recommended.

Using Iron-On Fabric Tape

1. Load the iron-on fabric tape cartridge into your label printer.
2. Set the print density to 4 or 5.
 - If the printed result is not clear, adjust the print density setting accordingly.
3. After the tape feeds out of the printer, use fabric shears to cut it off near the tape outlet.

Important!


Iron-on fabric tape is specially processed. Because of this, the printer's tape cutter may not be able to cut it or may become damaged by trying to cut it. Whenever printing on iron-on fabric tape, always select **NONE** for the **MARGINS** setting, or **UNCUT** for the tape cut mode. If you are using Label Printing Software to control the printer connected from your computer, select **No Cut** for the **Cut Style** setting of the Label Software Properties. Be sure to use fabric shears to cut iron-on fabric tape.

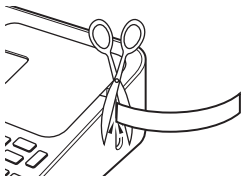

Applying the Iron-On Fabric Tape to Material

- Set the iron to a temperature of 160 to 180°C (320 to 356°F). An iron temperature that is too low will result in improper adhesion, which may cause the tape to come detached later. Insufficient ironing time and/or weak ironing pressure can cause the fabric tape to buckle or become detached.
- When using a steam iron, be sure to remove all water and select the iron's dry setting.
- Use an ironing cloth when applying an iron-on fabric tape.

1. With the printed side of the fabric tape facing upwards (so you can see it), place it onto the material to which you want to apply it.
2. Place an ironing cloth on the fabric tape so the tape is completely covered.
 - Use an ironing cloth that is about as thick as a handkerchief.
3. Avoiding the steam holes of the iron, hold a smooth level part of the iron on top of the ironing cloth without moving it for about 15 to 30 seconds. Press down on the iron using your weight.
 - You can ensure better adhesion by repeating the above step two or three times.

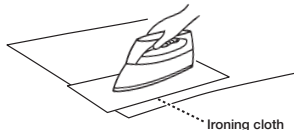

4. Remove the ironing cloth and confirm that the edges of the tape are securely affixed.
 - If the tape is not affixed securely, return to step 2 of the above procedure and apply the iron again.