Quick Reference Manual 5537 CASIO

Congratulations upon your selection of this CASIO watch.

 $\mathsf{Bluetooth}^{\texttt{@}}$ is a registered trademark or trademark of Bluetooth SIG, Inc. of the United States.

Your watch has a Mobile Link function that allows it to communicate with a Bluetooth[®] mobile phone and adjust its time settings to match those of the mobile phone

- This product complies with or has received approval under radio laws in various countries and geographic areas. Use of this product in an area where it does not conform to or where it has not been approved under applicable radio laws may be punishable under local laws. For details, visit http://world.casio.com/ce/BLE/.

 Use of this product inside of an aircraft is restricted by the aviation laws of each
- country. Be sure to obey instructions provided by flight personnel concerning use of devices such as this product.

Visit the website below for the operation manual (Operation Guide) of this watch.





Using the Watch

Charging

Remove the watch from your wrist and place it in a brightly lit area.


- The watch may become hot when exposed to light for charging. Take care to avoid
- · Avoid charging in locations where it is very hot.

- Leaving the watch in a dark location for about one hour between the hours of 10 p.m. and 6 a.m. will cause the second hand to stop at 12 o'clock.
- Leaving the watch in a dark location for about one week will cause all hands to stop.

Battery Alerts

- Low Battery Second hand jumps every two seconds (Low Battery Alert).
- Dead Battery
- All hands stopped

General Guide

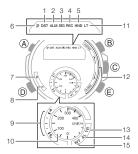


- 1. Summer time display indicator
- 2. Alarm enabled
- 3. Hourly time signal enabled
- 4. Recall Mode indicator
- Hands shifted
- 6. p.m. indicator (No indication for a.m.)
- . Phone connected*
- Phone connection standby
- 9. Battery level
- 10. Speed display indicator
- 12. Target time differential display indicator
- 13. Timer Mode indicator
- 14. Alarm Mode indicator
- 15. World Time Mode indicator
- * Hold down © for about 1.5 seconds to establish a Bluetooth connection with a phone.

Selecting a Mode


Each press of (1) cycles between modes as shown below.

Hold down (1) for at least two seconds to enter the Timekeeping Mode.

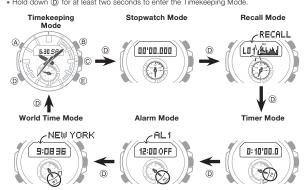

Setting the Time

- 1. In the Timekeeping Mode, hold down Release the button when the city name appears
- [SET] will flash and then the city name will appear.

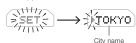

Press
 twice display the seconds setting screen.



- 3. Press (E) to reset the seconds count to 00.
- 30 to 59 seconds: Adds 1 to minutes

- 4. Press (1) to move the flashing to the hour setting.
- Use (E) and (B) to change the setting.
- Press ① to move the flashing to the minute setting.
- 7. Use (E) and (B) to change the setting.
- Press (1) to move the flashing to the year setting.
- 9. Use (E) and (B) to change the setting.
- 10. Press (D) to move the flashing to the
- month setting.

 11. Use (E) and (B) to change the setting.
- 12. Press (1) to move the flashing to the day setting.
- 13. Use (E) and (B) to change the setting.
- 14. Press (A) to exit the setting screen.

Specifications

Timer:

Accuracy at Normal Temperature: ± 15 seconds per month average when time adjustment by communication with a phone is not possible.

Analog Timekeeping: Hour, minute (moves every 10 seconds), second

Digital Timekeeping: Hour, minute, second, month, day, day of the week

a.m./p.m. (P)/24-hour timekeeping, Full Auto Calendar (2000 to 2099), Summer Time

Stopwatch/Data Recall:

Measurement unit: 1/1000 seconds (first hour); 1/10 seconds (after first hour) Measurement range: 23 hours, 59 minutes, 59.9 seconds Measurement functions: Normal elapsed time; cumulative time; lap times; 200-record data memory

Target time alarm:
3 target time settings (FASTEST, TARGET, LAST);
1-second beep sounds at target times

Measuring unit: 1/10 seconds

Countdown range: 24 hours

Setting unit: 1 second 10-second beeper at countdown end

World Time: Current time in 39 cities (39 time zones) plus UTC time; summer time; Home City/World Time swapping

rarms: 5 Selectable alarm type: DAILY, 1TIME, SCHEDULE DAILY, 1TIME Setting units: Hour, minute SCHEDULE

Setting units: Year, month, day, hour, minute Alarm tone duration: 10 seconds Hourly time signal: Beep every hour on the hour

Auto time correction
Time setting adjusted automatically at preset time.
One-touch time correction Mobile Link:

Manual connection and time adjustment

Watch operation sounds the algristment Phone finder
Watch operation sounds the alert sound of the mobile phone.
World Time
Current time for approximately 300 cities selected for the

watch Home Time/World Time swapping

Stopwatch data transfer

200 lap time records (date and time, lap time, lap number)
Auto summer time switching
Automatic switching between standard time and summer time
Timer setting

Alarm setting

Hand position correction
Data Communication Specifications
Bluetooth®

Frequency band: 2400 MHz to 2480 MHz Maximum transmission: 0 dBm (1 mW) Communication range: 2 meters max.

(depends on environment)

High-brightness DOUBLE LED light; illumination duration Other:

setting; Auto Light Switch (Full Auto Light operates only in the dark); operation tone on/off; Hand Shift; Battery level indicator, Power saving

Power Supply: Solar panel and 1 rechargeable battery

Approximate Battery Life: 6 months

Conditions:

• Auto time correction: 4 times/day Alarm: Once (10 seconds)/day
 Illumination: Once (1.5 seconds)/day

Specifications are subject to change without notice