

CASIO Worldwide Education Website

http://edu.casio.com

CASIO EDUCATIONAL FORUM

http://edu.casio.com/forum/



Contents

Important Information	2
Sample Operations	2
Initializing the Calculator	2
Safety Precautions	2
Handling Precautions	2
Removing the Hard Case	3
Turning Power On and Off	3
Adjusting Display Contrast	3
Key Markings	3
Reading the Display	4
Using Menus	5
Specifying the Calculation Mode	5
Configuring the Calculator Setup	5
Inputting Expressions and Values	6
Toggling Calculation Results	10
Basic Calculations	10
Function Calculations	13
Statistical Calculations (STAT)	16
Equation Calculations (EQN)	20
Base-n Calculations (BASE-N)	21
Calculation Ranges, Number of Digits, and Precision	23
Errors	25
Before Assuming Malfunction of the Calculator	26
Replacing the Battery	27
Specifications	27
Frequently Asked Questions	27

Important Information

- The displays and illustrations (such as key markings) shown in this User's Guide are for illustrative purposes only, and may differ somewhat from the actual items they represent.
- The contents of this manual are subject to change without notice.
- In no event shall CASIO Computer Co., Ltd. be liable to anyone for special, collateral, incidental, or consequential damages in connection with or arising out of the purchase or use of this product and items that come with it. Moreover, CASIO Computer Co., Ltd. shall not be liable for any claim of any kind whatsoever by any other party arising out of the use of this product and the items that come with it.
- Be sure to keep all user documentation handy for future reference.

Sample Operations

Sample operations in this manual are indicated by a \mathcal{O} icon. Unless specifically stated, all sample operations assume that the calculator is in its initial default setup. Use the procedure under "Initializing the Calculator" to return the calculator to its initial default setup.

For information about the MATH, LINE, Deg, and Rad marks that are shown in the sample operations, see "Configuring the Calculator Setup".

Initializing the Calculator

Perform the following procedure when you want to initialize the calculator and return the calculation mode and setup to their initial default settings. Note that this operation also clears all data currently in calculator memory.

SHIFT 9 (CLR) 3 (AII) = (Yes)

Safety Precautions



- Keep batteries out of the reach of small children.
- Use only the type of battery specified for this calculator in this manual.


Handling Precautions

- Even if the calculator is operating normally, replace the battery at least once every two years.
 - A dead battery can leak, causing damage to and malfunction of the calculator. Never leave a dead battery in the calculator.
- The battery that comes with the calculator discharges slightly during shipment and storage. Because of this, it may require replacement sooner than the normal expected battery life.
- Do not use an oxyride battery* or any other type of nickel-based primary battery with this product. Incompatibility between such batteries and product specifications can result in shorter battery life and product malfunction.
- Avoid use and storage of the calculator in areas subjected to temperature extremes, and large amounts of humidity and dust.
- Do not subject the calculator to excessive impact, pressure, or bending.

- Never try to take the calculator apart.
- Use a soft, dry cloth to clean the exterior of the calculator.
- Whenever discarding the calculator or batteries, be sure to do so in accordance with the laws and regulations in your particular area.
- * Company and product names used in this manual may be registered trademarks or trademarks of their respective owners.

Removing the Hard Case

Before using the calculator, slide its hard case downwards to remove it, and then affix the hard case to the back of the calculator as shown in the illustration nearby.

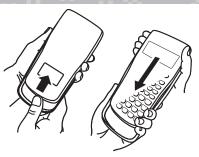

Turning Power On and Off

Press (N) to turn on the calculator.

Press SHIFT AC (OFF) to turn off the calculator.

Auto Power Off

Your calculator will turn off automatically if you do not perform any operation for about 10 minutes. If this happens, press the N key to turn the calculator back on.


Adjusting Display Contrast

Important: If adjusting display contrast does not improve display readability, it probably means that battery power is low. Replace the battery.

Key Markings

Pressing the SHFT or APHA key followed by a second key performs the alternate function of the second key. The alternate function is indicated by the text printed above the key.


The following shows what the different colors of the alternate function key text mean.

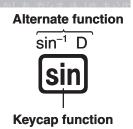

If key marking text is this color:	It means this:
Yellow	Press shift and then the key to access the applicable function.
Red	Press APPA and then the key to input the applicable variable, constant, or symbol.
Green (or enclosed in green brackets)	Enter the BASE-N Mode to access the function.

Reading the Display

The display of the calculator shows expressions you input, calculation results, and various indicators.



Calculation result

- If a ▶ indicator appears on the right side of the calculation result, it means
 the displayed calculation result continues to the right. Use ▶ and ◆ to
 scroll the calculation result display.
- If a ▷ indicator appears on the right side of the input expression, it means the displayed calculation continues to the right. Use ⑤ and ⑥ to scroll the input expression display. Note that if you want to scroll the input expression while both the ▶ and ▷ indicators are displayed, you will need to press ⓒ first and then use ⑥ and ⑥ to scroll.

Display indicators

This indicator:	Means this:
S	The keypad has been shifted by pressing the shift key. The keypad will unshift and this indicator will disappear when you press a key.
Α	The alpha input mode has been entered by pressing the APPA key. The alpha input mode will be exited and this indicator will disappear when you press a key.
M	There is a value stored in independent memory.
STO	The calculator is standing by for input of a variable name to assign a value to the variable. This indicator appears after you press [SHFT] [RCL] (STO).
RCL	The calculator is standing by for input of a variable name to recall the variable's value. This indicator appears after you press RCL.
STAT	The calculator is in the STAT Mode.
D	The default angle unit is degrees.
R	The default angle unit is radians.
G	The default angle unit is grads.
FIX	A fixed number of decimal places is in effect.
SCI	A fixed number of significant digits is in effect.
Math	Natural Display is selected as the display format.
▼ ▲	Calculation history memory data is available and can be replayed, or there is more data above/below the current screen.
Disp	The display currently shows an intermediate result of a multi-statement calculation.

Important: For some type of calculation that takes a long time to execute, the display may show only the above indicators (without any value) while it performs the calculation internally.

Using Menus

Some of the calculator's operations are performed using menus. Pressing or hyp, for example, will display a menu of applicable functions.

The following are the operations you should use to navigate between menus.

- You can select a menu item by pressing the number key that corresponds to the number to its left on the menu screen.
- The ▼ indicator in the upper right corner of a menu means there is another menu below the current one. The ▲ indicator means another menu above.
 Use ▼ and ♠ to switch between menus.
- To close a menu without selecting anything, press AC.

Specifying the Calculation Mode

When you want to perform this type of operation:	Perform this key operation:
General calculations	MODE 1 (COMP)
Statistical and regression calculations	MODE 2 (STAT)
Equation solution	MODE 3 (EQN)
Calculations involving specific number systems (binary, octal, decimal, hexadecimal)	MODE 4 (BASE-N)

Note: The initial default calculation mode is the COMP Mode.

Configuring the Calculator Setup

First perform the following key operation to display the setup menu:

| INFT | MODE (SETUP). Next, use and and the number keys to configure the settings you want.

Underlined (____) settings are initial defaults.

1 MthIO 2 LineIO Specifies the display format.

Natural Display (MthIO) causes fractions, irrational numbers, and other expressions to be displayed as they are written on paper.

MthIO: Selects MathO or LineO. MathO displays input and calculation results using the same format as they are written on paper. LineO displays input the same way as MathO, but calculation results are displayed in linear format.

Linear Display (LineIO) causes fractions and other expressions to be displayed in a single line.

Note: • The calculator switches to Linear Display automatically whenever you enter the STAT or BASE-N Mode. • In this manual, the MATH symbol next to a sample operation indicates Natural Display (MathO), while the symbol indicates Linear Display.

3 Deg 4 Rad 5 Gra Specifies degrees, radians or grads as the angle unit for value input and calculation result display.

Note: In this manual, the **Deg** symbol next to a sample operation indicates degrees, while the **Rad** symbol indicates radians.

6 Fix 7 Sci 8 Norm Specifies the number of digits for display of a calculation result.

Fix: The value you specify (from 0 to 9) controls the number of decimal places for displayed calculation results. Calculation results are rounded off to the specified digit before being displayed.

Example: LINE
$$100 \div 7 = 14.286$$
 (Fix 3) 14.29 (Fix 2)

Sci: The value you specify (from 1 to 10) controls the number of significant digits for displayed calculation results. Calculation results are rounded off to the specified digit before being displayed.

Example: LINE
$$1 \div 7 = 1.4286 \times 10^{-1}$$
 (Sci 5) 1.429×10^{-1} (Sci 4)

Norm: Selecting one of the two available settings (Norm 1, <u>Norm 2</u>) determines the range in which results will be displayed in non-exponential format. Outside the specified range, results are displayed using exponential format.

Norm 1:
$$10^{-2} > |x|, |x| \ge 10^{10}$$
 Norm 2: $10^{-9} > |x|, |x| \ge 10^{10}$

Example: LINE
$$1 \div 200 = 5 \times 10^{-3}$$
 (Norm 1) 0.005 (Norm 2)

Tab/c Tab/c Specifies either mixed fraction (ab/c) or improper fraction (d/c) for display of fractions in calculation results.

© 3 **CMPLX** 1 a+bi; 2 r $\angle \theta$ Specifies either rectangular coordinates (a+bi) or polar coordinates $(r\angle \theta)$ for EQN Mode solutions.

▼ 4 STAT 1 ON; 2 OFF Specifies whether or not to display a FREQ (frequency) column in the STAT Mode Stat Editor.

▼ 5 Disp 1 Dot ; 2 Comma Specifies whether to display a dot or a comma for the calculation result decimal point. A dot is always displayed during input.

Note: When dot is selected as the decimal point, the separator for multiple results is a comma (,). When comma is selected, the separator is a semicolon (;).

⑤ ⑥ 【CONT**▶** Adjusts display contrast. See "Adjusting Display Contrast" for details.

Initializing Calculator Settings


Perform the following procedure to initialize the calculator, which returns the calculation mode to COMP and returns all other settings, including setup menu settings, to their initial defaults.

SHIFT 9 (CLR) 1 (Setup) (Yes)

Inputting Expressions and Values


Basic Input Rules

Calculations can be input in the same form as they are written. When you press
the priority sequence of the input calculation will be evaluated automatically and the result will appear on the display.



- *1 Input of the closing parenthesis is required for sin, sinh, and other functions that include parentheses.
- *2 These multiplication symbols (\times) can be omitted. A multiplication symbol can be omitted when it occurs immediately before an opening parenthesis, immediately before sin or other function that includes parentheses, immediately before the Ran# (random number) function, or immediately before a variable (A, B, C, D, E, F, M, X, Y), π or e.
- *3 The closing parenthesis immediately before the

 operation can be omitted.



Important: If you execute a calculation that includes both division and multiplication operations in which a multiplication sign has been omitted, parentheses will be inserted automatically as shown in the examples below.

 When a multiplication sign is omitted immediately before an open parenthesis or after a closed parenthesis.


$$6 \div 2 (1 + 2) \rightarrow 6 \div (2 (1 + 2))$$
 $6 \div A (1 + 2) \rightarrow 6 \div (A (1 + 2))$ $1 \div (2 + 3) \sin(30) \rightarrow 1 \div ((2 + 3) \sin(30))$

 When a multiplication sign is omitted immediately before a variable, a constant, etc.

$$6 \div 2\pi \rightarrow 6 \div (2\pi)$$
 $2 \div 2\sqrt{2} \rightarrow 2 \div (2\sqrt{2})$ $4\pi \div 2\pi \rightarrow 4\pi \div (2\pi)$

 When inputting a function that uses commas (such as Pol, Rec, and RanInt#), be sure to input the closed parentheses required by the expression. If you do not input closed parentheses, parentheses may not be inserted automatically as described above.

Important: If you execute a calculation in which a multiplication sign has been omitted immediately before a fraction (including mixed fractions), parentheses will be inserted automatically as shown in the examples below.

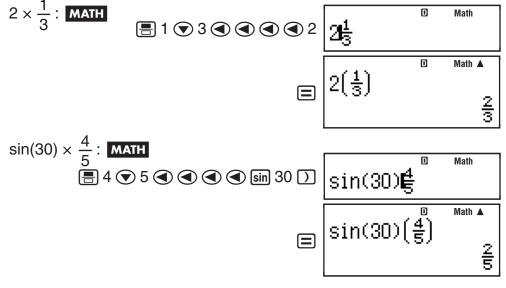

Note: • If the calculation becomes longer than the screen width during input, the screen will scroll automatically to the right and the ◀ indicator will appear on the display. When this happens, you can scroll back to the left by using ④ and ⑤ to move the cursor. • When Linear Display is selected, pressing ⑥ will cause the cursor to jump to the beginning of the calculation, while ⑦ will jump to the end. • When Natural Display is selected, pressing ⑥ while the cursor is at the end of the input calculation will cause it to jump to the beginning, while pressing ⑥ while the cursor is at the beginning will cause it to jump to the end. • You can input up to 99 bytes for a calculation. Each numeral, symbol, or function normally uses one byte. Some functions require three to 13 bytes. • The cursor will change shape to ■ when there are 10 bytes or less of allowed input remaining. If this happens, end calculation input and then press ■.

Calculation Priority Sequence

The priority sequence of input calculations is evaluated in accordance with the rules below. When the priority of two expressions is the same, the calculation is performed from left to right.

1st	Parenthetical expressions
2nd	Functions that require an argument to the right and a closing parenthesis ")" following the argument.
3rd	Functions that come after the input value $(x^2, x^3, x^{-1}, x!, \circ, r, g, \infty, t)$, powers (x^{\bullet}) , roots $(\sqrt[\bullet]{\Box})$
4th	Fractions
5th	Negative sign (–), base- n symbols (d, h, b, o) Note: When squaring a negative value (such as –2), the value being squared must be enclosed in parentheses ((\bigcirc 2) x^2). Since x^2 has a higher priority than the negative sign, inputting \bigcirc 2 x^2 would result in the squaring of 2 and then appending a negative sign to the result. Always keep the priority sequence in mind, and enclose negative values in parentheses when required.
6th	STAT Mode estimated values $(\hat{x}, \hat{y}, \hat{x}_1, \hat{x}_2)$
7th	Multiplication where the multiplication sign is omitted
8th	Permutation (nPr), combination (nCr)
9th	Multiplication, division (×, ÷)
10th	Addition, subtraction (+, -)
11th	Logical AND (and)
12th	Logical OR, XOR, XNOR (or, xor, xnor)

Inputting with Natural Display

Selecting Natural Display makes it possible to input and display fractions and certain functions $(x^2, x^3, x^{\blacksquare}, \sqrt{\blacksquare}, \sqrt[3]{\blacksquare}, \sqrt[8]{\blacksquare}, x^{-1}, 10^{\blacksquare}, e^{\blacksquare}, \text{Abs})$ just as they are written in your textbook.




Important: • Certain types of expressions can cause the height of a calculation formula to be greater than one display line. The maximum

allowable height of a calculation formula is two display screens (31 dots \times 2). Further input will become impossible if the height of the calculation you are inputting exceeds the allowable limit. • Nesting of functions and parentheses is allowed. Further input will become impossible if you nest too many functions and/or parentheses. If this happens, divide the calculation into multiple parts and calculate each part separately.

Note: When you press \blacksquare and obtain a calculation result using Natural Display, part of the expression you input may be cut off. If you need to view the entire input expression again, press \blacksquare and then use \blacksquare and \blacksquare to scroll the input expression.

Using Values and Expressions as Arguments (Natural Display only)

A value or an expression that you have already input can be used as the argument of a function. After you have input $\frac{7}{6}$, for example, you can make it the argument of $\sqrt{}$, resulting in $\sqrt{\frac{7}{6}}$.

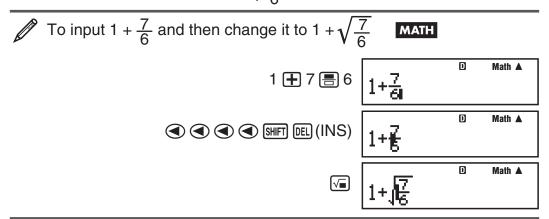

As shown above, the value or expression to the right of the cursor after [SHIFT DEL] (INS) are pressed becomes the argument of the function that is specified next. The range encompassed as the argument is everything up to the first open parenthesis to the right, if there is one, or everything up to the first function to the right (sin(30), log2(4), etc.)

This capability can be used with the following functions: \blacksquare , \blacksquare , \blacksquare (\blacksquare), \blacksquare), \blacksquare), \blacksquare 0 (\blacksquare 0), \blacksquare 1), \blacksquare 1)

Overwrite Input Mode (Linear Display only)

You can select either insert or overwrite as the input mode, but only while Linear Display is selected. In the overwrite mode, text you input replaces the text at the current cursor location. You can toggle between the insert and overwrite modes by performing the operations: [SHFT] [DEL] (INS). The cursor appears as "\begin{align*}" in the insert mode and as "\begin*" in the overwrite mode.

Note: Natural Display always uses the insert mode, so changing display format from Linear Display to Natural Display will automatically switch to the insert mode.

Correcting and Clearing an Expression

To delete a single character or function: Move the cursor so it is directly to the right of the character or function you want to delete, and then press III. In the overwrite mode, move the cursor so it is directly under the character or function you want to delete, and then press III.

To insert a character or function into a calculation: Use and to move the cursor to the location where you want to insert the character or

function and then input it. Be sure always to use the insert mode if Linear Display is selected.

To clear all of the calculation you are inputting: Press AC.

Toggling Calculation Results

Each press of will toggle the currently displayed calculation result between its decimal form and fraction form.

$$1 \div 5 = \frac{1}{5} = 0.2 \quad \text{MATH}$$

$$1 \div 5 = 0.2 = \frac{1}{5} \quad \text{LINE}$$

$$1 \div 5 = 0.2 = \frac{1}{5} \quad \text{LINE}$$

$$1 \div 5 \equiv 0.2 = \frac{1}{5} \quad \text{LINE}$$

1 -
$$\frac{4}{5} = \frac{1}{5} = 0.2$$
 LINE
1 - 4 = 5 = 0.2

Important: • With certain calculation results, pressing the will not convert the displayed value. • You cannot switch from decimal form to mixed fraction form if the total number of digits used in the mixed fraction (including integer, numerator, denominator, and separator symbols) is greater than 10.

Note: With Natural Display (MathO), pressing III instead of after inputting a calculation will display the calculation result in decimal form.

Basic Calculations

Fraction Calculations

Note that the input method for fractions is different, depending upon whether you are using Natural Display or Linear Display.

Note: • Mixing fractions and decimal values in a calculation while Linear Display is selected will cause the result to be displayed as a decimal value. • Fractions in calculation results are displayed after being reduced to their lowest terms.

To switch a calculation result between improper fraction and mixed fraction form: Perform the following key operation: $\frac{b}{c} \leftrightarrow \frac{d}{c}$

To switch a calculation result between fraction and decimal form: Press [94].

Percent Calculations


Inputting a value and pressing \mathbb{SHFI} (%) causes the input value to become a percent.

30	150 🕱 20 🖭 🤇 (%) 🖃	150 × 20% = 30
	entage of 880 is 660. (75%)	Calculate what perce
75	660 ÷ 880 आ∏ ((%) =	
	%. (2875)	Increase 2500 by 15
2875	2500 + 2500 X 15 SHFT ((%) =	
	%. (2625)	Discount 3500 by 25
2625	3500 3 500 X 25 HIFT ((%)	•

Degree, Minute, Second (Sexagesimal) Calculations

Performing an addition or subtraction operation between sexagesimal values, or a multiplication or division operation between a sexagesimal value and a decimal value will cause the result to be displayed as a sexagesimal value. You also can convert between sexagesimal and decimal. The following is the input format for a sexagesimal value: {degrees} •••• {minutes} •••• {seconds} ••••

Note: You must always input something for the degrees and minutes, even if they are zero.

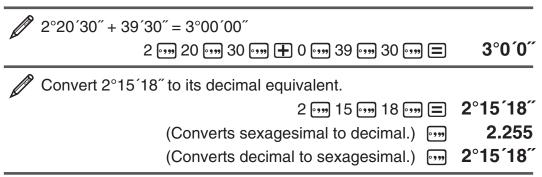

Multi-Statements

You can use the colon character (:) to connect two or more expressions and execute them in sequence from left to right when you press =.

3+3:3×3	$3 + 3 \text{ ALPHA } x^3(:)3 \times 3 =$	6
,		9

Using Engineering Notation

A simple key operation transforms a displayed value to engineering notation.

Transform the value 1234 to engineering notation, st decimal point to the right.	nifting the
dodinal point to the right.	
1234 🖃	1234
ENG	1.234×10 ³
ENG	1234×10°

Transform the value 123 to engineering notation, shifting the decimal point to the left.

> 123 123 (=)

SHIFT ENG (\leftarrow)

0.123×10³

SHIFT ENG (\leftarrow) 0.000123×10⁶

Calculation History

In the COMP or BASE-N Mode, the calculator remembers up to approximately 200 bytes of data for the newest calculation. You can scroll through calculation history contents using (A) and (\(\nabla\).

1 + 1 = 2	1 🕂 1 🖃	2
2 + 2 = 4	2 🛨 2 🖃	4
3 + 3 = 6	3 🛨 3 🖃	6
	(Scrolls back.)	4
	(Scrolls back again.)	2

Note: Calculation history data is all cleared whenever you press [ON], when you change to a different calculation mode, when you change the display format, or whenever you perform any reset operation.

Replay


While a calculation result is on the display, you can press **④** or **▶** to edit the expression you used for the previous calculation.

$$4 \times 3 + 2.5 = 14.5$$
 LINE $4 \times 3 + 2.5 \equiv 14.5$ $4 \times 3 - 7.1 = 4.9$ (Continuing) $4 \times 3 - 7.1 \equiv 4.9$ 4.9

Note: If you want to edit a calculation when the ▶ indicator is on the right side of a calculation result display (see "Reading the Display"), press AC and then use <a> and <a> to scroll the calculation.

Answer Memory (Ans)

The last calculation result obtained is stored in Ans (answer) memory. Ans memory contents are updated whenever a new calculation result is displayed.

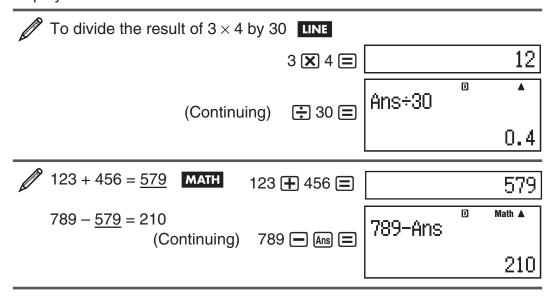

Variables (A, B, C, D, E, F, X, Y)

Your calculator has eight preset variables named A, B, C, D, E, F, X, and Y. You can assign values to variables and also use the variables in calculations.

To assign the result of 3 + 5 to varia	able A	
3	5 SHIFT RCL (STO) (—) (A)	8
To multiply the contents of variable	A by 10	
(Continuir	ng) ALPHA (-) (A) X 10 =	80
To recall the contents of variable A	(Continuing) RCL (A)	8
To clear the contents of variable A	O SHIFT RCL (STO) (-) (A)	0

Independent Memory (M)

You can add calculation results to or subtract results from independent memory. The "M" appears on the display when there is any value other than zero stored in independent memory.

0 SHIFT RCL (STO) M+ (M) 0	To clear the contents of M
M (Continuing) 10 🗙 5 🕪 50	To add the result of 10×5 to M
5 from M ontinuing) 10 + 5 (SHIFT) (M+) (M-) 15	To subtract the result of 10 + 5 fr (Continue)
(Continuing) RCL M+ (M) 35	To recall the contents of M

Note: Variable M is used for independent memory.

Clearing the Contents of All Memories

Ans memory, independent memory, and variable contents are retained even if you press (AC), change the calculation mode, or turn off the calculator. Perform the following procedure when you want to clear the contents of all memories.

SHIFT 9 (CLR) 2 (Memory) (Yes)

Function Calculations

For actual operations using each function, see the "Examples" section following the list below.

 π : π is displayed as 3.141592654, but π = 3.14159265358980 is used for internal calculations.

e: e is displayed as 2.718281828, but e = 2.71828182845904 is used for internal calculations.

sin, cos, tan, sin⁻¹, cos⁻¹, tan⁻¹: Trigonometric functions. Specify the angle unit before performing calculations. See 21.

sinh, cosh, tanh, sinh⁻¹, cosh⁻¹, tanh⁻¹: Hyperbolic functions. Input a function from the menu that appears when you press frample. The angle unit setting does not affect calculations. See frample2.

°, r, g: These functions specify the angle unit. ° specifies degrees, r radians, and g grads. Input a function from the menu that appears when you perform the following key operation: SHIFT Ans (DRG►). See 23.

10 $^{\blacksquare}$, e^{\blacksquare} : Exponential functions. Note that the input method is different depending upon whether you are using Natural Display or Linear Display. See \bigcirc 4.

log: Logarithmic function. See \$\int_5\$.

In: Natural logarithm to base e. See \mathcal{O}_6 .

 x^2 , x^3 , x^{\blacksquare} , $\sqrt{\blacksquare}$, $\sqrt[3]{\blacksquare}$, $\sqrt[8]{\Box}$, x^{-1} : Powers, power roots, and reciprocals. Note that the input methods for x^{\blacksquare} , $\sqrt{\blacksquare}$, $\sqrt[3]{\blacksquare}$, and $\sqrt[8]{\Box}$ are different depending upon whether you are using Natural Display or Linear Display. See $\sqrt[8]{7}$.

Note: The following functions cannot be input in consecutive sequence: x^2 , x^3 , x^{1} , x^{-1} . If you input $2x^2x^2$, for example, the final x^2 will be ignored. To input 2^{2^2} , input $2x^2$, press the x^2 key, and then press x^2 (MATH).

Pol, Rec: Pol converts rectangular coordinates to polar coordinates, while Rec converts polar coordinates to rectangular coordinates. See \mathcal{D}_8 .

Pol $(x, y) = (r, \theta)$ Rec $(r, \theta) = (x, y)$ Pol
Rectangular

Polar

Coordinates (Rec)

Coordinates (Pol)

Specify the angle unit before performing calculations.

The calculation result for r and θ and for x and y are each assigned respectively to variables X and Y. Calculation result θ is displayed in the range of $-180^{\circ} < \theta \le 180^{\circ}$.

x!: Factorial function. See \mathcal{D}_9 .

Abs: Absolute value function. Note that the input method is different depending upon whether you are using Natural Display or Linear Display. See $\sqrt[6]{10}$.


Ran#: Generates a 3-digit pseudo random number that is less than 1. The result is displayed as a fraction when Natural Display is selected. See 21.

RanInt#: For input of the function of the form RanInt#(a, b), which generates a random integer within the range of a to b. See $2 \cdot 12$.

nPr, nCr: Permutation (nPr) and combination (nCr) functions. See 2 3.

Note: Using functions can slow down a calculation, which may delay display of the result. Do not perform any subsequent operation while waiting for the calculation result to appear. To interrupt an ongoing calculation before its result appears, press **AC**.

Examples

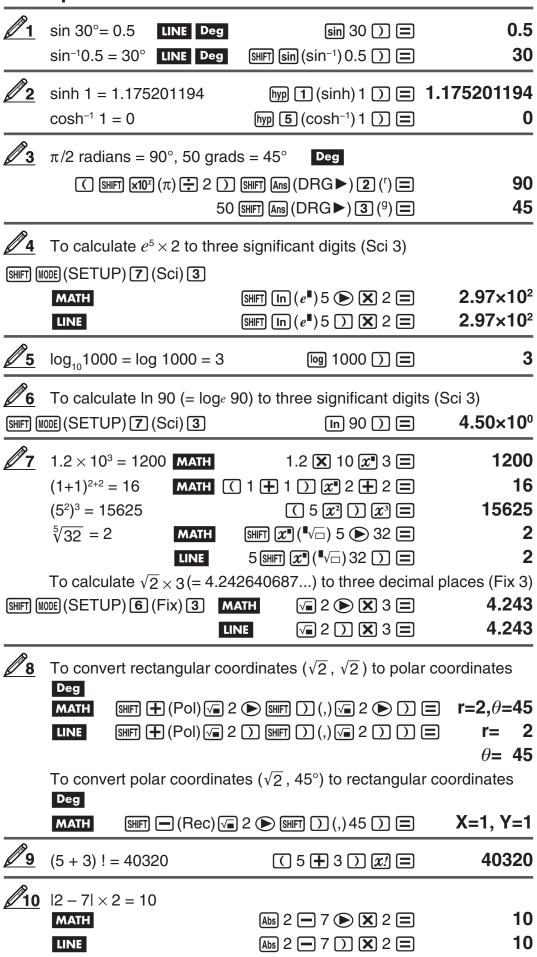

11 To obtain three random three-	digit integers	
1	1000 SHIFT • (Ran#) =	459
		48
		117
(Results shown here are for illustration	ve purposes only. Actual results	will differ.)
12 To generate random integers	in the range of 1 to 6	
ALPHA	nt) 1 SHIFT () (,) 6 () (=	2
		6
		1
		•
(Results shown here are for illustrati	ve purposes only. Actual results	will differ.)
(Results shown here are for illustration of page 13). To determine the number of page 25.	permutations and combination	·
13 To determine the number of p	permutations and combination	·
To determine the number of possible when selecting four	permutations and combination people from a group of 10 \times (nPr) 4 \equiv	IS

Statistical Calculations (STAT)

SHIFT MODE (SETUP) 6 (Fix) 3

To start a statistical calculation, perform the key operation [MODE] 2 (STAT) to enter the STAT Mode and then use the screen that appears to select the type of calculation you want to perform.

SHIFT **0** (Rnd) 10 **÷** 3 **) ★** 3 **=**

10 **→** 3 **×** 3 **=**

10.000 9.999

To select this type of statistical calculation: (Regression formula shown in parentheses)	Press this key:
Single-variable (X)	1 (1-VAR)
Paired-variable (X, Y), linear regression ($y = A + Bx$)	2 (A+BX)
Paired-variable (X, Y), quadratic regression $(y = A + Bx + Cx^2)$	3 (_+CX²)
Paired-variable (X, Y), logarithmic regression $(y = A + Blnx)$	4 (In X)
Paired-variable (X, Y), e exponential regression $(y = Ae^{B^x})$	5 (e^X)
Paired-variable (X, Y), ab exponential regression $(y = AB^x)$	6 (A•B^X)
Paired-variable (X, Y), power regression $(y = Ax^B)$	7 (A•X^B)
Paired-variable (X, Y), inverse regression $(y = A + B/x)$	8 (1/X)

Pressing any of the above keys (1 to 8) displays the Stat Editor.

Note: When you want to change the calculation type after entering the STAT Mode, perform the key operation [SHFT] 1 (STAT) 1 (Type) to display the calculation type selection screen.

Inputting Data


Use the Stat Editor to input data. Perform the following key operation to display the Stat Editor: [SHF] [1] (STAT) [2] (Data).

The Stat Editor provides 80 rows for data input when there is an X column only, 40 rows when there are X and FREQ columns or X and Y columns, or 26 rows when there are X, Y, and FREQ columns.

Note: Use the FREQ (frequency) column to input the quantity (frequency) of identical data items. Display of the FREQ column can be turned on (displayed) or off (not displayed) using the Stat Format setting on the setup menu.



To select linear regression and input the following data: (170, 66), (173, 68), (179, 75)

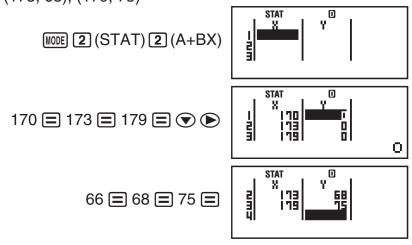

Important: • All data currently input in the Stat Editor is deleted whenever you exit the STAT Mode, switch between the single-variable and a paired-variable statistical calculation type, or change the Stat Format setting on the setup menu. • The following operations are not supported by the Stat Editor: [M+], [SHFT] [M+] (M-), [SHFT] [RCL] (STO). Pol, Rec, and multi-statements also cannot be input with the Stat Editor.

To change the data in a cell: In the Stat Editor, move the cursor to the cell that contains the data you want to change, input the new data, and then press =.

To delete a line: In the Stat Editor, move the cursor to the line that you want to delete and then press [EL].

To insert a line: In the Stat Editor, move the cursor to the location where you want to insert the line and then perform the following key operation: [SHIFT] 1 (STAT) 3 (Edit) 1 (Ins).

To delete all Stat Editor contents: In the Stat Editor, perform the following key operation: SHFT 1 (STAT) 3 (Edit) 2 (Del-A).

Obtaining Statistical Values from Input Data

To obtain statistical values, press \mathbb{AC} while in the Stat Editor and then recall the statistical variable (σ_x , Σx^2 , etc.) you want. Supported statistical variables and the keys you should press to recall them are shown below. For single-variable statistical calculations, the variables marked with an asterisk (*) are available.

Sum: Σx^{2*} , Σx^{*} , Σy^{2} , Σy , Σxy , Σx^{3} , $\Sigma x^{2}y$, Σx^{4} [SHFT 1 (STAT) 3 (Sum) 1 to 8

Number of Items: n^* , Mean: \bar{x}^* , \bar{y} , Population Standard Deviation: σx^* , σy , Sample Standard Deviation: $s x^*$, s y

SHIFT 1 (STAT) 4 (Var) 1 to 7

Regression Coefficients: A, B, Correlation Coefficient: r , Estimate Values: \hat{x} , \hat{y} [SHFT 1 (STAT) 5 (Reg) 1 to 5	d
Regression Coefficients for Quadratic Regression: A, B, C, Estimate Values: \hat{x}_1 , \hat{x}_2 , \hat{y}	d
SHIFT 1 (STAT) 5 (Reg) $1 \text{ to } 6$ • See the table at the beginning of this section of the manual for the regressio formulas. • \hat{x} , \hat{x}_1 , \hat{x}_2 and \hat{y} are not variables. They are commands of the type that tak an argument immediately before them. See "Calculating Estimated Values for more information.	e
Minimum Value: minX*, minY, Maximum Value: maxX*, maxY I (STAT) 6 (MinMax) 1 to 4 Note: While single-variable statistical calculation is selected, you can input the functions and commands for performing normal distribution calculation from the menu that appears when you perform the following key operation (STAT) 5 (Distr). See "Performing Normal Distribution Calculations for details.	ท า:
To input the single-variable data $x = \{1, 2, 2, 3, 3, 3, 4, 4, 5\}$, using the FREQ column to specify the number of repeats for each items $(\{xn; \text{freq}n\} = \{1;1,2;2,3;3,4;2,5;1\})$, and calculate the mean and population standard deviation.	_
MODE 2 (STAT) 1 (1-VAR) 1 ≡ 2 ≡ 3 ≡ 4 ≡ 5 ≡ ▼ ▶ 1 ≡ 2 ≡ 3 ≡ 2 ≡ 1	,
AC SHIFT 1 (STAT) 4 (Var) 2 (\bar{x}) \equiv	}
AC SHFT 1 (STAT) 4 (Var) 3 (σ_x) = 1.154700538	}
Results: Mean: 3 Population Standard Deviation: 1.154700538	
To calculate the linear regression and logarithmic regression correlation coefficients for the following paired-variable data and determine the regression formula for the strongest correlation: $(x, y) = (20, 3150)$, $(110, 7310)$, $(200, 8800)$, $(290, 9310)$. Specify Fix 3 (three decimal places) for results.	v)
SHIFT MODE (SETUP) (STAT) (OFF) SHIFT MODE (SETUP) (6 (Fix) (3)	
MODE 2 (STAT) 2 (A+BX) 20 ≡ 110 ≡ 200 ≡ 290 ≡ ▼ ▶ 3150 ≡ 7310 ≡ 8800 ≡ 9310 ≡	
AC SHFT 1 (STAT) 5 (Reg) 3 (r) \blacksquare 0.923	
AC SHIFT 1 (STAT) 1 (Type) 4 (In X) AC SHIFT 1 (STAT) 5 (Reg) 3 (r) = 0.998	}]
AC SHFT 1 (STAT) 5 (Reg) 1 (A) = -3857.984	

AC SHFT 1 (STAT) 5 (Reg) 2 (B) = 2357.532

Results: Linear Regression Correlation Coefficient: 0.923

Logarithmic Regression Correlation Coefficient: 0.998

Logarithmic Regression Formula: $y = -3857.984 + 2357.532 \ln x$

Calculating Estimated Values

Based on the regression formula obtained by paired-variable statistical calculation, the estimated value of y can be calculated for a given x-value. The corresponding x-value (two values, x_1 and x_2 , in the case of quadratic regression) also can be calculated for a value of y in the regression formula.



To determine the estimate value for y when x = 160 in the regression formula produced by logarithmic regression of the data in $\underline{\mathbb{Z}_3}$. Specify Fix 3 for the result. (Perform the following operation after completing the operations in $\underline{\mathbb{Z}_3}$.)

AC 160 SHFT 1 (STAT) 5 (Reg) 5 (\hat{y})

8106.898


Result: 8106.898


Important: Regression coefficient, correlation coefficient, and estimated value calculations can take considerable time when there are a large number of data items.


Performing Normal Distribution Calculations

While single-variable statistical calculation is selected, you can perform normal distribution calculation using the functions shown below from the menu that appears when you perform the following key operation: [SHIFT] 1 (STAT) 5 (Distr).

P, Q, R: These functions take the argument *t* and determine a probability of standard normal distribution as illustrated below.







▶ *t*: This function is preceded by the argument X, and determines the normalized variate $X \triangleright t = \frac{X - \overline{x}}{Gx}$.




For the single variable data $\{xn \text{ ; freq}n\} = \{0;1, 1;2, 2;1, 3;2, 4;2, 5;2, 6;3, 7;4, 9;2, 10;1\}$, to determine the normalized variate ($\triangleright t$) when x = 3, and P(t) at that point up to three decimal places (Fix 3).

SHIFT MODE (SETUP) 6 (Fix) 3 MODE 2 (STAT) 1 (1-VAR)


 $0 \equiv 1 \equiv 2 \equiv 3 \equiv 4 \equiv 5 \equiv 6 \equiv 7 \equiv 9 \equiv$

 $10 \blacksquare \bigcirc \bigcirc 1 \blacksquare 2 \blacksquare 1 \blacksquare 2 \blacksquare 2 \blacksquare 2 \blacksquare 3 \blacksquare$

4 = 2 = 1 =



AC 3 SHFT 1 (STAT) 5 (Distr) 4 ($\triangleright t$) \equiv



P(Ans)

Results: Normalized variate (►t): -0.762

P(*t*): 0.223

Equation Calculations (EQN)

You can use the following procedure in the EQN Mode to solve simultaneous linear equations with two or three unknowns, quadratic equations, and cubic equations.

- 1. Press MODE 3 (EQN) to enter the EQN Mode.
- 2. On the menu that appears, select an equation type.

To select this calculation type:	Press this key:
Simultaneous linear equations with two unknowns	$1 (a_nX + b_nY = c_n)$
Simultaneous linear equations with three unknowns	$(a_nX + b_nY + c_nZ = d_n)$
Quadratic equation	$3(aX^2 + bX + c = 0)$
Cubic equation	$4 (aX^3 + bX^2 + cX + d = 0)$

- 3. Use the Coefficient Editor that appears to input coefficient values.
 - To solve $2x^2 + x 3 = 0$, for example, press 3 in step 2, and then input the following for the coefficients (a = 2, b = 1, c = -3): 2 = 1 = -3
 - To change a coefficient value you already have input, move the cursor to the appropriate cell, input the new value, and then press
 - Pressing AC will clear all of the coefficients to zero.

Important: The following operations are not supported by the Coefficient Editor: M+, SHFT M+ (M-), SHFT RCL (STO). Pol, Rec, and multi-statements also cannot be input with the Coefficient Editor.

- 4. After all the values are the way you want, press


 .
 - This will display a solution. Each press of will display another solution. Pressing while the final solution is displayed will return to the Coefficient Editor.
 - You can scroll between the solutions using the and keys.
 - To return to the Coefficient Editor while any solution is displayed, press
 AC.


Note: • With Natural Display, solutions may be displayed using fraction display format, but solutions will not be displayed using any format that includes the square root ($\sqrt{}$) symbol. • Values cannot be converted to engineering notation on the solution screen. • A message appears to let you know when there is no solution or when there are infinite solutions. Pressing $\overline{\mathsf{AC}}$ or $\overline{}$ will return to the Coefficient Editor.


Changing the Current Equation Type Setting


Press [IIII] 3 (EQN) and then select an equation type from the menu that appears. Changing the equation type causes the values of all Coefficient Editor coefficients to change to zero.

EQN Mode Calculation Examples

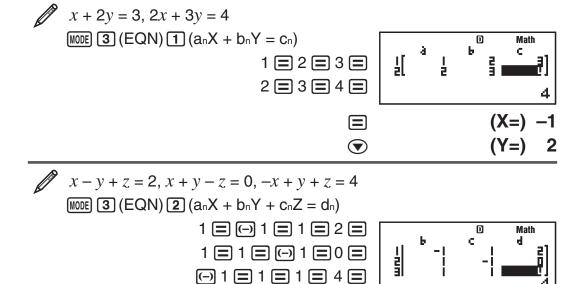

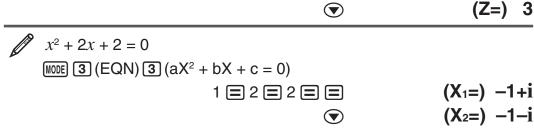





1 = -2 = -1 = 2 = = $(X_1=)$ -1 $(X_2=)$ \bigcirc

 \bigcirc


 $(X_3=)$


(X=)

(Y=)

Base-*n* Calculations (BASE-N)

Press MODE 4 (BASE-N) to enter the BASE-N Mode when you want to perform calculations using decimal, hexadecimal, binary, and/or octal values. The initial default number mode when you enter the BASE-N Mode is decimal, which means input and calculation results use the decimal number format. Press one of the following keys to switch number modes: $[x^2]$ (DEC) for decimal, $[x^2]$ (HEX) for hexadecimal, [m] (BIN) for binary, or In (OCT) for octal.



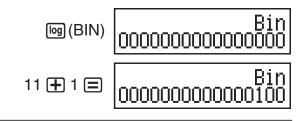



Continuing from above, switch to the hexadecimal mode and calculate 1F₁₆ + 1₁₆

He>
AC x³ (HEX) 1 tan(F) 1 = 00000020



Continuing from above, switch to the octal mode and calculate 7s+ 1s

Oct 00000000010

Note: • Use the following keys to input the letters A through F for hexadecimal values: (-)(A), (-)(B), (-)(C), (-)(C), (-)(D), (-)(E), (-)(E)

Base-n Mode	Input/Output Ranges	
Binary	Positive: $000000000000000000000000000000000000$	
Octal	Positive: $000000000000000000000000000000000000$	
Decimal	$-2147483648 \le x \le 2147483647$	
Hexadecimal	Positive: $00000000 \le x \le 7$ FFFFFFF Negative: $80000000 \le x \le 7$ FFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFF	

Specifying the Number Mode of a Particular Input Value

You can input a special command immediately following a value to specify the number mode of that value. The special commands are: d (decimal), h (hexadecimal), b (binary), and o (octal).



To calculate $10_{10} + 10_{16} + 10_2 + 10_8$ and display the result as a decimal value

AC \$\mathbb{Z}^2\$ (DEC) \$\mathbb{H}\mathbb{T}\$ 3 (BASE) \$\blacklet\$ 1 (d) 10 \$\mathbb{H}\$
\$\mathbb{H}\mathbb{T}\$ 3 (BASE) \$\blacklet\$ 2 (h) 10 \$\mathbb{H}\$
\$\mathbb{H}\mathbb{T}\$ 3 (BASE) \$\blacklet\$ 3 (b) 10 \$\mathbb{H}\$
\$\mathbb{H}\mathbb{T}\$ 3 (BASE) \$\blacklet\$ 4 (o) 10 \$\mathbb{H}\$

36

Converting a Calculation Result to another Type of **Value**

You can use any one of the following key operations to convert the currently displayed calculation result to another type of value: x^2 (DEC) (decimal), (MEX) (hexadecimal), [10] (BIN) (binary), [11] (OCT) (octal).

To calculate $15_{10} \times 37_{10}$ in the decimal mode, and then convert the result to hexadecimal, binary, and octal

 $AC (x^2) (DEC) 15 \times 37 =$

555

 x^{-} (HEX)

0000022B

[log (BIN) 0000001000101011

In (OCT)

0000001053

Logical and Negation Operations

Your calculator provides you with logical operators (and, or, xor, xnor) and functions (Not, Neg) for logical and negation operations on binary values. Use the menu that appears when you press [SHFT] [3] (BASE) to input these logical operators and functions.

All of the following examples are performed in the binary mode ([10] (BIN)).

To determine the logical AND of 10102 and 11002 (10102 and 11002)

AC 1010 SHFT 3 (BASE) 1 (and) 1100 = 000000000001000

To determine the logical OR of 10112 and 110102 (10112 or 110102)

AC 1011 SHIFT 3 (BASE) 2 (or) 11010 = 000000000011011

To determine the logical XOR of 1010₂ and 1100₂ (1010₂ xor 1100₂)

AC 1010 SHIFT 3 (BASE) 3 (xor) 1100 = 00000000000110

To determine the logical XNOR of 11112 and 1012 (11112 xnor 1012)

AC 1111 SHFT 3 (BASE) 4 (xnor) 101 = 11111111111110101

To determine the bitwise complement of 1010₂ (Not(1010₂))

AC SHIFT 3 (BASE) 5 (Not) 1010) = 11111111111110101

To negate (take the two's complement) of 1011012 (Neg(1011012))

AC SHIFT 3 (BASE) 6 (Neg) 101101) = 11111111111010011

Note: In the case of a negative binary, octal or hexadecimal value, the calculator converts the value to binary, takes the two's complement, and then converts back to the original number base. For decimal (base-10) values, the calculator merely adds a minus sign.

Calculation Ranges, Number of Digits, and Precision

The calculation range, number of digits used for internal calculation, and calculation precision depend on the type of calculation you are performing.

Calculation Range and Precision

Calculation Range	$\pm 1 \times 10^{-99}$ to $\pm 9.999999999 \times 10^{99}$ or 0
Number of Digits for Internal Calculation	15 digits
Precision	In general, ± 1 at the 10th digit for a single calculation. Precision for exponential display is ± 1 at the least significant digit. Errors are cumulative in the case of consecutive calculations.

Function Calculation Input Ranges and Precision

Functions		Input Range
sinx	DEG	$0 \le x < 9 \times 10^9$
	RAD	$0 \le x < 157079632.7$
	GRA	$0 \le x < 1 \times 10^{10}$
cosx	DEG	$0 \le x < 9 \times 10^9$
	RAD	$0 \le x < 157079632.7$
	GRA	$0 \le x < 1 \times 10^{10}$
	DEG	Same as $\sin x$, except when $ x = (2n-1) \times 90$.
tanx	RAD	Same as $\sin x$, except when $ x = (2n-1) \times \pi/2$.
	GRA	Same as $\sin x$, except when $ x = (2n-1) \times 100$.
sin ⁻¹ x	0 < 12	l < 1
cos ⁻¹ x	$0 \le x \le 1$	
tan-1x	$0 \le x $	$ \le 9.99999999 \times 10^{99}$
sinhx	$0 \le x \le 230.2585092$	
coshx		
sinh ⁻¹ x	$0 \le x \le 4.999999999 \times 10^{99}$	
cosh ⁻¹ x	$1 \le x \le 4.999999999 \times 10^{99}$	
tanhx	$0 \le x \le 9.999999999 \times 10^{99}$	
tanh ⁻¹ x	$0 \le x \le 9.999999999 \times 10^{-1}$	
logx/lnx	$0 < x \le 9.999999999 \times 10^{99}$	
10 ^x	$-9.999999999 \times 10^{99} \le x \le 99.99999999$	
e^x	$-9.999999999 \times 10^{99} \le x \le 230.2585092$	
$\frac{\sqrt{x}}{x^2}$	$0 \le x < 1 \times 10^{100}$	
x^{-1}	$ x < 1 \times 10^{50}$	
$\frac{x}{\sqrt[3]{x}}$	$ x < 1 \times 10^{100}$; $x \neq 0$	
$\begin{array}{ c c c c c c c c c c c c c c c c c c c$	$ x < 1 \times 10^{100}$	
λ:		\leq 69 (x is an integer)
nPr	$0 \le n < 1 \times 10^{10}, 0 \le r \le n \ (n, r \text{ are integers})$ $1 \le \{n!/(n-r)!\} < 1 \times 10^{100}$	
nCr	$0 \le n < 1 \times 10^{10}, 0 \le r \le n \ (n, r \text{ are integers})$ $1 \le n!/r! < 1 \times 10^{100} \text{ or } 1 \le n!/(n-r)! < 1 \times 10^{100}$	
		Γ 0.4

	· · · · · · · · · · · · · · · · · · ·
Pol(x, y)	$ x , y \le 9.9999999999 \times 10^{99}$ $\sqrt{x^2 + y^2} \le 9.9999999999999999999999999999999999$
Rec(r, heta)	$0 \le r \le 9.999999999 \times 10^{99}$ θ : Same as $\sin x$
0' "	$ a $, b , $c < 1 \times 10^{100}$ 0 $\leq b$, c The display seconds value is subject to an error of ±1 at the second decimal place.
01 "	$ x < 1 \times 10^{100}$ Decimal \leftrightarrow Sexagesimal Conversions $0^{\circ}0'0'' \le x \le 9999999^{\circ}59'59''$
x^{y}	$x > 0$: $-1 \times 10^{100} < y \log x < 100$ x = 0: $y > 0x < 0: y = n, \frac{m}{2n+1} (m, n are integers)However: -1 \times 10^{100} < y \log x < 100$
^x √y	$y > 0$: $x \neq 0$, $-1 \times 10^{100} < 1/x \log y < 100$ y = 0: $x > 0y < 0: x = 2n+1, \frac{2n+1}{m} (m \neq 0; m, n are integers)However: -1 \times 10^{100} < 1/x \log y < 100$
$a^b/_c$	Total of integer, numerator, and denominator must be 10 digits or less (including division marks).
RanInt# (a, b)	$a < b; a , b < 1 \times 10^{10}; b - a < 1 \times 10^{10}$

- Precision is basically the same as that described under "Calculation Range and Precision", above.
- x^y , $\sqrt[x]{y}$, $\sqrt[3]{}$, x!, $n\Pr$, nCr type functions require consecutive internal calculation, which can cause accumulation of errors that occur with each calculation.
- Error is cumulative and tends to be large in the vicinity of a function's singular point and inflection point.

Errors

The calculator will display an error message whenever an error occurs for any reason during a calculation. There are two ways to exit an error message display: Pressing or to display the location of the error, or pressing to clear the message and calculation.

Displaying the Location of an Error

While an error message is displayed, press \bigcirc or \bigcirc to return to the calculation screen. The cursor will be positioned at the location where the error occurred, ready for input. Make the necessary corrections to the calculation and execute it again.




When you input $14 \div 0 \times 2 = by$ mistake instead of $14 \div 10 \times 2 =$

MATH

14 **⊕** 0 **X** 2 **≡**

Math ERROR

[AC] :Cancel
[4][•]:Goto

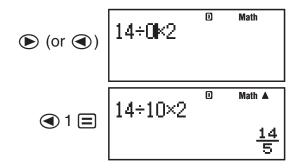

Clearing the Error Message

While an error message is displayed, press **AC** to return to the calculation screen. Note that this also clears the calculation that contained the error.

Error Messages

Math ERROR

Cause: • The intermediate or final result of the calculation you are performing exceeds the allowable calculation range. • Your input exceeds the allowable input range (particularly when using functions). • The calculation you are performing contains an illegal mathematical operation (such as division by zero).

Action: • Check the input values, reduce the number of digits, and try again.

• When using independent memory or a variable as the argument of a function, make sure that the memory or variable value is within the allowable range for the function.

Stack ERROR

Cause: The calculation you are performing has caused the capacity of the numeric stack or the command stack to be exceeded.

Action: • Simplify the calculation expression so it does not exceed the capacity of the stack. • Try splitting the calculation into two or more parts.

Syntax ERROR

Cause: There is a problem with the format of the calculation you are performing.

Action: Make necessary corrections.

Argument ERROR

Cause: A non-integer argument was input for the random number function

(RanInt#).

Action: Input only integers for the argument.

Before Assuming Malfunction of the Calculator...

Perform the following steps whenever an error occurs during a calculation or when calculation results are not what you expected. If one step does not correct the problem, move on to the next step.

Note that you should make separate copies of important data before performing these steps.

- 1. Check the calculation expression to make sure that it does not contain any errors.
- 2. Make sure that you are using the correct mode for the type of calculation you are trying to perform.

- 3. If the above steps do not correct your problem, press the ON key. This will cause the calculator to perform a routine that checks whether calculation functions are operating correctly. If the calculator discovers any abnormality, it automatically initializes the calculation mode and clears memory contents. For details about initialized settings, see "Configuring the Calculator Setup".
- 4. Initialize all modes and settings by performing the following operation: SHFT 9 (CLR) 1 (Setup) (Yes).

Replacing the Battery


A low battery is indicated by a dim display, even if contrast is adjusted, or by failure of figures to appear on the display immediately after you turn on the calculator. If this happens, replace the battery with a new one.

Important: Removing the battery will cause all of the calculator's memory contents to be deleted.

- 1. Press SHIFT AC (OFF) to turn off the calculator.
- Remove the cover as shown in the illustration and replace the battery, taking care that its plus (+) and minus (-) ends are facing correctly.
- 3. Replace the cover.
- 4. Initialize the calculator:

ON SHIFT 9 (CLR) 3 (AII) = (Yes)

• Do not skip the above step!

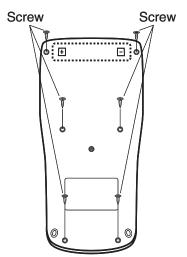

Specifications

Power Requirements: AAA-size battery R03 (UM-4) × 1

Approximate Battery Life: 17,000 hours (continuous display of flashing

cursor

Power Consumption: 0.0002 W

Operating Temperature: 0°C to 40°C (32°F to 104°F)

Dimensions: 13.8 (H) \times 80 (W) \times 162 (D) mm

 $^{1}/_{2}''$ (H) \times 3 $^{1}/_{8}''$ (W) \times 6 $^{3}/_{8}''$ (D)

Approximate Weight: 100 g (3.5 oz) including the battery

Frequently Asked Questions

■ How can I perform input and display results the same way I did on a model that does not have Natural Textbook Display?

Perform the following key operation: SHIFT MODE (SETUP) 2 (LineIO). See

"Configuring the Calculator Setup" on page E-5 for more information.

■ How can I change a fraction form result to decimal form? How can I change a fraction form result produced by a division operation to decimal form?

See "Toggling Calculation Results" on page E-10 for the procedure.

■ What is the difference between Ans memory, independent memory, and variable memory?

Each of these types of memory acts like "containers" for temporary storage of a single value.

Ans Memory: Stores the result of the last calculation performed. Use this memory to carry the result of one calculation on to the next.

Independent Memory: Use this memory to totalize the results of multiple calculations.

Variables: This memory is helpful when you need to uses the same value multiple times in one or more calculations.

- What is the key operation to take me from the STAT, EQN, or BASE-N Mode to a mode where I can perform arithmetic calculations?

 Press MODE 1 (COMP).
- How can I return the calculator to its initial default settings?

 Perform the following operation: SHFT 9 (CLR) 1 (Setup) (Yes)
- When I execute a function calculation, why do I get a calculation result that is completely different from older CASIO calculator models?

 With a Natural Textbook Display model, the argument of a function that uses parentheses must be followed by a closing parenthesis. Failing to press ① after the argument to close the parentheses may cause unwanted values or expressions to be included as part of the argument.



Manufacturer: CASIO COMPUTER CO., LTD. 6-2, Hon-machi 1-chome Shibuya-ku, Tokyo 151-8543, Japan

Responsible within the European Union: CASIO EUROPE GmbH Casio-Platz 1 22848 Norderstedt, Germany



This mark applies in EU countries only.



CASIO COMPUTER CO., LTD.

6-2, Hon-machi 1-chome Shibuya-ku, Tokyo 151-8543, Japan

SA1209-B

© 2012 CASIO COMPUTER CO., LTD.