
Operation Guide 5345

CASIO.

- Your watch may differ somewhat from the one shown in the illustration.
 Some models may use a combination of hands and rotating disks to indicate information. The word "hand" in this section is used to mean both analog hands and rotating disks.

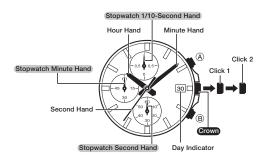

Stopwatch functions

To adjust the time setting

When the second hand is at 12 o'clock, pull the Crown out to

Rotate the Crown to change the time setting.

Push the Crown back in.

- Take care that you set the correct AM or PM time.

 When changing the time, move the minute hand four or five minutes past your final setting, and then back it up to the setting you were. to the setting you want.

To change the day indicator setting

Pull the Crown out to Click 1. Rotate the Crown to set the day.

Push the Crown back in.


- The day indicator setting uses a 31-day month. Make adjustments for months of shorter lengths.
 Avoid changing the day indicator setting between the hours of 9 p.m. and 1 a.m. Otherwise, the day indicator provinces the day indicator provinces the day indicator. indicator may not change correctly at

Some water-resistant models (100 meters, 200 meters) Some water-resistant moues (100 miertes, 200 miertes) have a screw-in crown. When you need to perform a crown operation, rotate it towards you to unscrew it. Then pull the crown out. Avoid applying undue force when pulling. The watch loses its water resistance while the crown is unscrewed. After performing a crown operation, fully screw the crown back in.




If your watch has a rotary bezel...

You can rotate the bezel to align its ▼ mark with the minute hand. Then you will be able to tell how much time has elapsed since aligning the ▼ mark.



Using the Stopwatch

The stopwatch measures elapsed time in 1/10-second increments up to 59 minutes, 59.9 seconds.

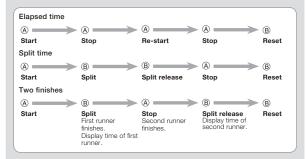

Important!

Do not operate the stopwatch with the crown pulled out.

Note

An elapsed time operation will stop automatically at the end of 60 minutes.

Correcting the 0 Positions of the Hands

Perform the following procedure if the stopwatch hands do not return to their 0 (zero) positions when you reset the stopwatch.

Pull the Crown out to Click 2.

Press (a) to move the Stopwatch 1/10-Second Hand clockwise.

Holding down (a) will move the hand at high speed.

Press (B) to move the Stopwatch Second Hand clockwise.

• Holding down (B) will move the hand at high speed.

Holding down (B) will move the name at լուցյ լերբեր.
 The Stopwatch Minute Handi is synchronized with the Stopwatch Second Handi

After all of the hands are the way you want, push the Crown back in.

Timekeeping stops while the crown is pulled out. Correct the current time setting after performing the above operation.

Specifications

Accuracy: ±20 seconds average per month

Stopwatch: Measuring Capacity: 59'59.9" (60 minutes)
Measuring Unit: 1/10 second
Measurements: Elapsed time; split time; two finishes

Battery: One silver oxide battery (Type: SR920SW)

Battery Life: Approximately 2 years (60 minutes stopwatch operation per day)