

Chapter 17

17


List Function

A list is a kind of container that you can use to store multiple data items. This calculator lets you store up to six lists in a single file, and you can store up to six files in memory. Stored lists can be used in arithmetic, statistical, and matrix calculations, and for graphing.

Element number	Display range		Cell	Column			List name
	List 1	List 2	List 3	List 4	List 5	List 6	
1	56	1	107	3.5	4	0	
2	37	2	75	6	0	0	
3	21	4	122	2.1	0	0	
4	69	8	87	4.4	2	0	
5	40	16	298	3	0	0	
6	48	32	48	6.8	3	0	
7	93	64	338	2	9	0	
8	30	128	49	8.7	0	0	Row
	⋮	⋮	⋮	⋮	⋮	⋮	

- 17-1 List Operations
- 17-2 Editing and Rearranging Lists
- 17-3 Manipulating List Data
- 17-4 Arithmetic Calculations Using Lists
- 17-5 Switching Between List Files

List Data Linking

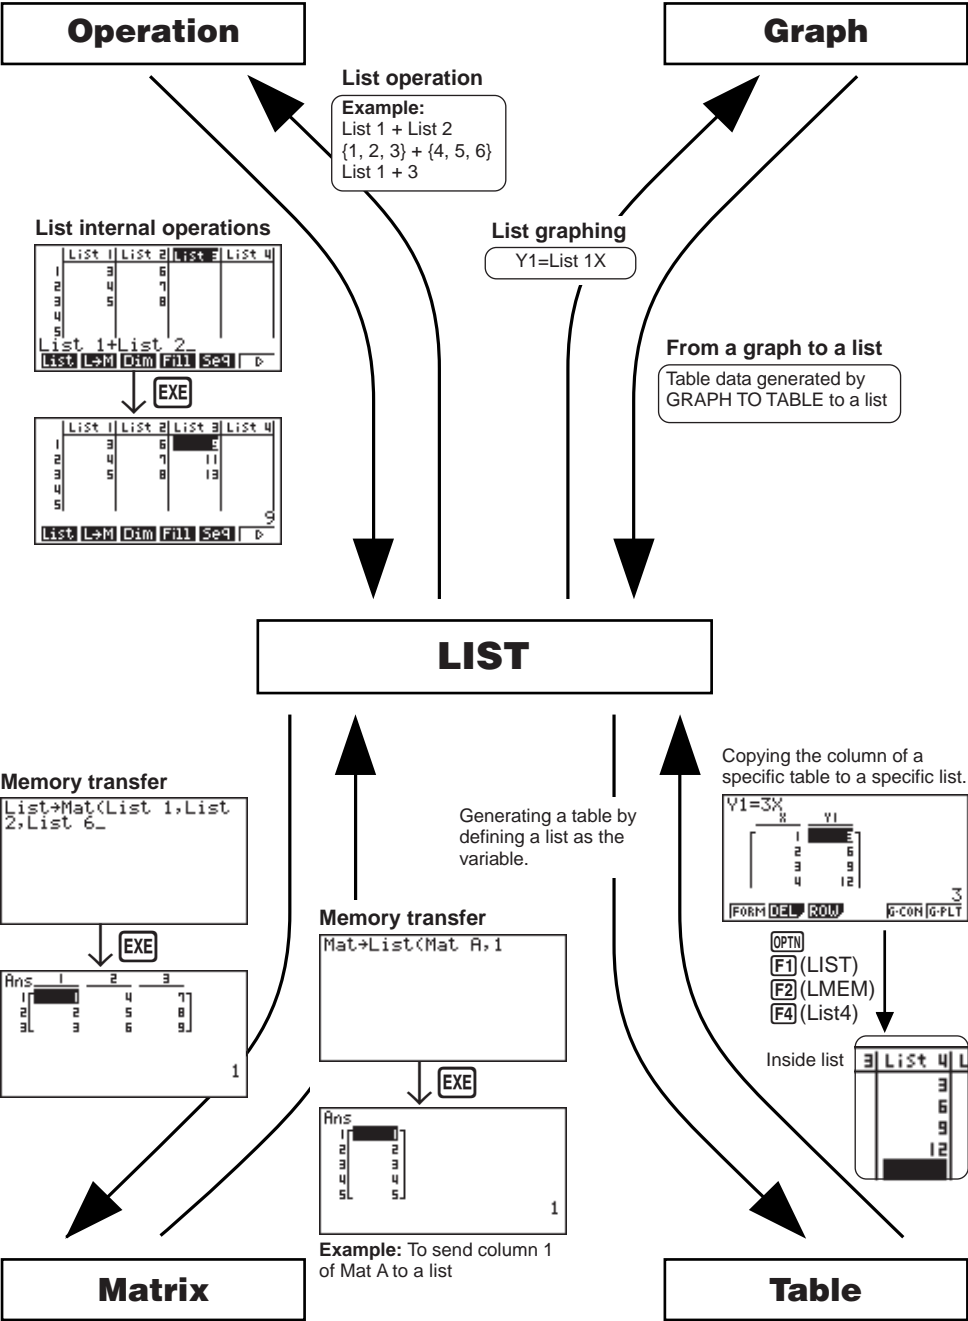

17-1 List Operations

Select the **LIST** icon in the Main Menu and enter the LIST Mode to input data into a list and to manipulate list data.

●**To input values one-by-one**

Use ◀ and ▶ to move between lists, and ▲ and ▼ to move between cells inside of a list.

The screen automatically scrolls when the cursor is located at the edge of the screen.

	List 1	List 2	List 3	List 4
1	56	107	0	3.5
2	37	75	0	6
3	21	122	0	2.1
4	69	87	0	4.4
5	40	298	0	3
				56
SRTA SRTD DEL DELA INS				

- ▼ does not move the cursor to a cell that does not contain a value.

For our example, we will start by locating the cursor in Cell 1 of List 1.

	List 1	List 2	List 3	List 4
1				
2				
3				
4				
5				
SRTA SRTD DEL DELA INS				

1. Input a value and press **EXE** to store it in the list.

3 **EXE**

	List 1	List 2	List 3	List 4
1	3			
2				
3				
4				
5				
SRTA SRTD DEL DELA INS				

2. The cursor automatically moves down to the next cell for input.
 - Note that you can also use the result of an expression as list input. The next operation shows how to input the value 4 in the second row and then input the result of $2 + 3$ in the next row.

4 **EXE** **2** **+** **3** **EXE**

	List 1	List 2	List 3	List 4
1	3			
2	4			
3	5			
4				
5				
SRTA SRTD DEL DELA INS				

●To batch input a series of values

1. Use  to move the cursor to the list name.








List 1	List 2	List 3	List 4
1	3		

2. Use  or  to move the cursor to another list.




List 1	List 2	List 3	List 4
1	3		

3. Press  , and then input the values you want, pressing  between each one. Press   after inputting the final value.

  6  7  8  

List 1	List 2	List 3	List 4
1	3		
2	4		
3	5		
4			
5			
{6,7,8}			
SRTA SRTD DEL DELN INS			

4. Press  to store all of the values in your list.



List 1	List 2	List 3	List 4
1	3	6	
2	4	7	
3	5	8	
4			
5			
6			
SRTA SRTD DEL DELN INS			







- Remember that a comma separates values, so you should not input a comma after the final value of the set you are inputting.

Right: {34, 53, 78}

Wrong: {34, 53, 78,}

You can also use list names inside of a mathematical expression to input values into another cell. The following example shows how to add the values in each row in List 1 and List 2, and input the result into List 3.

1. Use , , , and  to move the cursor to the name of the list where you want the calculation results to be input.



List 1	List 2	List 3	List 4
1	3	6	

2. Press **OPTN** and input the expression.

OPTN **F1**(LIST) **F1**(List) **1** **+**

F1(List) **2** **EXE**

EXIT **EXIT**

	List 1	List 2	List 3	List 4
1	3	6	9	
2	4	7	11	
3	5	8	13	
4				
5				

List L→M Dim Fill Seq D

SRTA	SRTD	DEL	DELW	INS
------	------	-----	------	-----

17-2 Editing and Rearranging Lists

■ Editing List Values

●To change a cell value

Use or to move the cursor to the cell whose value you want to change. Input the new value and press **EXE** to replace the old data with the new one.

●To delete a cell

1. Use , , , or to move the cursor to the cell you want to delete.



	List 1	List 2	List 3	List 4
1	3	6	9	
2	7	7	11	
3	5	8	13	
4				
5				

SRTA SRTD DEL DELA INS

F3

2. Press **F3** (DEL) to delete the selected cell and cause everything below it to be shifted up.

F3 (DEL)

	List 1	List 2	List 3	List 4
1	3	6	9	
2	7	7	11	
3		8	13	
4				
5				

SRTA SRTD DEL DELA INS

5



- Note that the above cell delete operation does not affect cells in other lists. If the data in the list whose cell you delete is somehow related to the data in neighboring lists, deleting a cell can cause related values to become misaligned.

●To delete all cells in a list

1. Use , , , or to move the cursor to the name of the list whose cells you want to delete.



	List 1	List 2	List 3	List 4
1	3	6	9	
2	5	7	11	
3		8	13	
4				
5				

SRTA SRTD DEL DELA INS

F4

- Press **F4** (DEL-A). The function menu changes to confirm whether you really want to delete all the cells in the list.

F4 (DEL-A)

YES	NO
F1	F6

- Press **F1** (YES) to delete all the cells in the selected list or **F6** (NO) to abort the delete operation without deleting anything.

F1 (YES)

●To insert a new cell

Use **◀**, **▶**, **▲**, or **▼** to move the cursor to the location where you want to insert the new cell. In this example, we will reinsert a cell containing the value 4, which we deleted above.

- Press **F5** (INS) to insert a new cell, which contains a value of 0, causing everything below it to be shifted down.

◀ ▶ ▼ F5 (INS)

	List 1	List 2	List 3	List 4
1	3	6		
2	4	7		
3	5	8		
4				
5				0

SRTA SRTD DEL DELA INS

F5

- Input the value you want into the new cell (4 in our example) and press **EXE**.

4 EXE

	List 1	List 2	List 3	List 4
1	3	6		
2	4	7		
3	5	8		
4				
5				5

SRTA SRTD DEL DELA INS



- Note that the above cell insert operation does not affect cells in other lists. If the data in the list where you insert a cell is somehow related to the data in neighboring lists, inserting a cell can cause related values to become misaligned.

Sorting List Values

You can sort lists into either ascending order or descending order. The current cursor location does not matter in the following procedures.

To sort a single list

Ascending order

- While the lists are on the screen, press **F1** (SRT-A).

F1 (SRT-A)

	List 1	List 2	List 3	List 4
1	3	9		
2	5	5		
3	4	7		
4				
5				
H?	How Many Lists?(H)			

- The prompt "How Many Lists? (H)" appears to ask how many lists you want to sort. Here we will input 1 to indicate we want to sort only one list.

1 **EXE**

L?	Select List(L)
----	----------------

- In response to the "Select List (L)" prompt, input the number of the list you want to sort. Here we will input 2 to specify sorting of List 2.

2 **EXE**

	List 1	List 2	List 3	List 4
1	3	5		
2	5	7		
3	4	9		
4				
5				

The values in List 2 are sorted into ascending order.

Descending order

Use the same procedure as that for the ascending order sort. The only difference is that you should press **F2** (SRT-D) in place of **F1** (SRT-A).

To sort multiple lists

You can link multiple lists together for a sort so that all of their cells are rearranged in accordance with the sorting of a base list. The base list is sorted into either ascending order or descending order, while the cells of the linked lists are arranged so that the relative relationship of all the rows is maintained.

Ascending order

1. While the lists are on the screen, press **F1** (SRT-A).

F1 (SRT-A)

	List 1	List 2	List 3	List 4
1	3	9		
2	5	5		
3	4	7		
4				
5				

H? - How Many Lists?(H)

2. The prompt "How Many Lists? (H)" appears to ask how many lists you want to sort. Here we will sort one base list linked to one other list, so we should input 2.

2 **EXE**

B? - Select Base List(B)

3. In response to the "Select Base List (B)" prompt, input the number of the list you want to sort into ascending order. Here we will specify List 1.

1 **EXE**

L? - Select Second List(L)

4. In response to the "Select Second List (L)" prompt, input the number of the list you want to link to the base list. Here we will specify List 2.

2 **EXE**

	List 1	List 2	List 3	List 4
1	3	9		
2	4	7		
3	5	5		
4				
5				

The values in List 1 are sorted into ascending order, and the cells of List 2 are also rearranged to keep the same relationship with the List 1 cells.

Descending order

Use the same procedure as that for the ascending order sort. The only difference is that you should press **F2** (SRT-D) in place of **F1** (SRT-A).

- You can sort up to six lists at one time.
- If you specify a list more than once for a single sort operation, an error occurs.
An error also occurs if lists specified for sorting do not have the same number of values (rows).

17-3 Manipulating List Data

List data can be used in arithmetic and function calculations. There is also a collection of powerful list data manipulation functions that let you do the following.

- Count the number values (Dim)
- Replace all cell values with the same value (Fill)
- Generate a sequence of numbers (Seq)
- Find the minimum value in a list (Min)
- Find the maximum value in a list (Max)
- Find which of two lists contains the smallest value (Min)
- Find which of two lists contains the greatest value (Max)
- Calculate the mean of list values (Mean)
- Calculate the mean of values of specified frequency (Mean)
- Calculate the median of values in a list (Med)
- Calculate the median of values of specified frequency (Med)
- Calculate the sum of values in a list (Sum)
- Calculate the sum of products (Prod)
- Calculate cumulative frequency of each value (Cuml)
- Calculate the percentage represented by each value (%)
- Transfer list contents to Matrix Answer Memory (List → Mat)

You use list data manipulation functions in the **RUN, STAT, MAT, LIST, TABLE, EQUA** and **PRGM Modes**.

■ Accessing the List Data Manipulation Function Menu

All of the following examples are performed after entering the **RUN Mode**.

Press **OPTN** and then **F1** (LIST). This menu has three pages and you can advance to the next page by pressing **F6** (➤).

Note that all closing parentheses at the end of the following operations can be omitted.

●To count the number of values (Dim)

OPTN **F1** (LIST) **F3** (Dim) **F1** (List) <list number 1-6> **EXE**

- The number of cells that contain data in a list is called its “dimension.”

Example **To enter the RUN Mode and count the number of values in List 1 (36, 16, 58, 46, 56)**

AC **OPTN** **F1** (LIST) **F3** (Dim)
F1 (List) **1** **EXE**

Dim List 1	5
------------	---

●To replace all cell values with the same value (Fill)

[OPTN] [F1] (LIST) [F4] (Fill) <value> [▸] [F1] (List) <list number 1-6> [▸] [EXE]

Example To replace all values in List 1 (36, 16, 58, 46, 56) with 3

[AC] [OPTN] [F1] (LIST) [F4] (Fill)
[3] [▸] [F1] (List) [1] [▸] [EXE]

Fill(3,List 1) Done

The following shows the new contents of List 1.

List 1	List 2	List 3	List 4
3			
3			
3			
3			
3			

SRTA SRTD DEL DELA INS 3

●To generate a sequence of numbers (Seq)

[OPTN] [F1] (LIST) [F5] (Seq) <expression> [▸] <variable name> [▸] <start value> [▸] <end value> [▸] <pitch> [▸] [EXE]

- The result of this operation is also stored in ListAns Memory.

Example To input the number sequence 1^2 , 6^2 , 11^2 into a list

Use the following settings.

Variable: x

Starting value: 1

Ending value: 11

Pitch: 5

[AC] [OPTN] [F1] (LIST) [F5] (Seq) [X,0,T]
[X²] [▸] [X,0,T] [▸] [1] [▸] [1] [▸] [1] [▸] [5] [▸]

Seq(X²,X,1,11,5)

[EXE]

Ans

1	1
2	36
3	121

1

Specifying an ending value of 12, 13, 14, or 15 produces the same result as shown above, because all of them are less than the value produced by the next increment (16).

The resulting sequence is input into ListAns Memory.

●To find the minimum value in a list (Min)

OPTN **F1** (LIST) **F6** (▷) **F1** (Min) **F6** (▷) **F6** (▷) **F1** (List) <list number 1-6> **]** **EXE**

Example To find the minimum value in List 1 (36, 16, 58, 46, 56)

AC **OPTN** **F1** (LIST) **F6** (▷) **F1** (Min) **F6** (▷) **F6** (▷) **F1** (List) **1** **]** **EXE**

Min(List 1) 16

●To find the maximum value in a list (Max)

Use the same procedure as when finding the minimum value (Min), except press **F2** (Max) in place of **F1** (Min).

●To find which of two lists contains the smallest value (Min)

OPTN **F1** (LIST) **F6** (▷) **F1** (Min) **F6** (▷) **F6** (▷) **F1** (List) <list number 1-6> **]** **F1** (List) <list number 1-6> **]** **EXE**

- The two lists must contain the same number of values. If they don't, an error (Dim ERROR) occurs.
- The result of this operation is also stored in ListAns Memory.

Example To find whether List 1 (75, 16, 98, 46, 56) or List 2 (36, 89, 58, 72, 67) contains the smallest value

OPTN **F1** (LIST) **F6** (▷) **F1** (Min) **F6** (▷) **F6** (▷) **F1** (List) **1** **]** **F1** (List) **2** **]** **EXE**

Min(List 1, List 2)

Ans

1	36
2	16
3	58
4	46
5	56

36

●To find which of two lists contains the greatest value (Max)

Use the same procedure as that for the smallest value, except press **F2** (Max) in place of **F1** (Min).

- The two lists must contain the same number of values. If they don't, an error (Dim ERROR) occurs.

●To calculate the mean of list values (Mean)

OPTN **F1** (LIST) **F6** (▷) **F3** (Mean) **F6** (▷) **F6** (▷) **F1** (List) <list number 1-6> **]** **EXE**

Example To calculate the mean of values in List 1 (36, 16, 58, 46, 56)

AC OPTN F1 (LIST) F6 (▷) F3 (Mean) Mean(List 1) 42.4
 F6 (▷) F6 (▷) F1 (List) 1) EXE

● **To calculate the mean of values of specified frequency (Mean)**

This procedure uses two lists: one that contains values and one that contains the number of occurrences of each value. The frequency of the data in Cell 1 of the first list is indicated by the value in Cell 1 of the second list, etc.

- The two lists must contain the same number of values. If they don't, an error (Dim ERROR) occurs.

OPTN F1 (LIST) F6 (▷) F3 (Mean) F6 (▷) F6 (▷) F1 (List) <list number 1-6(data)> F1 (List) <list number 1-6 (frequency)>) EXE

Example To calculate the mean of values in List 1 (36, 16, 58, 46, 56), whose frequency is indicated by List 2 (75, 89, 98, 72, 67)

AC OPTN F1 (LIST) F6 (▷) F3 (Mean) Mean(List 1, List 2) 42.07481297
 F6 (▷) F6 (▷) F1 (List) 1 ,
 F1 (List) 2) EXE

● **To calculate the median of values in a list (Median)**

OPTN F1 (LIST) F6 (▷) F4 (Med) F6 (▷) F6 (▷) F1 (List) <list number 1-6>) EXE

Example To calculate the median of values in List 1 (36, 16, 58, 46, 56)

AC OPTN F1 (LIST) F6 (▷) F4 (Med) Median(List 1) 46
 F6 (▷) F6 (▷) F1 (List) 1) EXE

● **To calculate the median of values of specified frequency (Median)**

This procedure uses two lists: one that contains values and one that contains the number of occurrences of each value. The frequency of the data in Cell 1 of the first list is indicated by the value in Cell 1 of the second list, etc.

- The two lists must contain the same number of values. If they don't, an error (Dim ERROR) occurs.

OPTN F1 (LIST) F6 (▷) F4 (Med) F6 (▷) F6 (▷) F1 (List) <list number 1-6 (data)> F1 (List) <list number 1-6 (frequency)>) EXE

Example To calculate the median of values in List 1 (36, 16, 58, 46, 56), whose frequency is indicated by List 2 (75, 89, 98, 72, 67)

AC OPTN F1 (LIST) F6 (▷) F4 (Med)
 F6 (▷) F6 (▷) F1 (List) 1 ▽
 F1 (List) 2 ▽ EXE

Median(List 1, List 2)
 46

●To calculate the sum of values in a list (Sum)

OPTN F1 (LIST) F6 (▷) F6 (▷) F1 (Sum) F6 (▷) F1 (List) <list number 1-6> EXE

Example To calculate the sum of values in List 1 (36, 16, 58, 46, 56)

AC OPTN F1 (LIST) F6 (▷) F6 (▷)
 F1 (Sum) F6 (▷) F1 (List) 1 EXE

Sum List 1
 212

●To calculate the sum of products (Prod)

OPTN F1 (LIST) F6 (▷) F6 (▷) F2 (Prod) F6 (▷) F1 (List) <list number 1-6> EXE

Example To calculate the sum of products for the values in List 1 (2, 3, 6, 5, 4)

AC OPTN F1 (LIST) F6 (▷) F6 (▷)
 F2 (Prod) F6 (▷) F1 (List) 1 EXE

Prod List 1
 720

●To calculate the cumulative frequency of each value (Cuml)

OPTN F1 (LIST) F6 (▷) F6 (▷) F3 (Cuml) F6 (▷) F1 (List) <list number 1-6> EXE

Example To calculate the cumulative frequency of each value in List 1 (2, 3, 6, 5, 4)

The result is displayed in ListAns Memory.

AC OPTN F1 (LIST) F6 (▷) F6 (▷)
 F3 (Cuml) F6 (▷) F1 (List) 1

Cuml List 1

EXE

2+3= —————→
 2+3+6= —————→
 2+3+6+5= —————→
 2+3+6+5+4= —————→

Ans
 1 5
 2 11
 3 16
 4 20

2

●To calculate the percentage represented by each value (%)

[OPTN] **[F1]** (LIST) **[F6]** (▷) **[F6]** (▷) **[F4]** (%) **[F6]** (▷) **[F1]** (List) <list number 1-6> **[EXE]**

- The above operation calculates what percentage of the list total is represented by each value.

Example To calculate the percentage represented by each value in List 1 (2, 3, 6, 5, 4)

The result is displayed in ListAns Memory.

[AC] **[OPTN]** **[F1]** (LIST) **[F6]** (▷) **[F6]** (▷)
[F4] (%) **[F6]** (▷) **[F1]** (List) **[1]**

Percent List 1

[EXE]

$2/(2+3+6+5+4) \times 100 =$ —→
 $3/(2+3+6+5+4) \times 100 =$ —→
 $6/(2+3+6+5+4) \times 100 =$ —→
 $5/(2+3+6+5+4) \times 100 =$ —→
 $4/(2+3+6+5+4) \times 100 =$ —→

Ans	
1	10
2	15
3	30
4	25
5L	20

10

●To transfer list contents to Matrix Answer Memory (List → Mat)

[OPTN] **[F1]** (LIST) **[F2]** (L→M) **[F1]** (List) <list number 1-6> **[◀]** **[F1]** (List) <list number 1-6> **[▶]** **[EXE]**

- You can input the following as many times as necessary to specify more than one list in the above operation.

[◀] <list number 1-6>

Example To transfer the contents of List 1 (2, 3, 6, 5, 4) and List 2 (11, 12, 13, 14, 15) to Matrix Answer Memory

[AC] **[OPTN]** **[F1]** (LIST) **[F2]** (L→M)
[F1] (List) **[1]** **[◀]** **[F1]** (List) **[2]** **[▶]**

List→Mat(List 1,List 2)


[EXE]

Ans		1	2
1		2	11
2		3	12
3		6	13
4		5	14
5L		4	15

2

17-4 Arithmetic Calculations Using Lists

You can perform arithmetic calculations using two lists or one list and a numeric value.

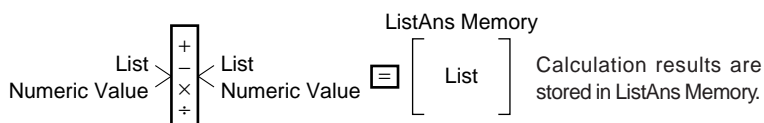

■ Error Messages

- A calculation involving two lists performs the operation between corresponding cells. Because of this, a Dim ERROR occurs if the two lists do not have the same number of values (which means they have different “dimensions”).
- An Ma ERROR occurs whenever an operation involving any two cells generates a mathematical error.

■ Inputting a List into a Calculation

There are two methods you can use to input a list into a calculation.

● To input a specific list by name

Example To input List 6

1. Press **OPTN** to display the first Operation Menu.
 - This is the function key menu that appears in the **RUN Mode** when you press **OPTN**.

OPTN

LIST MAT CPLX CALC STAT D
F1

2. Press **F1** (LIST) to display the List Data Manipulation Menu.

F1 (LIST)

List L→M Dim Fill Seq D
F1

3. Press **F1** (List) to display the “List” command and input the number of the list you want to specify.

●To directly input a list of values

You can also directly input a list of values using $\{$, $\}$, and \rightarrow .

Example 1 To input the list: 56, 82, 64

$\text{SHIFT} \{ 56 \rightarrow 82 \rightarrow 64 \text{SHIFT} \}$

$\{56, 82, 64\}_-$

Example 2 To multiply List 3 $\left(= \begin{bmatrix} 41 \\ 65 \\ 22 \end{bmatrix} \right)$ by the list $\begin{bmatrix} 6 \\ 0 \\ 4 \end{bmatrix}$

$\text{OPTN} \text{F1}(\text{LIST}) \text{F1}(\text{List}) 3 \times \text{SHIFT} \{ 6 \rightarrow 0 \rightarrow 4 \text{SHIFT} \} \text{EXE}$

The resulting list $\begin{bmatrix} 246 \\ 0 \\ 88 \end{bmatrix}$ is stored in ListAns Memory.

●To assign the contents of one list to another list

Use \rightarrow to assign the contents of one list to another list.

Example 1 To assign the contents of List 3 to List 1

$\text{OPTN} \text{F1}(\text{LIST}) \text{F1}(\text{List}) 3 \rightarrow \text{F1}(\text{List}) 1 \text{EXE}$

In place of $\text{F1}(\text{List}) 3$ operation in the above procedure, you could input $\text{SHIFT} \{ 4 \rightarrow 6 \rightarrow 5 \rightarrow 2 \rightarrow 2 \text{SHIFT} \}$.

Example 2 To assign the list in ListAns Memory to List 1

$\text{OPTN} \text{F1}(\text{LIST}) \text{F1}(\text{List}) \text{SHIFT Ans} \rightarrow \text{F1}(\text{List}) 1 \text{EXE}$

●To input a single list cell value into a calculation

You can extract the value in a specific cell of a list and use it in a calculation. Specify the cell number by enclosing it between square brackets using the [] and [] keys.

Example To calculate the sine of the value stored in Cell 3 of List 2

$\text{sin} \text{OPTN} \text{F1}(\text{LIST}) \text{F1}(\text{List}) 2 \text{SHIFT} \text{[]} 3 \text{SHIFT} \text{[]} \text{EXE}$

●To input a value into a specific cell

You can input a value into a specific cell inside a list. When you do, the value that was previously stored in the cell is replaced with the new value you input.

Example To input the value 25 into cell 2 of List 3

[2] [5] [→] [OPTN] [F1] (LIST) [F1] (List) [3] [SHIFT] [1] [2] [SHIFT] [1] [EXE]

■ Recalling List Contents

Example To recall the contents of List 1

[OPTN] [F1] (LIST) [F1] (List) [1] [EXE]

- The above operation displays the contents of the list you specify and also stores them in ListAns Memory. You can then use the ListAns Memory contents in a calculation.

●To use list contents in ListAns Memory in a calculation

Example To multiply the list contents in ListAns Memory by 36

[OPTN] [F1] (LIST) [F1] (List) [SHIFT] [Ans] [X] [3] [6] [EXE]

- The operation [OPTN] [F1] (LIST) [F1] (List) [SHIFT] [Ans] recalls ListAns Memory contents.
- This operation replaces current ListAns Memory contents with the result of the above calculation.

■ Graphing a Function Using a List

When using the graphing functions of this calculator, you can input a function such as $Y1 = \text{List1} \times X$. If List 1 contains the values 1, 2, 3, this function will produce three graphs: $Y = X$, $Y = 2X$, $Y = 3X$.

There are certain limitations on using lists with graphing functions.

■ Inputting Scientific Calculations into a List

You can use the numeric table generation functions in the Table & Graph Menu to input values that result from certain scientific function calculations into a list. To do this, first generate a table and then use the list copy function to copy the values from the table to the list.



P.126



P.248

■ Performing Scientific Function Calculations Using a List

Lists can be used just as numeric values are in scientific function calculations. When the calculation produces a list as a result, the list is stored in ListAns Memory.

Example 1 To use List 3 $\begin{bmatrix} 41 \\ 65 \\ 22 \end{bmatrix}$ to perform $\sin(\text{List } 3)$

Use radians as the angle unit.

$\boxed{\sin} \boxed{\text{OPTN}} \boxed{\text{F1}} (\text{LIST}) \boxed{\text{F1}} (\text{List}) \boxed{3} \boxed{\text{EXE}}$

The resulting list $\begin{bmatrix} -0.158 \\ 0.8268 \\ -8\text{E}-3 \end{bmatrix}$ is stored in ListAns Memory.

In place of the $\boxed{\text{F1}} (\text{List}) \boxed{3}$ operation in the above procedure, you could input $\boxed{\text{SHIFT}} \boxed{\{ \} } \boxed{4} \boxed{1} \boxed{\rightarrow} \boxed{6} \boxed{5} \boxed{\rightarrow} \boxed{2} \boxed{2} \boxed{\text{SHIFT}} \boxed{\} }.$

Example 2 To use List 1 $\begin{bmatrix} 1 \\ 2 \\ 3 \end{bmatrix}$ and List 2 $\begin{bmatrix} 4 \\ 5 \\ 6 \end{bmatrix}$ to perform $\text{List } 1^{\text{List } 2}$

$\text{List1} \boxed{\wedge} \text{List2} \boxed{\text{EXE}}$

This creates a list with the results of $1^4, 2^5, 3^6$.

The resulting list $\begin{bmatrix} 1 \\ 32 \\ 729 \end{bmatrix}$ is stored in ListAns Memory.

17-5 Switching Between List Files

You can store up to six lists (List 1 to List 6) in each file (File 1 to File 6). A simple operation lets you switch between list files.

●**To switch between list files**

In the Main Menu, select the **LIST** icon and enter the LIST Mode.

Press **SHIFT** **SETUP** to display the LIST Mode set up screen.

SHIFT **SETUP**



Press the function key (**F1** to **F6**) to select the file you want.

Example To select File 3

F3(File3)



EXIT

All subsequent list operations are applied to the lists contained in the file you select (List File3 in the above example).