

Congratulations upon your selection of this CASIO watch.

Important!

- If you are going to a location where Internet access is not available, download the Operation Guide PDF from the website below to a device that you will be taking along with you.

Note that CASIO COMPUTER CO., LTD. assumes no responsibility for any damage or loss suffered by you or any third party arising through the use of your watch or its malfunction.

For details about how to use this watch and for troubleshooting information, go to the website below.

<https://world.casio.com/manual/wat/>



E-1

Important!

- Keep the watch's face exposed to light as much as possible (page E-4).
- This manual provides a brief overview of your watch.

Important Altimeter and Compass Information!

- The Altimeter Mode displays relative altitude based on barometric pressure readings. Readings taken at different times at the same location may produce different values due to changes in pressure. The value displayed by the watch may be different from the actual elevation and/or sea level elevation of your location.
- When using the Altimeter Mode for mountain climbing or other activities, it is highly recommended that you check a map, local altitude indications, or some other source for your current correct altitude, and that you regularly calibrate the Altimeter Mode.
- When using the watch compass for serious trekking or climbing always take along another compass to confirm readings. If watch readings are different from the other compass, perform bidirectional calibration of the watch compass.
- Direction readings and calibration will not be possible if the watch is near a permanent magnet (magnetic accessory, etc.), metal objects, high-voltage wires, aerial wires, or electrical appliances (TV, computer, cellphone, etc.)
- Calibration: Operation Guide available at the CASIO website.

WAVE CEPTOR Important!

Before using the watch for the first time, use the steps below for signal reception, which sets the current time. See the Operation Guide available at the CASIO website for details.

1. Specify your Home City code (time zone where you normally use the watch).
2. Perform manual signal receive.

E-2

Contents

- Charging the Watch E-4
- Using the Watch E-6
 - Navigating Between the Timekeeping, Compass, Barometer/Thermometer and Altimeter Modes ... E-6
 - Navigating to Other Modes..... E-8
- Configuring Current Time and Date Settings Automatically..... E-10
 - Cities where Time Calibration Signal Reception is Supported E-11
 - Auto Receive E-11
- Changing the Current Time and Date Settings Manually E-12
- Mode Settings..... E-14
- Specifications E-15

E-3

Charging the Watch

Remove the watch from your wrist and place it in a brightly lit area.

- The watch may become hot when exposed to light for charging. Take care to avoid burn injury.
- Avoid charging in locations where it is very hot.

Power Saving

- Leaving the watch in a dark locations for about one hour between the hours of 10 p.m. and 6 a.m. will cause **PS** to flash on the display. All functions will continue operation.
- Leaving the watch in a dark location for about one week will cause **PS** to remain on the display without flashing. Only the timekeeping function will continue operation.

Battery Alerts



When battery power goes low, a warning message (**LOW** or **CHG**) appears on the display and certain functions become disabled. When a warning message appears, charge the watch as soon as possible.

E-4

Using the Watch

Navigating Between the Timekeeping, Compass, Barometer/Thermometer and Altimeter Modes


- To return directly to the Timekeeping Mode from any other mode, hold down **(D)** for at least two seconds.
- To enter the Compass, Barometer/Thermometer or Altimeter Mode from any mode not shown in the diagram below, first return to the Timekeeping Mode.

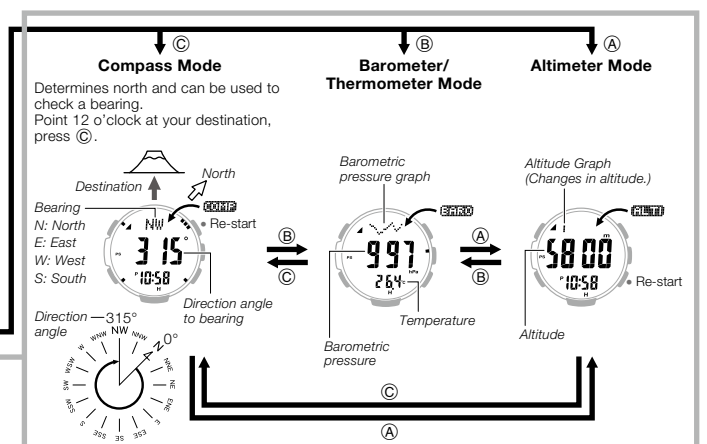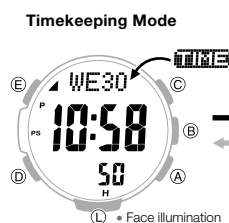

E-6

E-7

Navigating to Other Modes

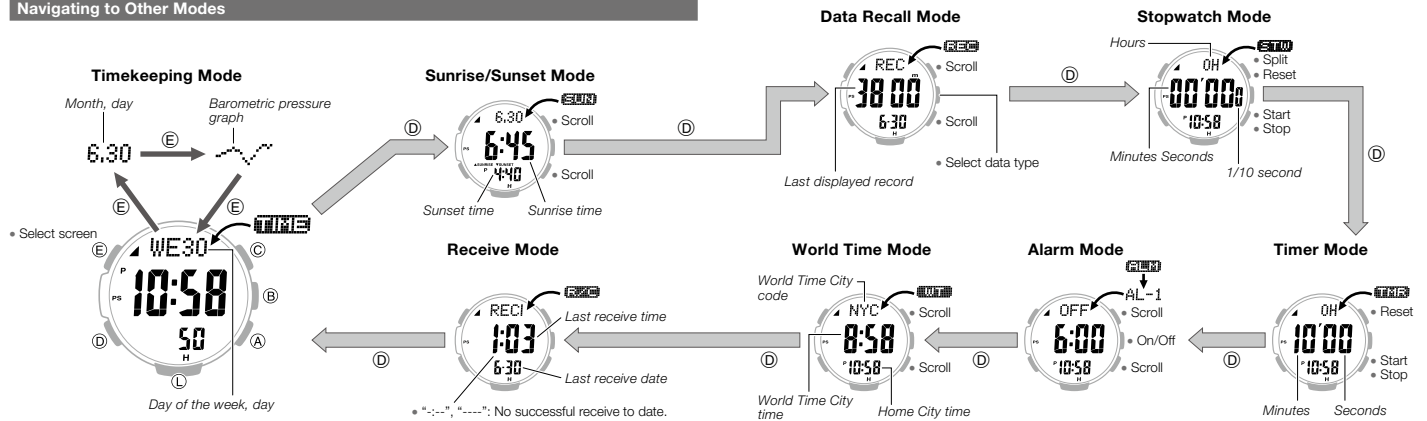

E-8

E-9

Configuring Current Time and Date Settings Automatically

- Date and time settings are kept accurate using information provided by a time calibration signal.
- Time calibration signals can be received using Auto Receive (page E-11) or Manual Receive. Normally, you should set up the watch for Auto Receive of the current time and date.
 - If you are in an area where a time calibration signal cannot be received, you need to adjust time and date settings manually (page E-12).
 - For information about manual receive and time calibration signal reception ranges, refer to the Operation Guide available at the CASIO website.

Important!

- For the watch to be able to receive a time calibration signal, its Home City setting must be one where time calibration signal reception is normally supported (pages E-11 and E-14).

Cities where Time Calibration Signal Reception is Supported

- TOKYO (TYO): Japan
 HONG KONG (HKG): China
 NEW YORK (NYC), CHICAGO (CHI), DENVER (DEN), LOS ANGELES (LAX), ANCHORAGE (ANC)*, HONOLULU (HNL)*: United States
 LONDON (LON), PARIS (PAR), ATHENS (ATH): United Kingdom, Germany
 * The areas covered by **ANCHORAGE (ANC)** and **HONOLULU (HNL)** are quite far from the calibration signal transmitters, so certain conditions may cause reception problems.

Auto Receive

Important!


- Perform the signal receive operation in the Timekeeping Mode. See "Using the Watch" (page E-6).
- Leave the watch near a window between midnight and 5:00 a.m.
 - When the receive operation is successful, the time and date settings will be adjusted automatically.
 - If you are unable to receive a signal, check the Operation Guide available at the CASIO website to ensure the watch is in a suitable location.

E-10

E-11

Changing the Current Time and Date Settings Manually

1. In the Timekeeping Mode, hold down (E) for at least two seconds. Keep (E) depressed until the city code and city name starts to scroll.
2. Press (D) to move the flashing in the sequence shown below to select the other settings.



3. When the timekeeping setting you want to change is flashing, use (A) and/or (C) to change it as described below.

Screen	To do this:	Do this:
TYO	Change the city code	Use (A) (East) and (C) (West).
AUTO	Cycle between Auto DST (AUTO), Daylight Saving Time (ON) and Standard Time (OFF).	Press (A).
12H	Toggle between 12-hour (12H) and 24-hour (24H) timekeeping.	Press (A).
50	Reset the seconds to 00 (if the current seconds count is between 30 and 59, one is added to the minute count).	Press (A).

E-12

E-13

Mode Settings

For full details about timer, alarm, World Time City summer time, and other settings, and about calibrating measurements (direction, altitude, barometric pressure, temperature), refer to the Operation Guide available at the CASIO website.

Specifications

- Accuracy at normal temperature:** ±15 seconds a month (with no signal calibration)
- Timekeeping:** Hour, minutes, seconds, p.m. (P), year, month, day, day of the week
 Time format: 12-hour and 24-hour
 Calendar system: Full Auto-calendar pre-programmed from the year 2000 to 2099
 Other: Three display formats (day of the week/day screen, month/day screen, barometric pressure graph screen); Home City code (can be assigned one of 48 city codes); Standard Time / Daylight Saving Time (summer time)
 Year display on setting screen only.
- Time Calibration Signal Reception:** Auto receive 6 times a day (5 times a day for the Chinese calibration signal); Remaining auto receives cancelled as soon as one is successful; Manual receive; Receive Mode
 Receivable Time Calibration Signals: Mainflingen, Germany (Call Sign: DCF77, Frequency: 77.5 kHz); Anthon, England (Call Sign: MSF, Frequency: 60.0 kHz); Fort Collins, Colorado, the United States (Call Sign: WWVB, Frequency: 60.0 kHz); Fukushima, Japan (Call Sign: JJY, Frequency: 40.0 kHz); Fukuoka/Saga, Japan (Call Sign: JJY, Frequency: 60.0 kHz); Shangqiu City, Henan Province, China (Call Sign: BPC, Frequency: 68.5 kHz)
- Digital Compass:** 60 seconds continuous reading; 16 directions; Angle value 0° to 359°; Four direction pointers; Calibration (bidirectional); Magnetic declination correction; Bearing Memory

E-14

E-15

Barometer:

Measurement and display range:
 260 to 1,100 hPa (or 7.65 to 32.45 inHg)
 Display unit: 1 hPa (or 0.05 inHg)
 Reading timing: Daily from midnight, at two hour intervals (12 times per day); Every five seconds in the Barometer/Thermometer Mode
 Other: Calibration; Manual reading (button operation); Barometric pressure graph; Barometric pressure differential pointer; Barometric pressure change indicator

Thermometer:

Measurement and display range: -10.0 to 60.0°C (or 14.0 to 140.0°F)
 Display unit: 0.1°C (or 0.2°F)
 Reading timing: Every five seconds in the Barometer/Thermometer Mode
 Other: Calibration; Manual reading (button operation)

Altimeter:

Measurement range: -700 to 10,000 m (or -2,300 to 32,800 ft.) without reference altitude
 Display range: -10,000 to 10,000 m (or -32,800 to 32,800 ft.)
Negative values can be caused by readings produced based on a reference altitude or due to atmospheric conditions.
 Display unit: 1 m (or 5 ft.)
 Current Altitude Data: Every second for the first 3 minutes, followed by every 5 seconds for approximately 1 hour (0'05); every second for the first 3 minutes, followed by every 2 minutes for approximately 12 hours (2'00)

Altitude Memory Data:

Manually saved records: 30 (altitude, date, time)
 Auto saved values: One set of high altitude and its reading date and time, low altitude and its reading date and time, total ascent and its save start date and time, total descent and its save start date and time
 Trek log data: High altitude, low altitude, cumulative ascent, cumulative descent for up to 14 treks
 Other: Reference altitude setting; Altitude differential; Altitude auto measurement interval (0'05 or 2'00)

Bearing Sensor Precision:

Direction: Within ±10°
Values are guaranteed for a temperature range of -10°C to 60°C (14°F to 140°F).
 North pointer: Within ±2 digital segments

Pressure Sensor Precision:

Measurement accuracy: Within ±3 hPa (0.1 inHg) (Altimeter accuracy: Within ±75m (246 ft.))
 • Values are guaranteed for a temperature range of -10°C to 40°C (14°F to 104°F).
 • Precision is lessened by strong impact to either the watch or the sensor, and by temperature extremes.

Temperature Sensor Precision:

±2°C (±3.6°F) in range of -10°C to 60°C (14.0°F to 140.0°F)

Sunrise/sunset:

Sunrise/sunset time display; selectable date

E-16

E-17

Stopwatch:

Measuring unit: 1/10 second
 Measuring capacity: 999:59' 59.9"
 Measuring accuracy: ±0.0006%
 Measuring modes: Elapsed time, split time, two finishes

Countdown Timer:

Measuring unit: 1 second
 Countdown range: 24 hours
 Setting unit: 1 minute

Alarms:

5 Daily alarms (with one snooze alarm); Hourly time signal

World Time:

48 cities (31 time zones)
 Other: Daylight Saving Time/Standard Time

Illumination:

LED light; Selectable illumination duration (approximately 1.5 seconds or 3 seconds); Auto Light Switch (Full Auto Light operates only in the dark)

Other:

Battery power indicator; Power Saving; Low-temperature resistance (-10°C/14°F); Button operation tone on/off

Power Supply:

Solar panel and one rechargeable battery
 Approximate battery operating time: 7 months (from full charge to Level 4) under the following conditions:

- Light: 1.5 seconds/day
- Beeper: 10 seconds/day
- Direction readings: 20 times/month
- Climbs: Once (approximately 1 hour of altitude readings)/month
- Barometric pressure change indicator readings: Approximately 24 hours/month
- Barometric pressure graph: Readings every 2 hours
- Time calibration receive: 4 minutes/day
- Display: 18 hours/day

Frequent use of illumination runs down the battery. Particular care is required when using the auto light switch.

E-18

E-19

City Code Table

City Code	City	UTC Offset/ GMT Differential	City Code	City	UTC Offset/ GMT Differential
PPG	Pago Pago	-11	UTC		
HNL	Honolulu	-10	LIS	Lisbon	0
ANC	Anchorage	-9	LON	London	
YVR	Vancouver		MAD	Madrid	
LAX	Los Angeles	-8	PAR	Paris	
YEA	Edmonton		ROM	Rome	+1
DEN	Denver	-7	BER	Berlin	
MEX	Mexico City		STO	Stockholm	
CHI	Chicago	-6	ATH	Athens	
NYC	New York	-5	CAI	Cairo	+2
SCL	Santiago		JRS	Jerusalem	
YHZ	Halifax	-4	MOW	Moscow	+3
YYT	St. Johns	-3.5	JED	Jeddah	
RIO	Rio De Janeiro	-3	THR	Tehran	+3.5
FEN	Fernando de Noronha	-2	DXB	Dubai	+4
RAI	Praia	-1	KBL	Kabul	+4.5
			KHI	Karachi	+5

L-1

City Code	City	UTC Offset/ GMT Differential
DEL	Delhi	+5.5
KTM	Kathmandu	+5.75
DAC	Dhaka	+6
RGN	Yangon	+6.5
BKK	Bangkok	+7
SIN	Singapore	
HKG	Hong Kong	+8
BJS	Beijing	
TPE	Taipei	
SEL	Seoul	+9
TYO	Tokyo	
ADL	Adelaide	+9.5
GUM	Guam	
SYD	Sydney	+10
NOU	Noumea	+11
WLG	Wellington	+12

Note

- Based on data as of July 2019.
- If the city or area you want is not included in the above table, set the Home City to a city code that is in the same time zone as the location you want to select.
- For details about the Home City, World Time City and summer time settings, refer the Operation Guide available at the CASIO website.

L-2